



# Olink<sup>®</sup> Explore 3072

## User Manual

---

# Table of contents

## Part 1: Olink® Explore 3072 overview

1. Introduction .....	6
1.1 Intended use .....	6
1.2 About this manual .....	6
2. Olink® Explore 3072 Reagent Kit contents .....	7
2.1 Content of Olink® Explore Sample Prep Reagents .....	7
2.2 Content of Olink® Explore 3072 Reagent Kit (384 samples) .....	8
3. Associated documentation .....	10
4. Technical support .....	10

## Part 2: Laboratory instructions for 96 samples using Formulatrix F.A.S.T.™

5. Preparations .....	11
5.1 Plan the study .....	11
5.2 Important information .....	12
5.3 Prepare the samples .....	13
6. Prepare Sample Source Plate .....	14
7. Sample Dilution .....	16
7.1 Prepare Sample Dilution Plate .....	16
7.2 Perform Sample Dilution .....	18
8. Incubation .....	20
8.1 Prepare Reagent Source Plate .....	20
8.2 Prepare Incubation Plates and perform incubation .....	23
9. Prepare for day 2 .....	26
10. Extension and pre-amplification (PCR1) .....	27
10.1 Prepare PCR1 Mix .....	27
10.2 Prepare PCR1 Plates and perform PCR1 .....	29
11. Pool PCR1 products .....	32
12. Amplification and sample indexing (PCR2) .....	34
12.1 Prepare PCR2 Mix .....	34
12.2 Prepare PCR2 Plate and perform PCR2 .....	35
13. Pool PCR2 products .....	38
14. Library purification .....	40
15. Quality control .....	43
16. Next generation sequencing .....	44

---

# Part 3: Laboratory instructions for 96 samples using Formulatrix F.A.S.T.™ and Hamilton Microlab® STAR

17.Preparations .....	45
17.1 Plan the study .....	45
17.2 Important information.....	46
17.3 Prepare the samples.....	47
18.Prepare Sample Source Plate .....	48
19.Sample Dilution .....	50
19.1 Prepare Sample Dilution Plate .....	50
19.2 Perform Sample Dilution.....	52
20.Incubation.....	54
20.1 Prepare Reagent Source Plate .....	54
20.2 Prepare Incubation Plates and perform incubation.....	56
21.Prepare for day 2.....	60
22.Extension and pre-amplification (PCR1) .....	61
22.1 Prepare PCR1 Mix .....	61
22.2 Prepare PCR1 Plates and perform PCR1.....	63
23.Pool PCR1 products.....	66
24.Amplification and sample indexing (PCR2) .....	68
24.1 Prepare PCR2 Mix.....	68
24.2 Prepare PCR2 Plate and perform PCR2 .....	70
25.Pool PCR2 products .....	72
26.Library purification.....	74
27.Quality control.....	76
28.Next generation sequencing.....	77

---

# Part 4: Laboratory instructions for 96 samples using SPT Labtech Mosquito<sup>®</sup> and Hamilton Microlab<sup>®</sup> STAR

29.Preparations .....	78
29.1 Plan the study .....	78
29.2 Important information.....	79
29.3 Prepare the samples.....	80
30.Prepare Sample Source Plate .....	81
31.Sample Dilution .....	83
31.1 Prepare Sample Dilution Plate .....	83
31.2 Perform Sample Dilution.....	85
32.Incubation.....	88
32.1 Prepare Reagent Source Plate .....	88
32.2 Prepare Incubation Plates and perform incubation.....	91
33.Prepare for day 2.....	95
34.Extension and pre-amplification (PCR1).....	96
34.1 Prepare PCR1 Plates and perform PCR1.....	98
35.Pool PCR1 products.....	101
36.Amplification and sample indexing (PCR2) .....	103
36.1 Prepare PCR2 Mix.....	103
36.2 Prepare PCR2 Plate and perform PCR2 .....	105
37.Pool PCR2 products.....	107
38.Library purification .....	109
39.Quality control .....	111
40.Next generation sequencing .....	112

---

# Part 5: Laboratory instructions for 96 samples using SPT Labtech Mosquito<sup>®</sup> and Eppendorf epMotion<sup>®</sup>

41. Preparations .....	113
41.1 Plan the study .....	113
41.2 Important information.....	114
41.3 Prepare the samples.....	115
42. Prepare Sample Source Plate .....	116
43. Sample Dilution.....	118
43.1 Prepare Sample Dilution Plate .....	118
43.2 Perform Sample Dilution.....	120
44. Incubation .....	123
44.1 Prepare Incubation Plates and perform incubation.....	126
45. Prepare for day 2 .....	129
46. Extension and pre-amplification (PCR1) .....	130
46.1 Prepare PCR1 Mix .....	130
46.2 Prepare PCR1 Plates and perform PCR1.....	132
47. Pool PCR1 products.....	135
48. Amplification and sample indexing.....	137
48.1 Prepare PCR2 Mix.....	137
48.2 Prepare PCR2 Plate and perform PCR2 .....	138
49. Pool PCR2 products.....	140
50. Library purification.....	142
51. Quality control.....	145
52. Next generation sequencing.....	146

# Part 6: Laboratory instructions for 384 samples

53. Short instructions .....	147
53.1 Preparations.....	147
53.2 Prepare Sample Source Plate.....	147
53.3 Sample Dilution .....	147
53.4 Incubation .....	147
53.5 Preparation of reagents for day 2 .....	147
53.6 Extension and pre-amplification (PCR1).....	148
53.7 Pool PCR1 products .....	148
53.8 Amplification and sample indexing (PCR2) .....	148
53.9 Pool PCR2 products .....	148
53.10 Library purification .....	148
53.11 Quality control.....	148
53.12 Pool Libraries with different indices .....	149
53.13 Next generation sequencing .....	149
54. Revision history .....	150

# Part 1: Olink® Explore 3072 overview

## 1. Introduction

Olink® Explore is a multiplex immunoassay platform for human protein biomarker discovery, based on Olink's proprietary PEA™ technology. The product is intended for Research Use Only, and not for use in diagnostic procedures. The laboratory work shall only be run by trained laboratory staff. Data processing shall only be performed by trained staff. The results are meant to be used by researchers in conjunction with other clinical or laboratory findings.

### 1.1 Intended use

Olink® Explore is a multiplex immunoassay platform for human protein biomarker discovery. The product is intended for Research Use Only, and not for use in diagnostic procedures. The laboratory work shall only be run by trained laboratory staff. Data processing shall only be performed by trained staff. The results are meant to be used by researchers in conjunction with other clinical or laboratory findings.

### 1.2 About this manual

This manual provides the instructions needed to run:

- Olink® Explore 3072 Reagent Kits, according to [Part 2–Part 5](#).
- Olink® Explore 3072 Reagent Kit (384 samples), according to [Part 6: Laboratory instructions for 384 samples](#).

For optimal results, the instructions must be strictly and explicitly followed. Any deviations throughout the laboratory steps may result in impaired data.

Prior to starting the laboratory workflow, consult the Olink® Explore Overview User Manual for an introduction to the Explore platform, including information about equipment and documentation needed, an overview of the workflow, as well as laboratory guidelines.

For instructions on how to prepare and sequence Olink libraries using Illumina® NextSeq™ 550, NextSeq™ 2000, NovaSeq™ 6000 or NovaSeq™ X Plus, refer to the applicable Olink® Explore Sequencing User Manual.

For data processing and analysis of the Olink Explore sequence results, refer to the software manuals for the both Olink NPX Explore softwares and CLI listed in [3. Associated documentation](#).

All trademarks and copyrights contained in this material are the property of Olink Proteomics AB, unless otherwise stated.

# 2. Olink® Explore 3072 Reagent Kit contents

Olink® Explore 3072 Reagent Kit consists of a set combination of eight Olink Explore 384 panels described in the table below. It contains reagents for up to 90 user samples and 6 Olink controls, and is intended for the preparation of eight panel libraries on two separate occasions (four panels at a time).

Art. No	Products included	Components included	Cap color	Storage
97500	Olink® Explore 384 Inflammation Probe Kit	<b>Each 384 Probe Kit contains:</b> Olink® Explore 384 [Panel] Frw probes A Olink® Explore 384 [Panel] Rev probes A Olink® Explore 384 [Panel] Frw probes B Olink® Explore 384 [Panel] Rev probes B Olink® Explore 384 [Panel] Frw probes C Olink® Explore 384 [Panel] Rev probes C Olink® Explore 384 [Panel] Frw probes D Olink® Explore 384 [Panel] Rev probes D		+4 °C
97600	Olink® Explore 384 Oncology Probe Kit		White	
97700	Olink® Explore 384 Cardiometabolic Probe Kit		White	
97800	Olink® Explore 384 Neurology Probe Kit		Purple	
97510	Olink® Explore 384 Inflammation II Probe Kit		Purple	
97610	Olink® Explore 384 Oncology II Probe Kit		Blue	
97710	Olink® Explore 384 Cardiometabolic II Probe Kit		Blue	
97810	Olink® Explore 384 Neurology II Probe Kit		Black	
97041	Olink® Explore Sample Prep 1.0 (x2)	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 1	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent (x2)	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2 (x2)	Olink® Explore Incubation Solution Olink® Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control (x2)	Olink® Explore Plate Control	Green	-80 °C

## 2.1 Content of Olink® Explore Sample Prep Reagents

If the eight libraries are prepared on more than two occasions, additional Olink® Explore Sample Prep Reagents will be required (see table below). One Olink® Explore Sample Prep Reagents is needed for each additional library preparation run.

Art. No	Products included	Components included	Cap color	Storage
97041	Olink® Explore Sample Prep 1.0	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 1	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2	Olink® Explore Incubation Solution Olink® Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control	Olink® Explore Plate Control	Green	-80 °C

## 2.2 Content of Olink® Explore 3072 Reagent Kit (384 samples)

Olink® Explore 3072 Reagent Kits (384 samples) consist of a set combination of eight Olink® Explore 384 panels described in the table below. Each Reagent Kit contains reagents for up to 360 user samples and 24 Olink controls, and is intended for the preparation of 32 panels libraries in eight separate occasions (four panels at a time for each of the four Sample Plates).

Art. No	Products included	Components included	Cap color	Storage
97500	Olink® Explore 384 Inflammation Probe Kit (x4)	<b>Each 384 Probe Kit contains:</b> Olink® Explore 384 [Panel] Frw probes A Olink® Explore 384 [Panel] Rev probes A Olink® Explore 384 [Panel] Frw probes B Olink® Explore 384 [Panel] Rev probes B Olink® Explore 384 [Panel] Frw probes C Olink® Explore 384 [Panel] Rev probes C Olink® Explore 384 [Panel] Frw probes D Olink® Explore 384 [Panel] Rev probes D		+4 °C
97600	Olink® Explore 384 Oncology Probe Kit (x4)		White	
97700	Olink® Explore 384 Cardiometabolic Probe Kit (x4)		White	
97800	Olink® Explore 384 Neurology Probe Kit (x4)		Purple	
97510	Olink® Explore 384 Inflammation II Probe Kit (x4)		Purple	
97610	Olink® Explore 384 Oncology II Probe Kit (x4)		Blue	
97710	Olink® Explore 384 Cardiometabolic II Probe Kit (x4)		Blue	
97810	Olink® Explore 384 Neurology II Probe Kit (x4)		Black	
97041	Olink® Explore Sample Prep 1.0 (x2)	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 1	Red Transparent Black White Yellow –	-20 °C
97011	Olink® Explore Sample Prep 1.1 (x2)	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 2	Red Transparent Black White Yellow –	-20 °C
97021	Olink® Explore Sample Prep 1.2 (x2)	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 3	Red Transparent Black White Yellow –	-20 °C
97031	Olink® Explore Sample Prep 1.3 (x2)	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 4	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent (x8)	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2 (x8)	Olink® Explore Incubation Solution Olink® Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control (x8)	Olink® Explore Plate Control	Green	-80 °C



If the 32 panel libraries are prepared on more than eight occasions, additional Olink® Explore Sample Prep Reagents (384 samples) will be required. One Olink® Explore Sample Prep Reagents is needed for each additional library preparation run. The Olink® Explore Sample Prep Reagents to be used depends on the indices to be combined in the same sequencing run (from Index Plate 1, 2, 3 or 4).

### 2.2.1 Content of Olink® Explore Sample Prep Reagents 1.0 (384 samples)

Art. No	Products included	Components included	Cap color	Storage
97041	Olink® Explore Sample Prep 1.0	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 1	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2	Explore Incubation Solution Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control	Explore 384 Plate Control	Green	-80 °C

### 2.2.2 Content of Olink® Explore Sample Prep Reagents 1.1 (384 samples)

Art. No	Products included	Components included	Cap color	Storage
97011	Olink® Explore Sample Prep 1.1	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 2	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2	Explore Incubation Solution Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control	Explore 384 Plate Control	Green	-80 °C

### 2.2.3 Content of Olink® Explore Sample Prep Reagents 1.3 (384 samples)

Art. No	Products included	Components included	Cap color	Storage
97021	Olink® Explore Sample Prep 1.2	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 3	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2	Explore Incubation Solution Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control	Explore 384 Plate Control	Green	-80 °C

## 2.2.4 Content of Olink® Explore Sample Prep Reagents 1.3 (384 samples)

Art. No	Products included	Components included	Cap color	Storage
97031	Olink® Explore Sample Prep 1.3	Olink® Explore Negative Control Olink® Explore PCR 1 Solution (x2) Olink® Explore PCR 1 Enzyme Olink® Explore PCR 2 Solution Olink® Explore PCR 2 Enzyme Olink® Explore Index Plate 4	Red Transparent Black White Yellow –	-20 °C
97004	Olink® Target96/Explore Sample Diluent	Olink® Target96/Explore Sample Diluent	Transparent	-20 °C
97003	Olink® Explore Sample Prep 2	Explore Incubation Solution Explore PCR 1 Enhancer (x2)	Brown Black	+4 °C
97002	Olink® Explore Plate Control	Explore 384 Plate Control	Green	-80 °C

## 3. Associated documentation

- Olink® Explore Overview User Manual
- Olink® Explore Sequencing using NextSeq 550 User Manual
- Olink® Explore Sequencing using NextSeq 2000 User Manual
- Olink® Explore Sequencing using NovaSeq 6000 User Manual
- Olink® Explore 384/3072 Sequencing using NovaSeq X Plus User Manual
- Olink® NPX Explore 3072 User Manual
- NPX™ Explore HT & 3072 User Manual
- Olink® Explore CLI Technical Information
- NPX™ Explore CLI HT & 3072 Technical Information

All relevant Olink documentation is available from the Olink website: <https://www.olink.com/downloads>.

## 4. Technical support

For technical support, contact Olink Proteomics at [support@olink.com](mailto:support@olink.com).

# Part 2: Laboratory instructions for 96 samples using Formulatrix F.A.S.T.™

This section provides instructions on how to perform each step of the Olink® Explore 3072 laboratory workflow, using Formulatrix F.A.S.T. The eight panels must be prepared on two separate occasions: four panels during Setup 1 and four panels during Setup 2. The instructions below describe how to perform the workflow for one Setup (four panels) at a time.

The panels CARDIO, INF, NEURO, and ONC are prepared during Setup 1. The panels CARDIO II, INF II, NEURO II, and ONC II are prepared during Setup 2.

Note that each of the two Setups requires preparation of a new Sample Source Plate. The Sample Plate from Setup 1 can however be reused for Setup 2.

If the panels are prepared on more than two occasions, additional Olink® Explore Sample Prep Reagents will be required. Refer to [2.1 Content of Olink® Explore Sample Prep Reagents](#).

## 5. Preparations

### 5.1 Plan the study

A successful study requires careful planning. Perform the following before starting the experiment:

- Decide the number of samples and controls required to get the data that you want from the study.
- Optional Sample Control: It is recommended to include a pooled plasma sample in duplicate on each plate. These samples are used to assess potential variation between runs and plates, for example to calculate inter-assay and intra-assay CV, as well as for troubleshooting. When including the Sample Controls, 88 user samples can be processed simultaneously.
- When running more than one Sample Plate, make sure that the samples are appropriately randomized across all plates and that necessary steps for normalizing and combining data are taken. If you need assistance, consult a statistician or contact Olink Support before running the study.
- Consult the Olink white paper “Strategies for design of protein biomarker studies” ([www.olink.com/whitepapers](http://www.olink.com/whitepapers)) and the sample randomization guidelines ([www.olink.com/faq/sample-randomization](http://www.olink.com/faq/sample-randomization)).



**NOTE:** *Sample randomization helps to ensure that technical variation does not overlap with biological variation.*

## 5.2 Important information

### Panel nomenclature

As the panels differ between Setup 1 and Setup 2, the panel names are not mentioned in this manual. Instead, the panels are referred to as Panel 1–4, according to:

Panel number	Panel name for Setup 1	Panel name for Setup 2
1	CARDIO	CARDIO II
2	INF	INF II
3	NEURO	NEURO II
4	ONC	ONC II

Throughout the instructions, plates and tubes are marked with names and numbers, for example “Incubation Plate 1”. When using the marked plates and tubes, make sure that the number on the plate or tube corresponds to the number of the applicable panel, i.e when running Panel 1, use XX Plate 1, and when running Panel 4, use XX Plate 4.

### Reagent lots

Before starting each step of the workflow, make sure that the lot number of each reagent matches the lot numbers indicated in the Lot Configuration document provided with the kit.

### Vortexing

Correct vortexing is essential to generate reproducible results. Review instructions in the Olink Explore Overview User Manual prior to starting the laboratory workflow.

Plate type	Speed (rpm)	Time (s)
96-wells	2500	30
384-wells	3000	30

### 384-well PCR plates

Make sure to use the twin.tec 384-well skirted PCR plate from Eppendorf (art nr. 0030128508), as stated in the Olink® Explore Overview User Manual. All instrument protocols have been calibrated for this specific plate. Other models should not be used.

## 5.3 Prepare the samples

During this step, samples are manually transferred to the Sample Plate. It is recommended to use the Sample Plate within the same day of preparation to minimize the number of freeze-thaw cycles. The Sample Plate can however be stored at -80 °C and reused for preparation of Setup 2.



**NOTE:** The Olink Explore protocol is optimized and validated for plasma and serum samples. Contact [support@olink.com](mailto:support@olink.com) for more information regarding alternative sample types.

### Prepare bench

- Samples (provided by the user)
- 1x 96-well PCR plate, preferably with full skirt
- Manual pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive Film
- Temperature-resistant labels or marker pen

### Before you start

- Select the samples to be included in the study.



**IMPORTANT:** The samples must be undiluted, as dilution of samples may result in lower detectability.

- Thaw the samples at room temperature if frozen.
- Mark the 96-well Sample Plate with a simple alphanumeric code that you can later identify (“A, B, C”, “1, 2, 3”, or “A1, A2, A3”) using temperature-resistant labels or marker pen. Use unique sample identification names or numbers.

### Instructions

1. Transfer the samples into the Sample Plate. Make sure that samples are added to every applicable well.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1	9	17	25	33	41	49	57	65	73	81	
B	2	10	18	26	34	42	50	58	66	74	82	
C	3	11	19	27	35	43	51	59	67	75	83	
D	4	12	20	28	36	44	52	60	68	76	84	
E	5	13	21	29	37	45	53	61	69	77	85	
F	6	14	22	30	38	46	54	62	70	78	86	
G	7	15	23	31	39	47	55	63	71	79	87	
H	8	16	24	32	40	48	56	64	72	80	88	

2. Seal the Sample Plate using an adhesive film or individual seals.
3. Store the Sample Plate at +4 °C if used the same day, otherwise at -80 °C.




**IMPORTANT:** Avoid subjecting the samples to multiple freeze-thaw cycles.

## 6. Prepare Sample Source Plate

During this step, samples are manually transferred from the prepared Sample Plate into the Sample Source Plate, and controls are added to the Sample Source Plate. The Sample Source Plate must be used within the same day of preparation.

 **IMPORTANT:** Note that each of the two Setups require the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

 **IMPORTANT:** Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.

### Prepare bench

- Sample Plate, prepared in previous step
- Olink® Explore Negative Control
- Olink® Explore Plate Control
- Sample Control (optional, provided by the user)
- 1x 384-well PCR plate (skirted)
- Manual pipette (0.5–10 µL)
- Manual multichannel pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Ensure that the Sample Plate has been prepared according to section [5.3 Prepare the samples](#).
- If frozen, thaw the Sample Plate at room temperature.
- Thaw the Negative Control, Plate Control and recommended Sample Control at room temperature.
- Mark the 384-well PCR plate: "Sample Source Plate".

### Instructions

- Using the MixMate or manual vortexing, vortex the 96-well Sample Plate and spin at 400–1000 x g for 1 minute at room temperature.
- Using a multichannel pipette, transfer 10 µL of each sample into the 384-well Sample Source Plate according to the plate layout shown in the figure below. Use **forward pipetting**, change pipette tips between every column, and make sure that no air bubbles are trapped at the bottom of the wells.
- Vortex the Negative Control, Plate Control and Sample Control and spin briefly.
- Using a single-channel pipette, transfer 10 µL of Negative Control (NC), Plate Control (PC) and Sample Control (SC) to each of the applicable wells in column 23 of the 384-well Sample Source Plate according to the plate layout shown in the figure below. Change pipette tip between every control sample.
- Seal the Sample Source Plate with a new adhesive film.

 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

- Spin the Sample Source Plate at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells. Store the plate at +4 °C until use (the same day).
- Seal the Sample Plate with a new adhesive film. Store at -80 °C.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1		9		17		25		33		41		49		57		65		73		81		SC	
B																								
C	2		10		18		26		34		42		50		58		66		74		82		SC	
D																								
E	3		11		19		27		35		43		51		59		67		75		83		NC	
F																								
G	4		12		20		28		36		44		52		60		68		76		84		NC	
H																								
I	5		13		21		29		37		45		53		61		69		77		85		NC	
J																								
K	6		14		22		30		38		46		54		62		70		78		86		PC	
L																								
M	7		15		23		31		39		47		55		63		71		79		87		PC	
N																								
O	8		16		24		32		40		48		56		64		72		80		88		PC	
P																								

# 7. Sample Dilution

During this step, Sample Diluent is dispensed into the Sample Dilution Plate using the Dragonfly and the samples are diluted using the F.A.S.T. The prepared Sample Dilution Plate must be used within one hour from preparation.

## 7.1 Prepare Sample Dilution Plate

During this step, Sample Diluent is dispensed into Sample Dilution Plate using the Dragonfly.

### Prepare bench

- Olink® Target 96/Explore Sample Diluent
- 1x 384-well PCR plate (skirted)
- 1x Disposable reservoir (10 mL)
- 1x Disposable ultra-low retention syringe with plunger
- Manual pipette (100–1000 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Thaw the Sample Diluent at room temperature
- Mark the new 384-well PCR plate: “Sample Dilution Plate”.



**NOTE:** For convenience, the Sample Diluent can be thawed at +4 °C overnight.




## Instructions

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink Sample Dilution Plate v4.
  - Attach one syringe in position B2.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.


2. Slide the reservoir tray to the filling position (A) and place a new reservoir in position B2 (B).

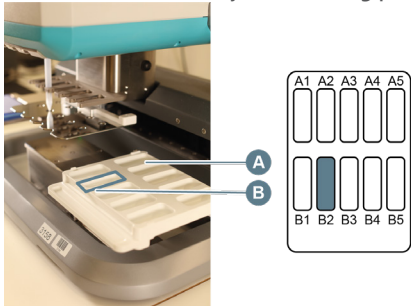

3. Vortex the Sample Diluent briefly, add 6 mL of Sample Diluent into the reservoir and carefully slide the reservoir tray back to the aspirate position.
4. Place the Sample Dilution Plate in the plate position to the left, with well A1 in the top left corner.
5. Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol.

### Result:

*Dragonfly dispenses 9 µL Sample Diluent into each well of quadrant 1–3 and 29 µL in quadrant 4 of the Sample Dilution Plate. Filled wells turn purple in the plate map. The run stops automatically when the Dragonfly has dispensed Sample Diluent into all applicable wells.*

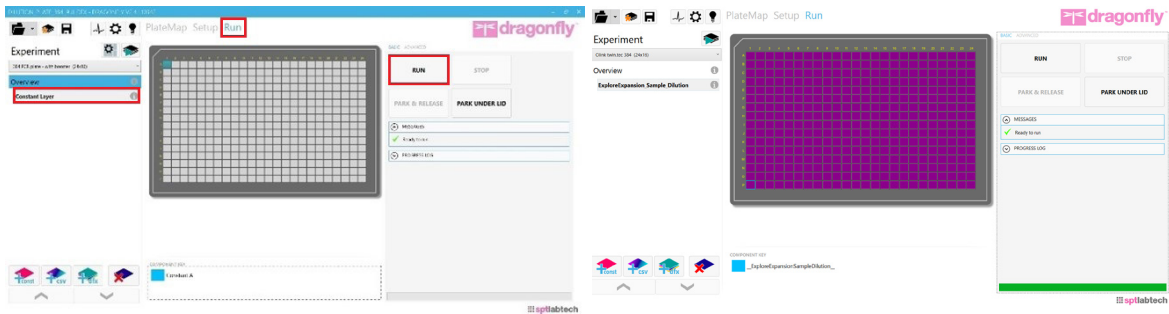

6. When the Dragonfly has returned the Sample Dilution Plate to the plate position and released the plate clamp, remove the Sample Dilution Plate from the instrument and seal it with an adhesive film.
7. Spin the Sample Dilution Plate at 400–1000 x g for 1 minute.
8. Visually inspect the Sample Dilution Plate to ensure that all wells in quadrant 1–3 contain 9 µL of liquid, and that wells in quadrant 4 contain 29 µL. Make sure that there are no bubbles trapped at the bottom of the wells.
9. When finished, clear the instrument and shut it down according to instructions in the Olink® Explore Overview User Manual.
10. Continue to [72 Perform Sample Dilution](#), or store the Sample Dilution Plate at +4 °C until use (the same day).

## 7.2 Perform Sample Dilution

During this step, the samples are diluted in four sequential steps using the F.A.S.T. from 1:1 (undiluted) to 1:10, 1:100, 1:1000, and approximately 1:100 000.


### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Adhesive films


### Before you start

- Prepare the F.A.S.T. according to the manufacturer's instructions.
- Make sure that F.A.S.T. pipette tips have been loaded into the F.A.S.T. according to the manufacturer's instructions.

### Instructions

 **IMPORTANT:** Make sure to vortex the Sample Dilution Plate(s) thoroughly both between dilutions and after the last dilution. If using MixMate, make sure to vortex the Sample Dilution Plate thoroughly with correct MixMate settings, as incorrect settings may lead to low-quality data. Refer to table in [5.2 Important information](#).

1. Let the Sample Source Plate reach room temperature, vortex it briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
2. Carefully remove the adhesive films from the Sample Source Plate and the Sample Dilution Plate.
3. Place the Sample Source Plate and the Sample Dilution Plate on the deck. Refer to the software for the correct position.

 **IMPORTANT:** Risk of instrument damage! If the plates are not correctly placed, they can collide with the internal parts of the instrument during the run.

4. Click *Run* to start the protocol *Olink Sample Dilution 3072*.  
*Result:*  
*F.A.S.T. performs a 1:10 dilution by transferring 1 µL of sample from the Sample Source Plate into quadrant 1 in the Sample Dilution Plate. The run can be monitored in the protocol tab.*
5. When the F.A.S.T. protocol is paused and a pop-up window appears on the screen, remove the Sample Source Plate and the Sample Dilution Plate from the deck.
6. Seal both plates with new adhesive films and store the Sample Source Plate at +4 °C for later use
7. Using the MixMate or manual vortexing, vortex the Sample Dilution Plate thoroughly to ensure that all wells are mixed.
8. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
9. Carefully remove the adhesive film from the Sample Dilution Plate.
10. Place the Sample Dilution Plate back in the correct position of the F.A.S.T. deck.
11. Click *Resume* to continue the protocol.  
*Result:*  
*F.A.S.T. performs a 1:100 sample dilution by transferring 1 µL of diluted samples (1:10) into quadrant 2 of the Sample Dilution Plate.*
12. When the protocol is paused and a pop-up window appears on the screen, remove the Sample Dilution Plate from the deck. Seal with a new adhesive film.

13. Repeat steps 7–12 to perform the third dilution (1:1000).  
*Result:*  
*F.A.S.T. performs a 1:1000 sample dilution by transferring 1 µL of diluted samples (1:100) into quadrant 3 of the Sample Dilution Plate.*
14. Repeat steps 7–12 again to perform the last dilution (1:100 000).  
*Result:*  
*F.A.S.T. performs a 1:100 000 sample dilution by transferring 0.3 µL of diluted samples (1:1000) into quadrant 4 of the Sample Dilution Plate.*
15. Vortex the Sample Dilution Plate thoroughly using the MixMate or manual vortexing, and ensure that all wells are mixed.
16. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
17. When finished, click *Resume* to end the protocol. Keep the F.A.S.T. on for later use.
18. Continue to [8. Incubation](#) or place the Sample Dilution Plate at +4 °C for up to 1 hour.

*PCR1 Pooling Plate layout.*

*The numbers indicate the sample numbers. The colors indicate the panel numbers:  
light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 8. Incubation

During this step, four Incubation Mixes are prepared manually for each panel, transferred to Reagent Source Plates, and mixed with the samples. Incubation is then performed overnight.

Since one Reagent Source Plate is used for two panels, perform the instruction twice. As the Incubation Mixes must be used within 30 minutes from preparation, prepare one Reagent Source Plate and two Incubation Plates at a time. Therefore, perform the instructions in the following order:

- Run 1: Prepare Reagent Source Plate 1, then prepare Incubation Plates 1–2 and start incubation.
- Run 2: Prepare Reagent Source Plate 2, then prepare Incubation Plates 3–4 and start incubation.

## 8.1 Prepare Reagent Source Plate

During this step, four Incubation Mixes per panel are prepared manually and transferred to Reagent Source Plates. Each mix contains a specific set of Forward and Reverse probes.

**⚠ IMPORTANT:** *Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.*

### Prepare bench

- Olink® Explore Incubation Solution
- Olink® Explore Forward Probes A-D (Frw probes)
- Olink® Explore Reverse Probes A-D (Rev probes)
- 2x 8-well strips
- 2x 384-well PCR plates (skirted)
- Manual pipettes (0.5–10, 10–100 µL)
- Manual multichannel pipette (8-channel, 0.5–10 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Allow the Incubation Solution, Forward Probes and Reverse Probes to reach room temperature.
- Mark two new 384-well PCR plates:
  - For Run 1: “Reagent Source Plate 1”.
  - For Run 2: “Reagent Source Plate 2”.
- Mark the wells of two 8-well strips according to:

Run	Well							
	1	2	3	4	5	6	7	8
1	1A	1B	1C	1D	2A	2B	2C	2D
2	3A	3B	3C	3D	4A	4B	4C	4D

## Instructions

- Vortex the Incubation Solution, Forward Probes and Reverse Probes and spin down.
- Prepare Incubation Mixes in PCR Strip 1: Using **forward pipetting**, first transfer the Incubation Solution to all tubes of the strip, then all Frw Probes to the applicable tubes of the strip, and last all Rev Probes to the applicable tubes of the strip.


### Run 1:

Addition order	Reagent	Well							
		1A	1B	1C	1D	2A	2B	2C	2D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Frw Probes A	Panel 1 Frw Probes B	Panel 1 Frw Probes C	Panel 1 Frw Probes D	Panel 2 Frw Probes A	Panel 2 Frw Probes B	Panel 2 Frw Probes C	Panel 2 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Rev Probes A	Panel 1 Rev Probes B	Panel 1 Rev Probes C	Panel 1 Rev Probes D	Panel 2 Rev Probes A	Panel 2 Rev Probes B	Panel 2 Rev Probes C	Panel 2 Rev Probes D

### Run 2:

Addition order	Reagent	Well							
		3A	3B	3C	3D	4A	4B	4C	4D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Frw Probes A	Panel 3 Frw Probes B	Panel 3 Frw Probes C	Panel 3 Frw Probes D	Panel 4 Frw Probes A	Panel 4 Frw Probes B	Panel 4 Frw Probes C	Panel 4 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Rev Probes A	Panel 3 Rev Probes B	Panel 3 Rev Probes C	Panel 3 Rev Probes D	Panel 4 Rev Probes A	Panel 4 Rev Probes B	Panel 4 Rev Probes C	Panel 4 Rev Probes D

 **NOTE:** Pipette the Incubation Solution carefully to avoid foaming.


 **IMPORTANT:** The Incubation Solution will be used to prepare Incubation Mixes for the other panels. Do not discard.

- Seal the PCR Strip 1 with caps. Vortex and spin down briefly. Store at room temperature until use.

 **IMPORTANT:** Make sure that all applicable reagents are added to each Incubation Mix. The final volume shall be 100 µL

 **TIME SENSITIVE STEP:** The incubation setup using the F.A.S.T. must be started within 30 minutes from preparation of the Incubation Mix.

- Rotate the Reagent Source Plate (384-well) 90 degrees clockwise to facilitate pipetting.

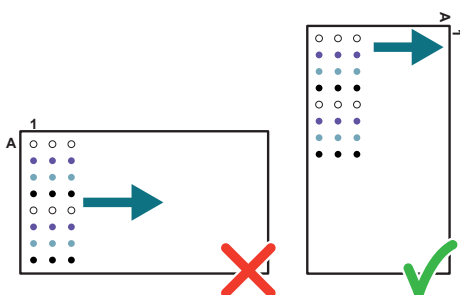

- Using a multichannel pipette, transfer 10 µL of each Incubation Mix from the PCR Strip 1 to the Reagent Source Plate 1, according to the plate layout in the figure below. The numbers indicate the panel numbers and the letters indicate the different blocks within the panels. Use **reverse pipetting**, and do not change pipette tips between wells. Make sure to pipette to the bottom of the wells.

Run 1:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	1A		1B		1C		1D		2A		2B		2C		2D										
B																									
C	1A		1B		1C		1D		2A		2B		2C		2D										
D																									
E	1A		1B		1C		1D		2A		2B		2C		2D										
F																									
G	1A		1B		1C		1D		2A		2B		2C		2D										
H																									
I	1A		1B		1C		1D		2A		2B		2C		2D										
J																									
K	1A		1B		1C		1D		2A		2B		2C		2D										
L																									
M	1A		1B		1C		1D		2A		2B		2C		2D										
N																									
O	1A		1B		1C		1D		2A		2B		2C		2D										
P																									

Run 2:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	3A		3B		3C		3D		4A		4B		4C		4D										
B																									
C	3A		3B		3C		3D		4A		4B		4C		4D										
D																									
E	3A		3B		3C		3D		4A		4B		4C		4D										
F																									
G	3A		3B		3C		3D		4A		4B		4C		4D										
H																									
I	3A		3B		3C		3D		4A		4B		4C		4D										
J																									
K	3A		3B		3C		3D		4A		4B		4C		4D										
L																									
M	3A		3B		3C		3D		4A		4B		4C		4D										
N																									
O	3A		3B		3C		3D		4A		4B		4C		4D										
P																									

- Seal the Reagent Source Plate 1 with a new adhesive film and spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
- Immediately continue to [8.2 Prepare Incubation Plates and perform incubation.](#)

## 8.2 Prepare Incubation Plates and perform incubation

During this step, the prepared Incubation Mixes are mixed with the samples in one Incubation Plate per panel using the F.A.S.T. instrument prior to incubation.

As the F.A.S.T. deck can only hold a limited number of plates, perform the instruction twice, once for Run 1 and once for Run 2 (one run per Reagent Source Plate).

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Reagent Source Plates, prepared in previous step
- 4x 384-well PCR plates (skirted)
- Adhesive films


### Before you start

- Allow the refrigerated Sample Source Plate and Sample Dilution Plate to reach room temperature.
- Mark four new 384-well PCR plates:
  - For Run 1: “Incubation Plate [1–2]”.
  - For Run 2: “Incubation Plate [3–4]”.


**Instructions**

1. In the open F.A.S.T. software, Select *File/Open* and choose the applicable protocol from the Explore Window and select the protocol for the applicable run according to:

Setup	Run	Protocol name
Setup 1	Run 1	Olink Incubation CARDIO INF
	Run 2	Olink Incubation NEURO ONC
Setup 2	Run 1	Olink Incubation CARDIO II INF II
	Run 2	Olink Incubation NEURO II ONC II

 **IMPORTANT:** Make sure to select the correct protocol. Selecting the wrong protocol will result in unusable data.

2. Place the two Incubation Plates 1–2 on the deck. Refer to the software for the correct positions.
3. Carefully remove the adhesive film from the Reagent Source Plate 1.


 **NOTE:** Make sure to use the correct Reagent Source Plate.

4. Place the Reagent Source Plate 1 on the F.A.S.T. deck. Refer to the software for the correct position.
5. Click *Run*.

*Result:*

*The F.A.S.T. transfers 0.6 µL of each Incubation Mix from the Reagent Source Plate into the Incubation Plates. The run takes approximately 10 minutes to be completed and can be monitored in the protocol tab.*

6. When the F.A.S.T. protocol is paused, and a pop-up window appears on the screen, remove Incubation Plates 1–2 from the F.A.S.T. deck.
7. Inspect the Incubation Plates 1–2 to ensure that there is liquid at the bottom of all wells, and that there are no bubbles present.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates. If bubbles are present, seal the Incubation Plate(s) with new adhesive film(s) and spin at 400–1000 x g for 1 minute, then carefully remove the adhesive film(s) and check again. Do not vortex. If bubbles are still present, puncture them using a syringe needle. Change needles between wells to avoid cross-well contamination.

8. Place Incubation Plates 1–2 back in their previous positions on the F.A.S.T. deck.
9. Vortex the Sample Source Plate and Sample Dilution Plate briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells and carefully remove the adhesive films.
10. Place the Sample Source Plate and Sample Dilution Plate on the F.A.S.T. deck. Refer to the software for the correct positions.



11. Click *Resume* to continue the protocol.

*Result:*

*The F.A.S.T. transfers 0.2 µL of samples from the Sample Source Plate and Sample Dilution Plate into the Incubation Plates. The run takes approximately 15 min to be completed.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

12. When the protocol is finished, remove Incubation Plates 1–2 from the deck. Seal with new adhesive films.


 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

13. Spin Incubation Plates 1–2 at 400–1000 x g for 1 minute.

14. Inspect Incubation Plates 1–2 to ensure that all wells contain the same amount of liquid (0.8 µL). Note if there are any wells containing bubbles.


15. Write the time of the incubation starting point on the plates seals and incubate Incubation Plates 1–2 for 16 to 24 hours at +4 °C.

 **NOTE:** It is recommended to keep the incubation time within ±1 hour within a project. The incubation time starts when placing the Incubation Plate at +4 °C and ends when starting PCR1 in ProFlex PCR instrument.

16. Remove the Sample Source Plate, Sample Dilution Plate, and Reagent Source Plate 1 from the deck.

Treat the plates according to:

Incubation Run	Sample Source Plate	Sample Dilution Plate	Reagent Source Plate
Run 1	Seal with adhesive film and store at +4 °C until start of Run 2.	Seal with adhesive film and store at +4 °C until start of Run 2.	Discard
Run 2	Discard	Discard	Discard

 **IMPORTANT:** Each of the two Setups requires the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

17. Repeat 8.1 *Prepare Reagent Source Plate* and 8.2 *Prepare Incubation Plates and perform incubation* for Run 2, using PCR Strip 2, Reagent Source Plate 2 and Incubation Plates 3–4.

18. When finished, clear the F.A.S.T. and shut it down according to the manufacturer's instructions.

# 9. Prepare for day 2

## **Prepare bench**

- MilliQ water
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution

## **Instructions**

1. Place 30 mL of MilliQ water at +4 °C overnight.
2. Thaw PCR1 Enhancer at room temperature overnight.
3. Optional: Thaw PCR1 Solution at +4 °C overnight.

# 10. Extension and pre-amplification (PCR1)

During this step, a PCR1 Mix is prepared manually and dispensed into the four Incubation Plates using the Dragonfly. The plates are renamed “PCR1 Plates” and subjected to a PCR reaction using two ProFlex instruments.

## 10.1 Prepare PCR1 Mix

During this step, a PCR1 Mix is prepared manually. The PCR1 Mix must be used within 30 minutes from preparation.

### Prepare bench

- Incubation Plates 1–4, prepared in previous step
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution
- Olink® Explore PCR1 Enzyme (when brought to the lab bench, keep the PCR1 Enzyme in a freezing block (-20 °C))
- MilliQ water
- 1x Falcon tube (50 mL)

### Before you start


- Thaw the PCR1 Solution at +4 °C overnight (optional), or at room temperature before starting the PCR1 setup (it may take several hours) and ensure that it is fully thawed and has reached room temperature.
- Ensure that the PCR1 Enhancer is fully thawed and has reached room temperature.
- Let the refrigerated Incubation Plates reach room temperature.
- Mark the new 50 mL Falcon tube: "PCR1 Mix".
- Switch on the two ProFlex PCR instruments in the post-PCR room.

## Instructions

1. Vortex the PCR1 Solution and PCR1 Enhancer thoroughly and spin down briefly.

 **IMPORTANT:** *Insufficient thawing and vortexing of the PCR1 Enhancer may lead to particles attaching to the syringe and run failure.*

2. Spin the PCR1 Enzyme briefly. Do not vortex.

 **NOTE:** *Always keep the PCR1 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).*

3. Spin the Incubation Plates 1–4 down for 1 minute at room temperature.
4. Prepare a PCR1 Mix in a Falcon tube in the following order, using the volumes indicated in the table below:
  - First add MilliQ water and PCR1 Enhancer and vortex thoroughly.
  - Then add the PCR1 Solution and PCR1 Enzyme, and vortex for 3 seconds.

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	27 000
2	PCR1 Enhancer	3 510
3	PCR1 Solution	3 510
4	PCR1 Enzyme	351
Total		34 371

5. Keep at room temperature until use.

 **TIME SENSITIVE STEP:** *Dispensing of the PCR1 Mix using the Dragonfly must start within 30 minutes from PCR1 Mix preparation.*

## 10.2 Prepare PCR1 Plates and perform PCR1

During this step, the prepared PCR1 Mix is dispensed into the Incubation Plates using the Dragonfly, and the plates are subjected to a PCR reaction in two ProFlex instruments.

The PCR1 Plates must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate. Since each ProFlex can hold two plates, prepare two plates at a time. Perform the instructions in the following order:

- Dispense PCR1 Mix into Incubation Plates 1–2 using the Dragonfly. Start a PCR1 run for these two plates on one of the ProFlex instruments.
- Dispense PCR1 Mix into Incubation Plates 3–4 plates using the Dragonfly. Start a PCR1 run for these plates on the second ProFlex instrument.

### Prepare bench


- Incubation Plates 1–4 at room temperature, prepared in previous step
- PCR1 Mix, prepared in previous step
- Timer
- 3x Disposable reservoirs (10 mL)
- 3x Disposable ultra-low retention syringes with plungers
- Manual pipette (5 or 10 mL)
- Filter pipette tips
- Adhesive films

### Before you start


- Set a timer to 10 minutes.

## Instructions

1. Start the PCR protocol Olink PCR1 on the two ProFlex PCR instruments. Pause when the PCR block temperature reaches 50 °C.

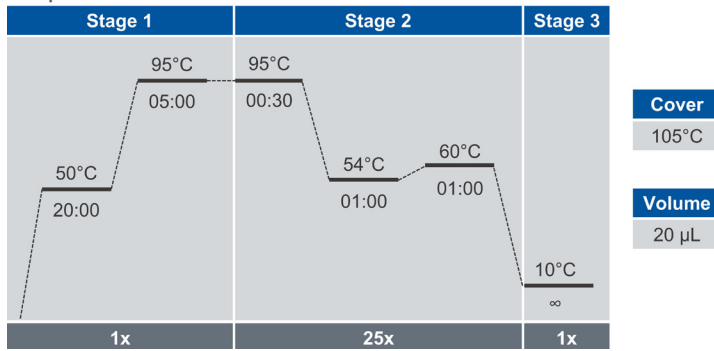


2. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink PCR1 Setup plate v4.
  - Attach three syringes in position B2, B3, and B4.
3. Slide the reservoir tray to the filling position (A) and place three new reservoirs in position B2, B3 and B4 (B).

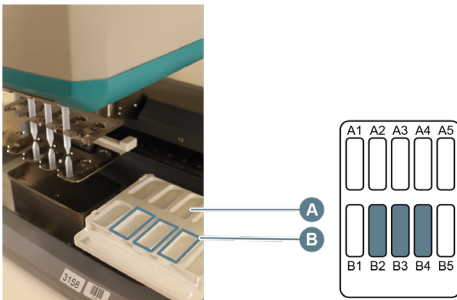

4. Transfer 11 mL of PCR1 Mix into each of the three reservoirs.

**⚠ IMPORTANT:** The syringes and PCR1 Mix are used to prepare all four PCR1 Plates. Do not discard until all PCR1 Plates are complete.

5. Carefully slide the reservoir tray back to the aspirate position.

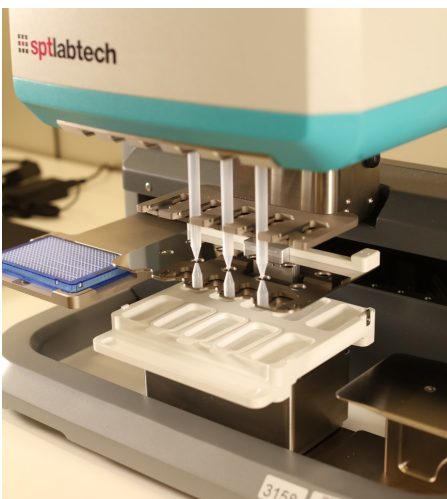


6. Rename Incubation Plate 1 “PCR1 Plate 1” and Incubation Plate 2 “PCR1 Plate 2”. Spin down the plates.
7. Carefully remove the adhesive film from PCR1 Plate 1 and place it in the Dragonfly plate position (to the left), with well A1 in the top left corner.

- Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol. Start the timer when PCR1 Mix is added to the first well of the plate.

*Result:*

*Dragonfly dispenses 19 µL of PCR1 Mix into each well of the PCR1 Plate 1.*

 **TIME SENSITIVE STEP:** *The PCR1 Plate must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate.*

- When the Dragonfly has returned the PCR1 Plate 1 to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.
- Inspect the PCR1 Plate 1 to ensure that all wells contain the same amount of liquid (19.8 µL). Using the MixMate or manual vortexing, vortex the plate thoroughly to ensure that all wells are mixed.
- Repeat steps 7–10 for PCR1 Plate 2.
- In the Post-PCR room, centrifuge PCR1 Plates 1–2 at 400–1000 x g for 1 minute.
- Inspect PCR1 Plates 1-2 to ensure that all wells contain the same amount of liquid (19.8 µL). Note any deviations.
- When the timer ends (after 10 minutes), place PCR1 Plates 1-2 in one of the two pre-heated ProFlex instruments and click *Resume* to run the Olink PCR1 protocol.
- Repeat steps 6–14 for Incubation Plates 3–4, except rename Incubation Plate 3 as "PCR Plate 3", and Incubation Plate 4 as "PCR Plate 4". Place both plates in the second ProFlex.
- When finished, clear the Dragonfly and shut it down according to instructions in the Olink® Explore Overview User Manual.
- When the protocols are finished (~1 hour 55 minutes), continue to [11. Pool PCR1 products](#), or store the four PCR1 Plates at +4 °C if used the same day.

 **SAFE STOPPING POINT:** *The PCR1 Plates can be stored at -20 °C for up to 2 weeks.*

*PCR1 plate layout.*

*The numbers indicate the sample numbers. The colors indicate the different blocks within the panel:*

*White = block A, purple = block B, blue = block C, black = block D.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 11.Pool PCR1 products

During this step, the PCR1 products from the PCR1 Plates are pooled into one PCR1 Pooling Plate using the SPT Dragonfly and Formulatrix F.A.S.T. instrument.

## Prepare bench

- PCR1 Plates, prepared in previous step
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x 384-well PCR plate (skirted)
- 1x Dragonfly® Disposable ultra-low retention syringe with plunger
- 1x Disposable Dragonfly® reservoir (10 mL)
- F.A.S.T.™ Disposable Pipette Tips (384 tips per panel)
- Adhesive films
- Temperature-resistant labels or marker pen

## Before you start

- Thaw PCR1 Plates at room temperature if frozen.
- Mark the new 384-well PCR plate: "PCR1 Pooling Plate".
- Switch on the Dragonfly system and open the software.
- Switch on the F.A.S.T. system and open the software.

## Instructions SPT Dragonfly®

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol `Olink_Explore_3072_PCR1_Pooling_Water`.
2. Attach one syringe in position B3.
3. Slide the reservoir tray to the filling position and place a new reservoir in position B3.
4. Transfer 10 mL of water into the reservoir and carefully slide the reservoir tray back to the aspirate position .
5. Place the PCR1 Pooling Plate in the Dragonfly plate position (to the left), with well A1 in the top left corner.
6. Select the Run tab in the Constant layer view of the software, then click *RUN* to start the protocol.

*Result:*

*The Dragonfly will dispense 12 µL water into each well of the PCR1 Pooling Plate*

 **IMPORTANT:** Do not stop the instrument until the run is completed

7. When the Dragonfly has returned the PCR1 Pooling Plate to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.



### Instructions Formulatrix F.A.S.T.™

1. Make sure that PCR1 Plates are thawed and properly sealed, then vortex the plates and spin down at 400–1000 x g for 1 minute at room temperature.
2. Inspect the wells of PCR1 Plates to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells. Spin down the plates again if necessary.
3. In Explorer, select the protocol `0link_Explore_3072_PCR1_Pooling`.
4. Carefully remove the adhesive films from the PCR1 Plates, PCR1 Pooling Plate, and the lid from the tip box. Place on the tray according to the protocol diagram.
5. Click the *START* button to begin the run.

*Result:*

*The F.A.S.T. pools 3 µL of each PCR1 product from each sample into one well per panel. The run takes approximately 6 minutes.*

6. When the protocol is finished, remove the PCR1 Pooling Plate and seal it with a new adhesive film. Keep the F.A.S.T. on for later use.
7. Vortex the PCR1 Pooling Plate and spin down at 400–1000 x g for 1 minute.
8. Inspect the PCR1 Pooling Plate to ensure that all wells contain the same amount of liquid (24 µL).
9. Remove PCR1 Plates containing the remaining PCR products and seal them with new adhesive films. Store them at 20 °C for up to 2 weeks in case of potential reruns.
10. Continue to [12. Amplification and sample indexing \(PCR2\)](#), or store the PCR1 Pooling Plate at +4 °C until ready to use (the same day).

*PCR1 Pooling Plate layout.*

*The numbers indicate the sample numbers. The colors indicate the panel numbers:  
light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 12. Amplification and sample indexing (PCR2)

During this step, a PCR2 Mix is prepared manually and then aliquoted into a new 384-well plate with the Dragonfly. The F.A.S.T. then adds pooled PCR1 products and index primers (unique for each sample). The samples then undergo a second PCR reaction.

## 12.1 Prepare PCR2 Mix

During this step, a PCR2 Mix is prepared manually. The PCR2 Mix must be used within 15 minutes from preparation.

### Prepare bench

- PCR1 Pooling Plate, prepared in previous step
- Olink® Explore PCR2 Solution
- Olink® Explore PCR2 Enzyme (when brought to the lab bench, keep the PCR2 Enzyme in a freezing block (-20 °C))
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Filter pipette tips
- Temperature-resistant labels or marker pen

### Before you start

- Thaw the PCR2 Solution and the Index Plate 1 at room temperature.
- If stored at +4 °C, allow the PCR1 Pooling Plate to reach room temperature.
- Mark the new 15 mL tube: "PCR2 Mix".
- Switch on one ProFlex PCR instrument. No preheating is required.

### Instructions

1. Vortex the PCR2 Solution and spin it briefly.
2. Vortex the Index Plate 1 and spin it at 400–1000 x g for 1 minute.
3. Make sure that the PCR1 Pooling Plate is properly sealed, then vortex it and spin at 400–1000 x g for 1 minute.
4. Spin the PCR2 Enzyme briefly. Do not vortex.



**NOTE:** Always keep the PCR2 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).

5. Prepare a PCR2 Mix in a Falcon tube following the order and volumes according to:

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	7 076
2	PCR2 Solution	1 015
3	PCR2 Enzyme	21
	Total	8 112

5. Vortex the PCR2 Mix thoroughly.



**TIME SENSITIVE STEP:** Start the dispensing of the PCR2 Mix within 15 minutes from preparation.

## 12.2 Prepare PCR2 Plate and perform PCR2

During this step, the prepared PCR2 Mix is mixed with the samples along with index primers. PCR2 Mix is aliquoted into a new 384 well plate by the Dragonfly, then samples and index are added using the F.A.S.T. The samples are then subjected to a second PCR reaction.

### Prepare bench

- PCR1 Pooling Plate (at room temperature), prepared in previous step
- PCR2 Mix, prepared in previous step
- Olink® Explore Index Plate 1
- 1x 384-well PCR plate (skirted)
- 1x Dragonfly® Disposable ultra-low retention syringe with plunger
- 1x Disposable Dragonfly® reservoir (10 mL)
- F.A.S.T.™ Disposable Pipette Tips (480 tips per four panels)
- Adhesive films
- Mark the new 384-well PCR plate: "PCR2 Plate".
- Temperature-resistant labels or marker pen

### Before you start

- Mark the new 384-well PCR plate: "PCR2 Plate".
- Switch on the Dragonfly system and open the software.
- Switch on the F.A.S.T. system and open the software.

### Instructions STP Dragonfly®

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol `Olink_Explore_3072_PCR2_Set-Up_MM`.
2. Attach one syringe in position B3.
3. Slide the reservoir tray to the filling position and place a new reservoir in position B3.
4. Transfer the entire volume of the PCR2 Mix into the reservoir and carefully slide the reservoir tray back to the aspirate position.
5. Place the PCR2 Plate in the Dragonfly plate position (to the left), with well A1 in the top left corner.
6. Select the Run tab in the Constant layer view of the software, then click *RUN* to start the protocol.

#### Result:

*The Dragonfly will dispense 16 µL PCR2 mix into each well of the PCR2 Plate.*

**IMPORTANT:** *The mastermix must be used within one hour, proceed without interruptions.*

7. When the Dragonfly has returned the PCR2 Plate to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.
8. When finished, clear the Dragonfly and shut it down according to instructions in the Olink® Explore Overview User Manual.

### Instructions Formulatrix F.A.S.T.™

1. Open the F.A.S.T. software and select the protocol Olink\_Explore\_3072\_PCR2\_Set-Up.
2. Centrifuge Index Plate 1 at 400–1000 x g for 1 minute and inspect the plate to ensure that all wells contain the same amount of liquid (20 µL). If a well is empty or contains a lower volume, contact Olink Support.
3. Remove the lid of the tip box. Carefully remove the adhesive films from the Index Plate 1 and the PCR1 Pooling Plate. Make sure that no air bubbles are trapped at the bottom of the wells of the PCR1 Pooling Plate.
4. Arrange the F.A.S.T. deck according to the layout in the protocol.
5. Click START to begin the run.

*Result:*


*F.A.S.T. transfers 2 µL Index Primers (from the Index Plate 1) and 2 µL PCR1 products (from the PCR1 Pooling Plate) into the applicable wells of the PCR2 Plate. The run takes approximately 4 minutes to complete.*

6. When the protocol is finished, remove the PCR2 Plate and seal it with a new adhesive film.

**⚠ IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

**🕒 TIME SENSITIVE STEP:** Start the PCR2 protocol within 5 minutes from end of the F.A.S.T. protocol.

7. Vortex and spin down at 400–1000 x g for 1 minute at room temperature.
8. Inspect the PCR2 Plate to ensure that all wells contain the same amount of liquid (20 µL).
9. Place the PCR2 Plate in the ProFlex and add a balance plate to the other side of the ProFlex.
10. Click *Open* and select the protocol Olink Index PCR2. Click *Start*.

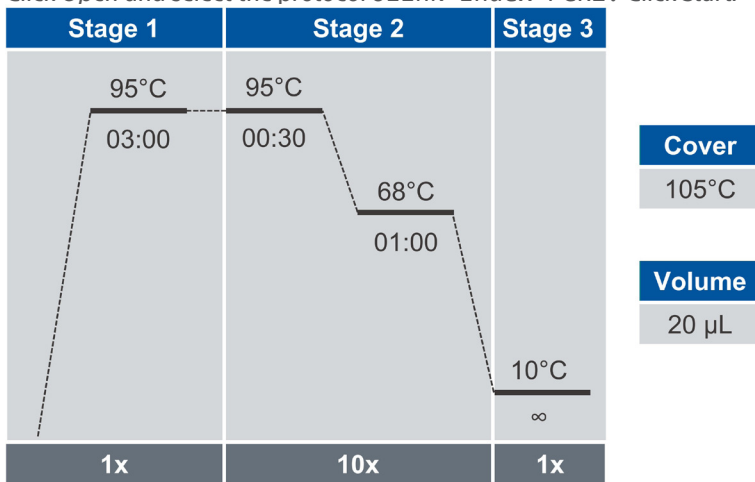

11. Remove the PCR1 Pooling Plate containing the remaining PCR products from the F.A.S.T. and seal it with a new adhesive film. Store it at -20 °C for up to 2 weeks in case of potential reruns.
12. Discard the Index Plate 1.
13. When the protocol is finished (~25 minutes), continue to [13. Pool PCR2 products](#), or store the PCR2 Plate at +4 °C until use (the same day).

**> SAFE STOPPING POINT:** The PCR2 Plate can be stored at -20 °C for up to 2 weeks.

PCR2 Plate layout

The numbers indicate the sample numbers.

The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 13.Pool PCR2 products

During this step, all PCR2 products belonging to the same panel are pooled into one column of the PCR2 Pooling Plate using the F.A.S.T. The Olink libraries are then manually transferred to one microcentrifuge tube per panel. Each tube contains amplicons from 96 samples, including controls.

## Prepare bench

- PCR2 Plate, prepared in previous step
- 1x 96-well PCR plate (skirted)
- Microcentrifuge tubes (1.5 mL, 1x tube per panel)
- F.A.S.T.™ Disposable Pipette Tips (32 tips per four panels)
- Manual pipette (10–100 µL)
- Filter pipette tips
- Adhesive films
- Temperature-resistant labels or marker pen

## Before you start

- Thaw PCR2 Plate at room temperature if frozen.
- Mark the new 96-well PCR plate: "PCR2 Pooling Plate".
- Mark four new microcentrifuge tubes: "PCR2 [1–4, depending on the number of panels]". Thaw PCR2 Plate at room temperature if frozen.
- Switch on the F.A.S.T. system and open the software.

## Instructions

1. Open the F.A.S.T. software and select the protocol `Olink_Explore_3072_PCR2_Pooling`.
2. Make sure that the PCR2 Plate is thawed and properly sealed, then vortex and spin it down at 400–1000 x g for 1 minute at room temperature to ensure that all wells are mixed.
3. Inspect the wells of the PCR2 Plate to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells. Carefully unseal the plate.
4. Arrange the F.A.S.T. deck according to the layout in the protocol.
5. Click **START** to begin the run.

### Result:

*F.A.S.T pools 3 µL from each row of a given Panel into a single well of the PCR2 Pooling Plate. The result is one column of pooled PCR2 products per panel in the PCR2 Pooling Plate. The run takes approximately 13 minutes.*

6. When finished, remove the PCR2 Pooling Plate. Seal the plate with a new adhesive film, vortex the plate and spin down at 400–1000 x g for 1 minute.
7. Inspect the PCR2 Pooling Plate to ensure that every applicable well contains the same amount of liquid (36 µL in columns 1, 3, 5 and 7).
8. Remove the PCR2 Plate containing the remaining PCR2 products from the instrument, seal it with a new adhesive film and store it at -20 °C for up to 2 weeks in case of potential reruns.
9. Clear the F.A.S.T and shut it down.

### CR2 Pooling Plate layout.

*The numbers and colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.*

	1	2	3	4	5	6	7	8	9	10	11	12
A	1		2		3		4					
B	1		2		3		4					
C	1		2		3		4					
D	1		2		3		4					
E	1		2		3		4					
F	1		2		3		4					
G	1		2		3		4					
H	1		2		3		4					

10. Carefully remove the adhesive film from the PCR2 Pooling Plate.
11. Using a single-channel pipette transfer the pooled PCR2 products from the PCR2 Pooling Plate to the PCR2 Tubes as described in the table below. If running a single panel, only transfer from column 1 to PCR2 tube 1 will be applicable. Use **forward pipetting** and change pipette tip after each well.

Volume (µL)	From column	To tube
30	1	PCR2 1
30	3	PCR2 2
30	5	PCR2 3
30	7	PCR2 4

12. Vortex the PCR2 Tubes and spin down briefly.
13. Discard the PCR2 Pooling Plate.
14. Continue to [14. Library purification](#), or store the PCR2 Tubes at +4 °C until use (the same day).

**SAFE STOPPING POINT:** *The PCR2 Tubes can be stored at -20 °C for up to 2 weeks.*

# 14. Library purification

During this step, the Olink Libraries are purified using magnetic beads and the eluates are transferred into one new microcentrifuge tube per panel.

## Prepare bench

- PCR2 Tubes 1–4, prepared in previous step
- Agentcourt AMPure XP bottle
- 96% Ethanol (EtOH)
- MilliQ water
- DynaMag™-2 Magnet
- Timer
- 8 Microcentrifuge tubes (1.5 mL)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Pipette 5 mL
- Filter pipette tips

## Before you start

- Let the refrigerated Agentcourt AMPure XP bottle reach room temperature.
- Mark four new microcentrifuge tubes: “BP [1–4]” (for “Bead Purification”).
- Mark four new microcentrifuge tubes: “Lib [1–4]”.
- Mark the new 15 mL Falcon tube: “70% EtOH”.
- Set a timer to 5 minutes.



## Instructions

1. Freshly prepare a sufficient amount of 70% EtOH for the number of Libraries to purify according to the table below. Manually transfer first the MilliQ water and then the 96% EtOH into the Falcon tube.


Reagent	Volume (mL) for							
	1 library	2 Libraries	3 Libraries	4 Libraries	5 Libraries	6 Libraries	7 Libraries	8 Libraries
MilliQ water	0.5	0.8	1.1	1.4	1.6	1.9	2.2	2.5
96% EtOH	1.5	2.2	2.9	3.6	4.4	5.1	5.8	6.5
Total (70% EtOH)	2	3	4	5	6	7	8	9

2. Shake and vortex the Agentcourt AMPure XP bottle vigorously to resuspend the magnetic beads.
3. Transfer 80  $\mu\text{L}$  from the Agentcourt AMPure XP bottle to each BP Tube.
4. Transfer 50  $\mu\text{L}$  from each PCR2 Tube to the corresponding BP Tube according to:

Volume ( $\mu\text{L}$ )	From tube	To tube
50	PCR2 1	BP 1
50	PCR2 2	BP 2
50	PCR2 3	BP 3
50	PCR2 4	BP 4

 **NOTE:** Store the PCR2 Tubes at  $-20\text{ }^{\circ}\text{C}$  in case the purification needs to be repeated.

5. Pipette-mix 10 times to thoroughly mix the Libraries with the beads. Change pipette tip between every tube.
6. Start the timer after the last tube has been mixed and incubate the BP Tubes 1–4 for 5 minutes at room temperature.
7. After the incubation, place the BP Tubes 1–4 on the DynaMag-2 Magnetic stand and leave them for 2 minutes to separate the beads from the solution.

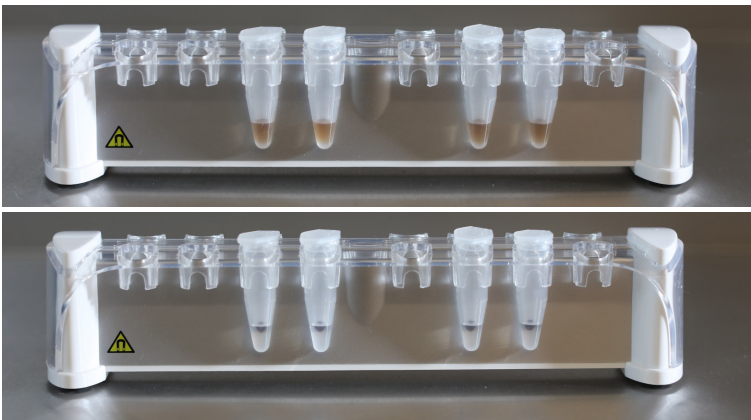

8. With the tubes still on the magnetic stand, carefully open the lids and discard 125  $\mu\text{L}$  supernatant using a single-channel pipette. Do not disturb the beads.
9. With the tubes still on the magnetic stand, wash the beads:
  - a. Add 500  $\mu\text{L}$  of 70% EtOH to every BP Tube. Pipette onto the opposite wall from the beads.

 **NOTE:** Make sure not to disturb the beads.

- b. Leave the tubes to incubate for 30 seconds.
- c. Using a single-channel pipette, aspirate the EtOH, without disturbing the beads. Discard the EtOH.
- d. Repeat steps a) – c) once.

**⚠ IMPORTANT:** Make sure that no EtOH remains in the BP Tubes after this step. Use a smaller pipette to remove any residual EtOH.

10. Leave the tubes with the lids open on the magnetic stand for 2 minutes for the beads to air dry.
11. Close the tubes and remove them from the magnetic stand.
12. Add 50 µL of MilliQ water to the BP Tubes 1–4 and pipette-mix 10 times towards the beads to elute the purified Libraries from the beads.
13. Incubate the tubes for 2 minutes at room temperature.
14. Place BP Tubes 1–4 on the magnetic stand and leave them for 1 minute to separate the beads from the eluted Library solution.
15. With BP Tubes 1–4 still on the magnetic stand, transfer 45 µL of eluate from the BP Tubes to the corresponding Lib Tubes according to:

Volume (µL)	From tube	To tube
45	BP 1	Lib 1
45	BP 2	Lib 2
45	BP 3	Lib 3
45	BP 4	Lib 4

**⚠ IMPORTANT:** Make sure not to disturb or aspirate the beads.

16. Discard BP Tubes 1–4.
17. Continue to [15. Quality control](#).


**> SAFE STOPPING POINT:** The Lib Tubes can be stored at -20 °C for up to 4 weeks.

# 15. Quality control


During this step, the four purified Olink Libraries are quality controlled on the Bioanalyzer using the High Sensitivity DNA kit or on the TapeStation using the High Sensitivity D5000 kit, according to the Manufacturer's instructions.

The electropherograms in the figures below display typical results for an Olink Library. The purified Olink Library appears as a single or double peak around 150 bp. Peaks of larger sizes represents bubble products and do not have any impact on sequencing results, see <https://emea.support.illumina.com/bulletins/2019/10/bubble-products-in-sequencing-libraries--causes--identification-.html> for more information.

Bioanalyzer's electropherogram.

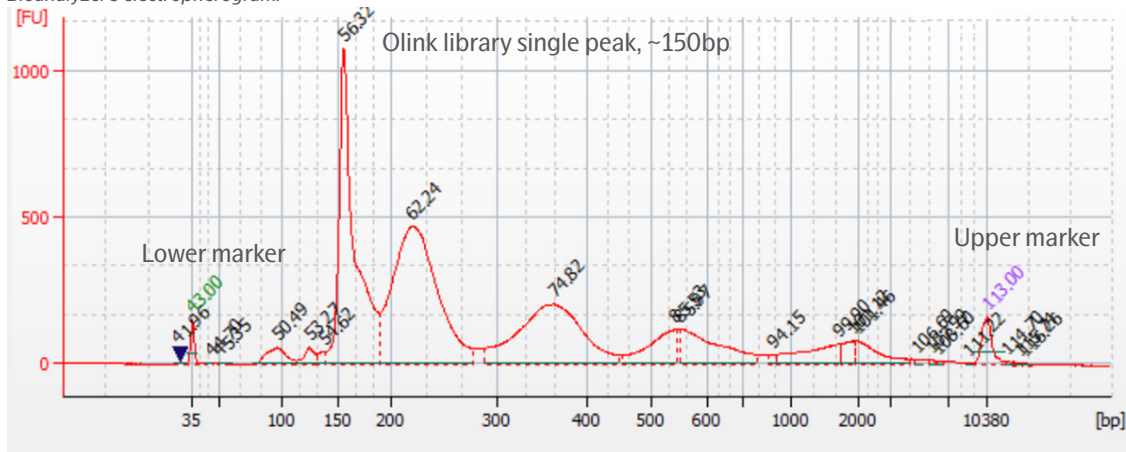

TapeStation's electropherogram.

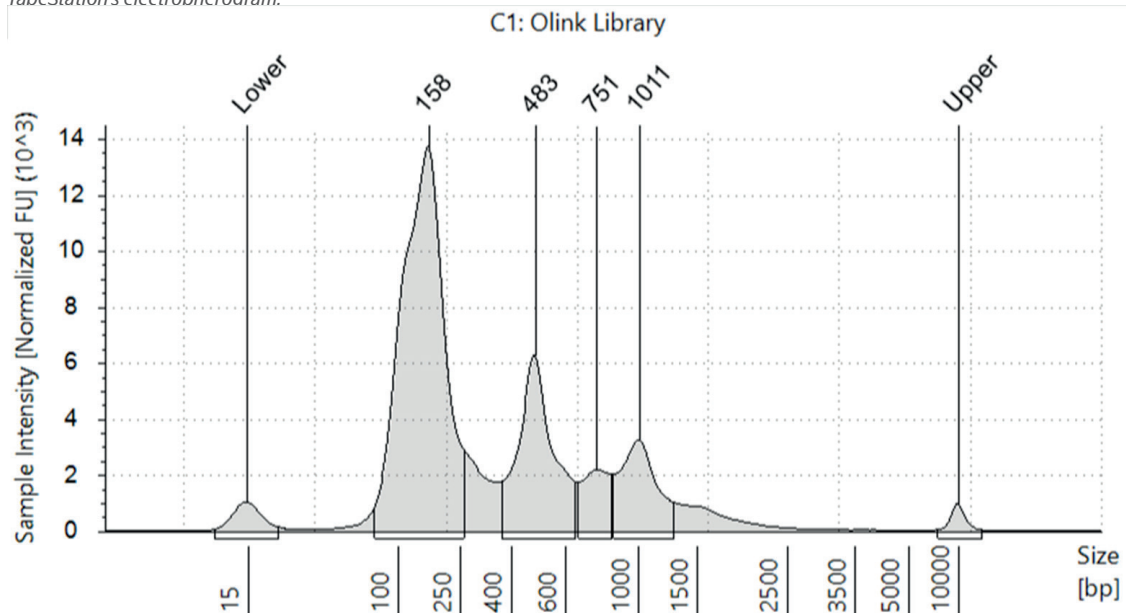

For expected results of a successful ladder run, refer to the Manufacturer’s Manual. If any of the deviations in the table below should occur in the electropherogram, do not continue to sequencing. Instead, perform the suggested corrective action.

Peak deviation	Possible cause	Action
No Library peak present at 150bp.	1) No PCR1 amplification has taken place, and therefore there are no PCR2 products and no Library 2) The bead purification failed	Rerun the quality control with unpurified Library. If a peak is present at 150bp: purify a new aliquot of the unpurified Library and rerun the quality control. If successful, proceed to sequencing.  If there is no 150bp peak present in the unpurified Library, no PCR product has been generated. Repeat the Library preparation, quality control and sequencing.
No Library peak present at 150bp, but a smaller peak at 120bp	The index primers were not included in the PCR2 reaction (the 120bp peak corresponds to the PCR1 product). 1) The Index plate was empty. 2) There was no transfer of index primers from the Index Plate to the PCR2 Plate due to <i>epMotion</i> ® failure.	Contact Support. Make sure to centrifuge and visually inspect the Index Plate before starting the PCR2 setup. Make sure that the <i>epMotion</i> ® is calibrated, functional and that the correct protocol is used.

## 16. Next generation sequencing

Next generation sequencing is performed using either of the following Illumina® instruments:

- NextSeq™ 550
- NextSeq™ 2000
- NovaSeq™ 6000
- NovaSeq™ X Plus

As the workflow differs between instruments, refer to the applicable Olink® Explore Sequencing User Manual for instructions on how to sequence Olink Libraries.

# Part 3: Laboratory instructions for 96 samples using Formulatrix F.A.S.T.™ and Hamilton Microlab® STAR

This section provides instructions on how to perform each step of the Olink® Explore 3072 laboratory workflow, using Microlab STAR from Hamilton Company. The eight panels must be prepared on two separate occasions: four panels during Setup 1 and four panels during Setup 2. The instructions below describe how to perform the workflow for one Setup (four panels) at a time.

The panels CARDIO, INF, NEURO, and ONC are prepared during Setup 1. The panels CARDIO II, INF II, NEURO II, and ONC II are prepared during Setup 2.

Note that each of the two Setups requires preparation of a new Sample Source Plate. The Sample Plate from Setup 1 can however be reused for Setup 2.

If the panels are prepared on more than two occasions, additional Olink® Explore Sample Prep Reagents will be required. Refer to [2.1 Content of Olink® Explore Sample Prep Reagents](#).

## 17. Preparations

### 17.1 Plan the study

A successful study requires careful planning. Perform the following before starting the experiment:

- Decide the number of samples and controls required to get the data that you want from the study.
- Optional Sample Control: It is recommended to include a pooled plasma sample in duplicate on each plate. These samples are used to assess potential variation between runs and plates, for example to calculate inter-assay and intra-assay CV, as well as for troubleshooting. When including the Sample Controls, 88 user samples can be processed simultaneously.
- When running more than one Sample Plate, make sure that the samples are appropriately randomized across all plates and that necessary steps for normalizing and combining data are taken. If you need assistance, consult a statistician or contact Olink Support before running the study.
- Consult the Olink white paper “Strategies for design of protein biomarker studies” ([www.olink.com/whitepapers](http://www.olink.com/whitepapers)) and the sample randomization guidelines ([www.olink.com/faq/sample-randomization](http://www.olink.com/faq/sample-randomization)).



**NOTE:** Sample randomization helps to ensure that technical variation does not overlap with biological variation.

## 17.2 Important information

### Panel nomenclature

As the panels differ between Setup 1 and Setup 2, the panel names are not mentioned in this manual. Instead, the panels are referred to as Panel 1–4, as described in the table below.

Panel number	Panel name for Setup 1	Panel name for Setup 2
1	CARDIO	CARDIO II
2	INF	INF II
3	NEURO	NEURO II
4	ONC	ONC II

Throughout the instructions, plates and tubes are marked with names and numbers, for example “Incubation Plate 1”. When using the marked plates and tubes, make sure that the number on the plate or tube corresponds to the number of the applicable panel, i.e when running Panel 1, use XX Plate 1, and when running Panel 4, use XX Plate 4.

### Reagent lots

Before starting each step of the workflow, make sure that the lot number of each reagent matches the lot numbers indicated in the Lot Configuration document provided with the kit.

### Vortexing

Correct vortexing is essential to generate reproducible results. Review instructions in the Olink Explore Overview User Manual prior to starting the laboratory workflow.

Plate type	Speed (rpm)	Time (s)
96-wells	2500	30
384-wells	3000	30

### 384-well PCR plates

Make sure to use the twin.tec 384-well skirted PCR plate from Eppendorf (art nr. 0030128508), as stated in the Olink Explore Overview User Manual. All instrument protocols have been calibrated for this specific plate. Other models should not be used.

## 17.3 Prepare the samples

During this step, samples are manually transferred to the Sample Plate. It is recommended to use the Sample Plate within the same day of preparation to minimize the number of freeze-thaw cycles. The Sample Plate can however be stored at -80 °C and reused for preparation of Setup 2.



**NOTE:** *The Olink Explore protocol is optimized and validated for plasma and serum samples. Contact Olink Support for more information regarding alternative sample types.*

### Prepare bench

- Samples (provided by the user)
- 1x 96-well PCR plate, preferably with full skirt
- Manual pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive Film
- Temperature-resistant labels or marker pen

### Before you start

- Select the samples to be included in the study.



**IMPORTANT:** *The samples must be undiluted, as dilution of samples may result in lower detectability.*

- Thaw the samples at room temperature if frozen.
- Mark the 96-well Sample Plate with a simple alphanumeric code that you can later identify (“A, B, C”, “1, 2, 3”, or “A1, A2, A3”) using temperature-resistant labels or marker pen. Use unique sample identification names or numbers.

### Instructions

1. Transfer the samples into the Sample Plate. Make sure that samples are added to every applicable well.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1	9	17	25	33	41	49	57	65	73	81	
B	2	10	18	26	34	42	50	58	66	74	82	
C	3	11	19	27	35	43	51	59	67	75	83	
D	4	12	20	28	36	44	52	60	68	76	84	
E	5	13	21	29	37	45	53	61	69	77	85	
F	6	14	22	30	38	46	54	62	70	78	86	
G	7	15	23	31	39	47	55	63	71	79	87	
H	8	16	24	32	40	48	56	64	72	80	88	

2. Seal the Sample Plate using an adhesive film or individual seals.
3. Store the Sample Plate at +4 °C if used the same day, otherwise at -80 °C.




**IMPORTANT:** *Avoid subjecting the samples to multiple freeze-thaw cycles.*

# 18. Prepare Sample Source Plate

During this step, samples are manually transferred from the prepared Sample Plate into the Sample Source Plate, and controls are added to the Sample Source Plate. The Sample Source Plate must be used within the same day of preparation.

 **IMPORTANT:** Note that each of the two Setups require the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

 **IMPORTANT:** Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.

## Prepare bench

- Sample Plate, prepared in previous step
- Olink® Explore Negative Control
- Olink® Explore Plate Control
- Sample Control (*optional, provided by the user*)
- 1x 384-well PCR plate (skirted)
- Manual pipette (0.5–10 µL)
- Manual multichannel pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive films

## Before you start

- Ensure that the Sample Plate has been prepared according to section [17.3 Prepare the samples](#).
- If frozen, thaw the Sample Plate at room temperature.
- Thaw the Negative Control, Plate Control and recommended Sample Control at room temperature.
- Mark the 384-well PCR plate: "Sample Source Plate".



### Instructions

- Using the MixMate or manual vortexing, vortex the 96-well Sample Plate and spin at 400–1000 x g for 1 minute at room temperature.
- Using a multichannel pipette, transfer 10 µL of each sample into the 384-well Sample Source Plate according to the plate layout shown in the figure below. Use **forward pipetting**, change pipette tips between every column, and make sure that no air bubbles are trapped at the bottom of the wells.
- Vortex the Negative Control, Plate Control and Sample Control and spin briefly.
- Using a single-channel pipette, transfer 10 µL of Negative Control (NC), Plate Control (PC) and Sample Control (SC) to each of the applicable wells in column 23 of the 384-well Sample Source Plate according to the plate layout shown in the figure below. Change pipette tip between every control sample.
- Seal the Sample Source Plate with a new adhesive film.

 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

- Spin the Sample Source Plate at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells. Store the plate at +4 °C until use (the same day).
- Seal the Sample Plate with a new adhesive film. Store at -80 °C.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1		9		17		25		33		41		49		57		65		73		81		SC	
B																								
C	2		10		18		26		34		42		50		58		66		74		82		SC	
D																								
E	3		11		19		27		35		43		51		59		67		75		83		NC	
F																								
G	4		12		20		28		36		44		52		60		68		76		84		NC	
H																								
I	5		13		21		29		37		45		53		61		69		77		85		NC	
J																								
K	6		14		22		30		38		46		54		62		70		78		86		PC	
L																								
M	7		15		23		31		39		47		55		63		71		79		87		PC	
N																								
O	8		16		24		32		40		48		56		64		72		80		88		PC	
P																								

# 19. Sample Dilution

During this step, Sample Diluent is dispensed into the Sample Dilution Plate using the Dragonfly and the samples are diluted using the F.A.S.T. The prepared Sample Dilution Plate must be used within one hour from preparation.

## 19.1 Prepare Sample Dilution Plate

During this step, Sample Diluent is dispensed into Sample Dilution Plate using the Dragonfly.

### Prepare bench

- Olink® Target 96/Explore Sample Diluent
- 1x 384-well PCR plate (skirted)
- 1x Disposable reservoir (10 mL)
- 1x Disposable ultra-low retention syringe with plunger
- Manual pipette (100–1000 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Thaw the Sample Diluent at room temperature
- Mark the new 384-well PCR plate: “Sample Dilution Plate”.




**NOTE:** For convenience, the Sample Diluent can be thawed at +4 °C overnight.

## Instructions

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink Sample Dilution Plate v4.
  - Attach one syringe in position B2.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.


2. Slide the reservoir tray to the filling position (A) and place a new reservoir in position B2 (B).

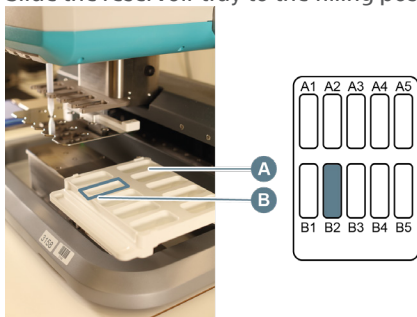

3. Vortex the Sample Diluent briefly, add 6 mL of Sample Diluent into the reservoir and carefully slide the reservoir tray back to the aspirate position.
4. Place the Sample Dilution Plate in the plate position to the left, with well A1 in the top left corner.
5. Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol.

### Result:

*Dragonfly dispenses 9  $\mu$ L Sample Diluent into each well of quadrant 1–3 and 29  $\mu$ L in quadrant 4 of the Sample Dilution Plate. Filled wells turn purple in the plate map. The run stops automatically when the Dragonfly has dispensed Sample Diluent into all applicable wells.*

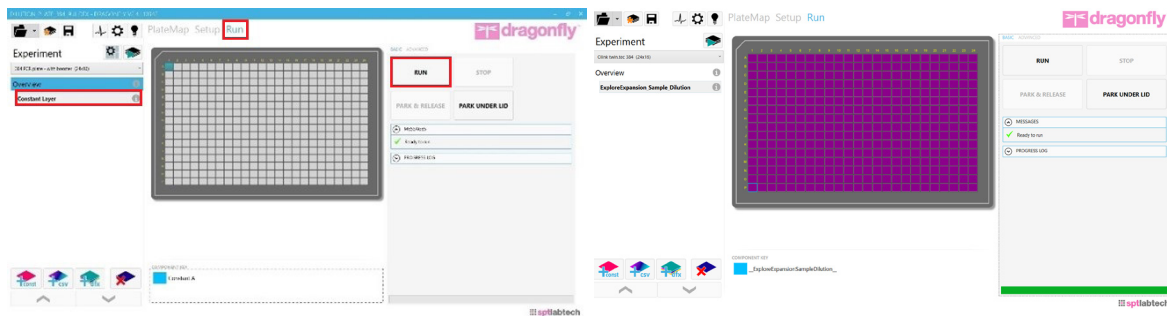

6. When the Dragonfly has returned the Sample Dilution Plate to the plate position and released the plate clamp, remove the Sample Dilution Plate from the instrument and seal it with an adhesive film.
7. Spin the Sample Dilution Plate at 400–1000 x g for 1 minute.
8. Visually inspect the Sample Dilution Plate to ensure that all wells in quadrant 1–3 contain 9  $\mu$ L of liquid, and that wells in quadrant 4 contain 29  $\mu$ L. Make sure that there are no bubbles trapped at the bottom of the wells.
9. When finished, clear the instrument and shut it down according to instructions in the Olink® Explore Overview User Manual.
10. Continue to [19.2 Perform Sample Dilution](#), or store the Sample Dilution Plate at +4 °C until use (the same day).

## 19.2 Perform Sample Dilution

During this step, the samples are diluted in four sequential steps using the F.A.S.T. from 1:1 (undiluted) to 1:10, 1:100, 1:1000, and approximately 1:100 000.

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Adhesive films

### Before you start

- Prepare the F.A.S.T. according to the manufacturer's instructions.
- Make sure that F.A.S.T. pipette tips have been loaded into the F.A.S.T. according to the manufacturer's instructions.

### Instructions

**⚠ IMPORTANT:** Make sure to vortex the Sample Dilution Plate(s) thoroughly both between dilutions and after the last dilution. If using MixMate, make sure to vortex the Sample Dilution Plate thoroughly with correct MixMate settings, as incorrect settings may lead to low-quality data. Refer to table in [17.2 Important information](#).

1. Let the Sample Source Plate reach room temperature, vortex it briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
2. Carefully remove the adhesive films from the Sample Source Plate and the Sample Dilution Plate.
3. Place the Sample Source Plate and the Sample Dilution Plate on the deck. Refer to the software for the correct position.

**⚠ IMPORTANT:** Risk of instrument damage! If the plates are not correctly placed, they can collide with the internal parts of the instrument during the run.

4. Click *Run* to start the protocol *Olink Sample Dilution 3072*.

*Result:*

*F.A.S.T. performs a 1:10 dilution by transferring 1 µL of sample from the Sample Source Plate into quadrant 1 in the Sample Dilution Plate. The run can be monitored in the protocol tab.*

5. When the F.A.S.T. protocol is paused and a pop-up window appears on the screen, remove the Sample Source Plate and the Sample Dilution Plate from the F.A.S.T. deck.
6. Seal both plates with new adhesive films and store the Sample Source Plate at +4 °C for later use
7. Using the MixMate or manual vortexing, vortex the Sample Dilution Plate thoroughly to ensure that all wells are mixed.
8. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
9. Carefully remove the adhesive film from the Sample Dilution Plate.
10. Place the Sample Dilution Plate back in the correct position of the F.A.S.T. deck.
11. Click *Resume* to continue the protocol.  
*Result:*  
*F.A.S.T. performs a 1:100 sample dilution by transferring 1 µL of diluted samples (1:10) into quadrant 2 of the Sample Dilution Plate.*
12. When the protocol is paused and a pop-up window appears on the screen, remove the Sample Dilution Plate from the deck. Seal with a new adhesive film.

13. Repeat steps 7–12 to perform the third dilution (1:1000).

*Result:*

*F.A.S.T. performs a 1:1000 sample dilution by transferring 1 µL of diluted samples (1:100) into quadrant 3 of the Sample Dilution Plate.*

14. Repeat steps 7–12 again to perform the last dilution (1:100 000).

*Result:*

*F.A.S.T. performs a 1:100 000 sample dilution by transferring 0.3 µL of diluted samples (1:1000) into quadrant 4 of the Sample Dilution Plate.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

15. Vortex the Sample Dilution Plate thoroughly using the MixMate or manual vortexing, and ensure that all wells are mixed.

16. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.

17. When finished, click *Resume* to end the protocol. Keep the F.A.S.T. on for later use.

18. Continue to [20. Incubation](#) or place the Sample Dilution Plate at +4 °C for up to 1 hour.

# 20. Incubation

During this step, four Incubation Mixes are prepared manually for each panel, transferred to Reagent Source Plates, and mixed with the samples. Incubation is then performed overnight.

Since one Reagent Source Plate is used for two panels, perform the instruction twice. As the Incubation Mixes must be used within 30 minutes from preparation, prepare one Reagent Source Plate and two Incubation Plates at a time. Therefore, perform the instructions in the following order:

- Run 1: Prepare Reagent Source Plate 1, then prepare Incubation Plates 1–2 and start incubation.
- Run 2: Prepare Reagent Source Plate 2, then prepare Incubation Plates 3–4 and start incubation.

## 20.1 Prepare Reagent Source Plate

During this step, four Incubation Mixes per panel are prepared manually and transferred to Reagent Source Plates. Each mix contains a specific set of Forward and Reverse probes.

**⚠ IMPORTANT:** *Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.*

### Prepare bench

- Olink® Explore Incubation Solution
- Olink® Explore Forward Probes A-D (Frw probes)
- Olink® Explore Reverse Probes A-D (Rev probes)
- 2x 8-well strips
- 2x 384-well PCR plates (skirted)
- Manual pipettes (0.5–10, 10–100 µL)
- Manual multichannel pipette (8-channel, 0.5–10 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Allow the Incubation Solution, Forward Probes and Reverse Probes to reach room temperature.
- Mark two new 384-well PCR plates:
  - For Run 1: “Reagent Source Plate 1”.
  - For Run 2: “Reagent Source Plate 2”.
- Mark the wells of two 8-well strips according to:

Run	Well							
	1	2	3	4	5	6	7	8
1	1A	1B	1C	1D	2A	2B	2C	2D
2	3A	3B	3C	3D	4A	4B	4C	4D

## Instructions

- Vortex the Incubation Solution, Forward Probes and Reverse Probes and spin down.
- Prepare Incubation Mixes in PCR Strip 1: Using forward pipetting, first transfer the Incubation Solution to all tubes of the strip, then all Frw Probes to the applicable tubes of the strip, and last all Rev Probes to the applicable tubes of the strip.


### Run 1:

Addition order	Reagent	Well							
		1A	1B	1C	1D	2A	2B	2C	2D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Frw Probes A	Panel 1 Frw Probes B	Panel 1 Frw Probes C	Panel 1 Frw Probes D	Panel 2 Frw Probes A	Panel 2 Frw Probes B	Panel 2 Frw Probes C	Panel 2 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Rev Probes A	Panel 1 Rev Probes B	Panel 1 Rev Probes C	Panel 1 Rev Probes D	Panel 2 Rev Probes A	Panel 2 Rev Probes B	Panel 2 Rev Probes C	Panel 2 Rev Probes D

### Run 2:

Addition order	Reagent	Well							
		3A	3B	3C	3D	4A	4B	4C	4D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Frw Probes A	Panel 3 Frw Probes B	Panel 3 Frw Probes C	Panel 3 Frw Probes D	Panel 4 Frw Probes A	Panel 4 Frw Probes B	Panel 4 Frw Probes C	Panel 4 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Rev Probes A	Panel 3 Rev Probes B	Panel 3 Rev Probes C	Panel 3 Rev Probes D	Panel 4 Rev Probes A	Panel 4 Rev Probes B	Panel 4 Rev Probes C	Panel 4 Rev Probes D

 **NOTE:** Pipette the Incubation Solution carefully to avoid foaming.


 **IMPORTANT:** The Incubation Solution will be used to prepare Incubation Mixes for the other panels. Do not discard.

- Seal the PCR Strip 1 with caps. Vortex and spin down briefly. Store at room temperature until use.

 **IMPORTANT:** Make sure that all applicable reagents are added to each Incubation Mix. The final volume shall be 100 µL

 **TIME SENSITIVE STEP:** The incubation setup using the F.A.S.T. must be started within 30 minutes from preparation of the Incubation Mix.

- Rotate the Reagent Source Plate (384-well) 90 degrees clockwise to facilitate pipetting

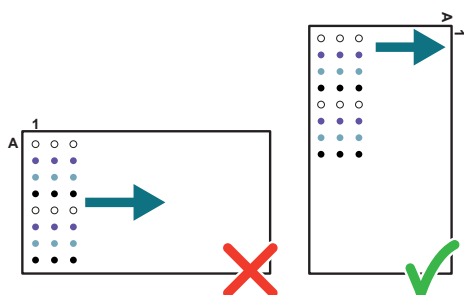

- Using a multichannel pipette, transfer 10 µL of each Incubation Mix from the PCR Strip 1 to the Reagent Source Plate 1, according to the plate layout in the figure below. Use reverse pipetting, and do not change pipette tips between wells. Make sure to pipette to the bottom of the wells.

Run 1:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	1A		1B		1C		1D		2A		2B		2C		2D										
B																									
C	1A		1B		1C		1D		2A		2B		2C		2D										
D																									
E	1A		1B		1C		1D		2A		2B		2C		2D										
F																									
G	1A		1B		1C		1D		2A		2B		2C		2D										
H																									
I	1A		1B		1C		1D		2A		2B		2C		2D										
J																									
K	1A		1B		1C		1D		2A		2B		2C		2D										
L																									
M	1A		1B		1C		1D		2A		2B		2C		2D										
N																									
O	1A		1B		1C		1D		2A		2B		2C		2D										
P																									

Run 2:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	3A		3B		3C		3D		4A		4B		4C		4D										
B																									
C	3A		3B		3C		3D		4A		4B		4C		4D										
D																									
E	3A		3B		3C		3D		4A		4B		4C		4D										
F																									
G	3A		3B		3C		3D		4A		4B		4C		4D										
H																									
I	3A		3B		3C		3D		4A		4B		4C		4D										
J																									
K	3A		3B		3C		3D		4A		4B		4C		4D										
L																									
M	3A		3B		3C		3D		4A		4B		4C		4D										
N																									
O	3A		3B		3C		3D		4A		4B		4C		4D										
P																									

The numbers indicate the panel numbers and the letters indicate the different blocks within the panels.

- Seal the Reagent Source Plate 1 with a new adhesive film and spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
- Immediately continue to [20.2 Prepare Incubation Plates and perform incubation](#).

## 20.2 Prepare Incubation Plates and perform incubation

During this step, the prepared Incubation Mixes are mixed with the samples in one Incubation Plate per panel using the F.A.S.T. instrument prior to incubation.



As the F.A.S.T. deck can only hold a limited number of plates, perform the instruction twice, once for Run 1 and once for Run 2 (one run per Reagent Source Plate).

**Prepare bench**

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Reagent Source Plates, prepared in previous step
- 4x 384-well PCR plates (skirted)
- Adhesive films


**Before you start**

- Allow the refrigerated Sample Source Plate and Sample Dilution Plate to reach room temperature.
- Mark four new 384-well PCR plates:
  - For Run 1: “Incubation Plate [1–2]”.
  - For Run 2: “Incubation Plate [3–4]”.

**Instructions**

1. In the open F.A.S.T. software, Select *File/Open* and choose the applicable protocol from the Explore Window and select the protocol for the applicable run according to:

Setup	Run	Protocol name
Setup 1	Run 1	Olink Incubation CARDIO INF
	Run 2	Olink Incubation NEURO ONC
Setup 2	Run 1	Olink Incubation CARDIO II INF II
	Run 2	Olink Incubation NEURO II ONC II


 **IMPORTANT:** Make sure to select the correct protocol. Selecting the wrong protocol will result in unusable data.

2. Place the two Incubation Plates 1–2 on the deck - refer to the software for the correct positions.
3. Carefully remove the adhesive film from the Reagent Source Plate 1.

 **NOTE:** Make sure to use the correct Reagent Source Plate.

4. Place the Reagent Source Plate 1 on the F.A.S.T. deck. Refer to the software for the correct position.
5. Click *Run*.  
*Result: The F.A.S.T. transfers 0.6 µL of each Incubation Mix from the Reagent Source Plate into the Incubation Plates. The run takes approximately 10 minutes to be completed and can be monitored in the protocol tab.*
6. When the F.A.S.T. protocol is paused, and a pop-up window appears on the screen, remove Incubation Plates 1–2 from the F.A.S.T. deck.
7. Inspect the Incubation Plates 1–2 to ensure that there is liquid at the bottom of all wells, and that there are no bubbles present.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

 **IMPORTANT:** If bubbles are present, seal the Incubation Plate(s) with new adhesive film(s) and spin at 400–1000 x g for 1 minute, then carefully remove the adhesive film(s) and check again. Do not vortex. If bubbles are still present, puncture them using a syringe needle. Change needles between wells to avoid cross-well contamination.

8. Place Incubation Plates 1–2 back in their previous positions on the F.A.S.T. deck.
9. Vortex the Sample Source Plate and Sample Dilution Plate briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells and carefully remove the adhesive films.
10. Place the Sample Source Plate and Sample Dilution Plate on the F.A.S.T. deck. Refer to the software for the correct positions.

11. Click *Resume* to continue the protocol.

*Result:*

*The F.A.S.T. transfers 0.2 µL of samples from the Sample Source Plate and Sample Dilution Plate into the Incubation Plates. The run takes approximately 15 min to be completed.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

12. When the protocol is finished, remove Incubation Plates 1–2 from the deck. Seal with new adhesive films.


 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

13. Spin Incubation Plates 1–2 at 400–1000 x g for 1 minute.


14. Inspect Incubation Plates 1–2 to ensure that all wells contain the same amount of liquid (0.8 µL). Note if there are any wells containing bubbles.

15. Write the time of the incubation starting point on the plates seals and incubate Incubation Plates 1–2 for 16 to 24 hours at +4 °C.

 **NOTE:** It is recommended to keep the incubation time within ±1 hour within a project. The incubation time starts when placing the Incubation Plate at +4 °C and ends when starting PCR1 in ProFlex PCR instrument.

 **NOTE:** Remove the Sample Source Plate, Sample Dilution Plate, and Reagent Source Plate 1 from the F.A.S.T. deck. Treat the plates according to:

Incubation Run	Sample Source Plate	Sample Dilution Plate	Reagent Source Plate
Run 1	Seal with adhesive film and store at +4 °C until start of Run 2.	Seal with adhesive film and store at +4 °C until start of Run 2.	Discard
Run 2	Discard	Discard	Discard

 **IMPORTANT:** Each of the two Setups requires the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

16. Repeat 20.1 Prepare Reagent Source Plate and 20.2 Prepare Incubation Plates and perform incubation for Run 2, using PCR Strip 2, Reagent Source Plate 2 and Incubation Plates 3–4.

17. When finished, clear the F.A.S.T. and shut it down according to the manufacturer's instructions.

# 21. Prepare for day 2

## Prepare bench

- MilliQ water
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution

## Instructions

1. Place 30 mL of MilliQ water at +4 °C overnight.
2. Thaw PCR1 Enhancer at room temperature overnight.
3. Optional: Thaw PCR1 Solution at +4 °C overnight.

# 22. Extension and pre-amplification (PCR1)

During this step, a PCR1 Mix is prepared manually and dispensed into the four Incubation Plates using the Dragonfly. The plates are renamed “PCR1 Plates” and subjected to a PCR reaction using two ProFlex instruments.

## 22.1 Prepare PCR1 Mix

During this step, a PCR1 Mix is prepared manually. The PCR1 Mix must be used within 30 minutes from preparation.

### Prepare bench

- Incubation Plates 1–4, prepared in previous step
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution
- Olink® Explore PCR1 Enzyme (when brought to the lab bench, keep the PCR1 Enzyme in a freezing block (-20 °C))
- MilliQ water
- 1x Falcon tube (50 mL)

### Before you start


- Thaw the PCR1 Solution at +4 °C overnight (optional), or at room temperature before starting the PCR1 setup (it may take several hours) and ensure that it is fully thawed and has reached room temperature.
- Ensure that the PCR1 Enhancer is fully thawed and has reached room temperature.
- Let the refrigerated Incubation Plates reach room temperature.
- Mark the new 50 mL Falcon tube: "PCR1 Mix".
- Switch on the two ProFlex PCR instruments in the post-PCR room.

## Instructions

1. Vortex the PCR1 Solution and PCR1 Enhancer thoroughly and spin down briefly.

 **IMPORTANT:** *Insufficient thawing and vortexing of the PCR1 Enhancer may lead to particles attaching to the syringe and run failure.*


2. Spin the PCR1 Enzyme briefly. Do not vortex.

 **NOTE:** *Always keep the PCR1 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).*

3. Spin the Incubation Plates 1–4 down for 1 minute at room temperature.
4. Prepare a PCR1 Mix in a Falcon tube in the following order, using the volumes indicated in the table below:
  - First add MilliQ water and PCR1 Enhancer and vortex thoroughly.
  - Then add the PCR1 Solution and PCR1 Enzyme, and vortex for 3 seconds.

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	27 000
2	PCR1 Enhancer	3 510
3	PCR1 Solution	3 510
4	PCR1 Enzyme	351
Total		34 371

5. Keep at room temperature until use.

 **TIME SENSITIVE STEP:** *Dispensing of the PCR1 Mix using the Dragonfly must start within 30 minutes from PCR1 Mix preparation.*

## 22.2 Prepare PCR1 Plates and perform PCR1

During this step, the prepared PCR1 Mix is dispensed into the Incubation Plates using the Dragonfly, and the plates are subjected to a PCR reaction in two ProFlex instruments.

The PCR1 Plates must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate. Since each ProFlex can hold two plates, prepare two plates at a time. Perform the instructions in the following order:

- Dispense PCR1 Mix into Incubation Plates 1–2 using the Dragonfly. Start a PCR1 run for these two plates on one of the ProFlex instruments.
- Dispense PCR1 Mix into Incubation Plates 3–4 plates using the Dragonfly. Start a PCR1 run for these plates on the second ProFlex instrument.

### Prepare bench


- Incubation Plates 1–4 at room temperature, prepared in previous step
- PCR1 Mix, prepared in previous step
- Timer
- 3x Disposable reservoirs (10 mL)
- 3x Disposable ultra-low retention syringes with plungers
- Manual pipette (5 or 10 mL)
- Filter pipette tips
- Adhesive films

### Before you start


- Set a timer to 10 minutes.

## Instructions

1. Start the PCR protocol Olink PCR1 on the two ProFlex PCR instruments. Pause when the PCR block temperature reaches 50 °C.

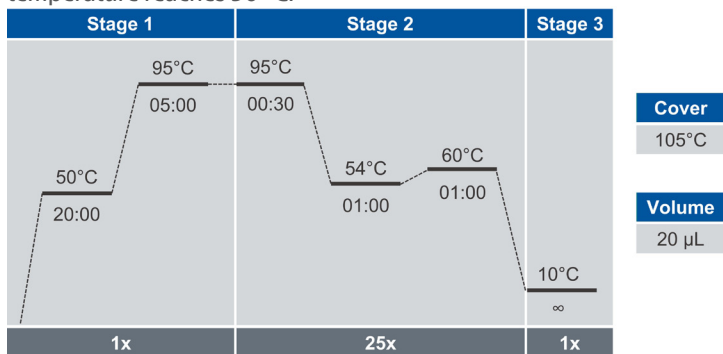


2. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink PCR1 Setup plate v4.
  - Attach three syringes in position B2, B3, and B4.
3. Slide the reservoir tray to the filling position (A) and place three new reservoirs in position B2, B3 and B4 (B).

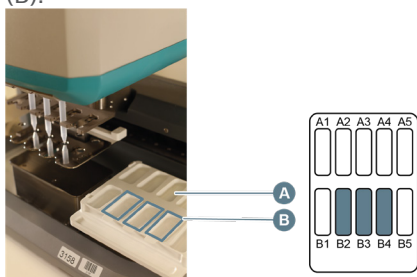

4. Transfer 11 mL of PCR1 Mix into each of the three reservoirs.

**⚠ IMPORTANT:** The syringes and PCR1 Mix are used to prepare all four PCR1 Plates. Do not discard until all PCR1 Plates are complete.

5. Carefully slide the reservoir tray back to the aspirate position.

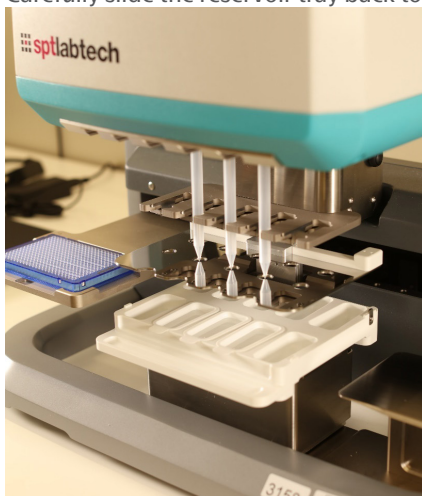


6. Rename Incubation Plate 1 “PCR1 Plate 1” and Incubation Plate 2 “PCR1 Plate 2”. Spin down the plates.
7. Carefully remove the adhesive film from PCR1 Plate 1 and place it in the Dragonfly plate position (to the left), with well A1 in the top left corner.



- Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol. Start the timer when PCR1 Mix is added to the first well of the plate.

*Result:*

*Dragonfly dispenses 19 µL of PCR1 Mix into each well of the PCR1 Plate 1.*

 **TIME SENSITIVE STEP:** *The PCR1 Plate must be placed in the ProFlex™ exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate.*

- When the Dragonfly has returned the PCR1 Plate 1 to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.
- Inspect the PCR1 Plate 1 to ensure that all wells contain the same amount of liquid (19.8 µL). Using the MixMate or manual vortexing, vortex the plate thoroughly to ensure that all wells are mixed.
- Repeat steps 7–10 for PCR1 Plate 2.
- In the Post-PCR room, centrifuge PCR1 Plates 1–2 at 400–1000 x g for 1 minute.
- Inspect PCR1 Plates 1–2 to ensure that all wells contain the same amount of liquid (19.8 µL). Note any deviations.
- When the timer ends (after 10 minutes), place PCR1 Plates 1–2 in one of the two pre-heated ProFlex instruments and click *Resume* to run the Olink PCR1 protocol.
- Repeat steps 6–14 for Incubation Plates 3–4, except rename Incubation Plate 3 as "PCR Plate 3", and Incubation Plate 4 as "PCR Plate 4". Place both plates in the second ProFlex.
- When finished, clear the Dragonfly and shut it down according to instructions in the Olink® Explore Overview User Manual.
- When the protocols are finished (~1 hour 55 minutes), continue to [23. Pool PCR1 products](#), or store the four PCR1 Plates at +4 °C if used the same day.

 **SAFE STOPPING POINT:** *The PCR1 Plates can be stored at -20 °C for up to 2 weeks*

*PCR1 plate layout.*

*The numbers indicate the sample numbers. The colors indicate the different blocks within the panel:*

*White = block A, purple = block B, blue = block C, black = block D.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

## 23.Pool PCR1 products

During this step, the PCR1 products from the PCR1 Plates are pooled into one PCR1 Pooling Plate using the Microlab STAR instrument.

### **Prepare bench**

- PCR1 Plates, prepared in previous step
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x 384-well PCR plate (skirted)
- 1x water reservoir (300 mL)
- 50 µL Conductive Filter Tips (1x rack per panel, 1x rack for water)
- Adhesive films
- Temperature-resistant labels or marker pen

### **Before you start**

- Thaw PCR1 Plates at room temperature if frozen.
- Mark the new 384-well PCR plate: “PCR1 Pooling Plate”.
- Switch on the Microlab STAR system, and open the Hamilton Run Control software.

## Instructions

18. Make sure that PCR1 Plates are thawed and properly sealed, then vortex the plates and spin down at 400–1000 x g for 1 minute at room temperature.
19. Inspect the wells of PCR1 Plates to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells. Spin down the plates again if necessary.
20. In Run Control, select the protocol PCR1 Pooling and click the *Start* button.
21. Select the number of Destination Pooling Plates and the number of Panels being Pooled for each, then click *OK*.
22. Pull out all carriers to the load position and prepare the Microlab STAR deck according to the software instructions.
  - Add MilliQ water to the reservoir.
  - Place PCR1 Plates on the carrier.
  - Carefully remove the adhesive films.
  - Fill Tip carrier in selected positions.
  - Push in Water Reservoir manually.
23. Click *OK* in the software to load the tip and plate carriers automatically and begin the run.  
*Result:*  
*The Microlab STAR automatically scans the tips, dispenses 12 µL MilliQ water into each well of the PCR1 Pooling Plate, and pools 3 µL of each PCR1 product from each sample into one well per panel. The run takes approximately 6 minutes to be completed.*
24. When the protocol is finished, remove the PCR1 Pooling Plate and seal it with a new adhesive film. Keep the Microlab STAR on for later use.
25. Vortex the PCR1 Pooling Plate and spin down at 400–1000 x g for 1 minute.
26. Inspect the PCR1 Pooling Plate to ensure that all wells contain the same amount of liquid (24 µL).
27. Remove PCR1 Plates containing the remaining PCR products and seal them with new adhesive films. Store them at 20 °C for up to 2 weeks in case of potential reruns.
28. Continue to [24. Amplification and sample indexing \(PCR2\)](#), or store the PCR1 Pooling Plate at +4 °C until ready to use (the same day).

### PCR1 Pooling Plate layout.

The numbers indicate the sample numbers. The colors indicate the panel numbers:

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 24. Amplification and sample indexing (PCR2)

During this step, a PCR2 Mix is prepared manually and then mixed with the samples along with index primers (unique for each sample) using the Microlab STAR. The samples are then subjected to a second PCR reaction.

## 24.1 Prepare PCR2 Mix

During this step, a PCR2 Mix is prepared manually. The PCR2 Mix must be used within 15 minutes from preparation.

### Prepare bench

- PCR1 Pooling Plate, prepared in previous step
- Olink® Explore PCR2 Solution
- Olink® Explore PCR2 Enzyme (when brought to the lab bench, keep the PCR2 Enzyme in a freezing block (-20 °C))
- Olink® Explore Index Plate 1
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Filter pipette tips
- Temperature-resistant labels or marker pen

### Before you start

- Thaw the PCR2 Solution and the Index Plate 1 at room temperature.
- If stored at +4 °C, allow the PCR1 Pooling Plate to reach room temperature.
- Mark the new 15 mL tube: "PCR2 Mix".
- Switch on one ProFlex PCR instrument. No preheating is required.

## Instructions

1. Vortex the PCR2 Solution and spin it briefly.
2. Vortex the Index Plate 1 and spin it at 400–1000 x g for 1 minute.
3. Make sure that the PCR1 Pooling Plate is properly sealed, then vortex it and spin at 400–1000 x g for 1 minute.
4. Spin the PCR2 Enzyme briefly. Do not vortex.



**NOTE:** Always keep the PCR2 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).

5. Prepare a PCR2 Mix in a Falcon tube following the order and volumes according to:

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	7 076
2	PCR2 Solution	1 015
3	PCR2 Enzyme	21
	Total	8 112

5. Vortex the PCR2 Mix thoroughly. Aliquot to 96 well PCR plate with at least 72 uL/well. Keep at room temperature until use.



**TIME SENSITIVE STEP:** Start the dispensing of the PCR2 Mix within 15 minutes from preparation.

## 24.2 Prepare PCR2 Plate and perform PCR2

During this step, the prepared PCR2 Mix is mixed with the samples along with index primers using the Microlab STAR. The samples are then subjected to a second PCR reaction.

### Prepare bench


- PCR1 Pooling Plate (at room temperature), prepared in previous step
- PCR2 Mix, prepared in previous step
- Olink® Explore Index Plate 1
- 1x 384-well PCR plate (skirted)
- 1x 96-well PCR plate with PCR2 Master Mix (skirted), prepared in previous step
- 50 µL Conductive Filter Tips (6x rack per PCR2 plate)
- Adhesive films
- Temperature-resistant labels or marker pen

### Before you start

- Mark the new 384-well PCR plate: "PCR2 Plate".

### Instructions


1. Open Hamilton Run Control and select the protocol *PCR2\_Setup* and click *Start*.
2. Select the number of PCR2 plates being prepped and the number of Panels in each plate, and click *OK*.
3. Centrifuge Index Plate 1 at 400–1000 x g for 1 minute and inspect the plate to ensure that all wells contain the same amount of liquid (20 µL). If a well is empty or contains a lower volume, contact Olink Support.
4. Carefully remove the adhesive films from the Index Plate 1 and the PCR1 Pooling Plate. Make sure that no air bubbles are trapped at the bottom of the wells of the PCR1 Pooling Plate.
5. Pull out all carriers and prepare the Microlab STAR deck according to the software instructions.
6. Click *OK* once the deck is loaded, then the system will automatically load the carriers and begin the protocol.  
*Result: Microlab STAR transfers 16 µL of PCR2 Mix, 2 µL of Index Primers from Index Plate 1 and 2 µL of PCR1 products from PCR1 Pooling Plate into the applicable wells of the PCR2 Plate. The run takes approximately 8 minutes.*
7. When the protocol is finished, remove the PCR2 Plate and seal it with a new adhesive film. Keep the Microlab STAR on for later use.

 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

 **TIME SENSITIVE STEP:** Start the PCR2 protocol within 5 minutes from end of Microlab STAR protocol.

8. Vortex and spin down at 400–1000 x g for 1 minute at room temperature.
9. Inspect the PCR2 Plate to ensure that all wells contain the same amount of liquid (20 µL).
10. Place the PCR2 Plate in the ProFlex and add a balance plate to the other side of the ProFlex.

11. Click Open and select the protocol 01link Index PCR2. Click Start.

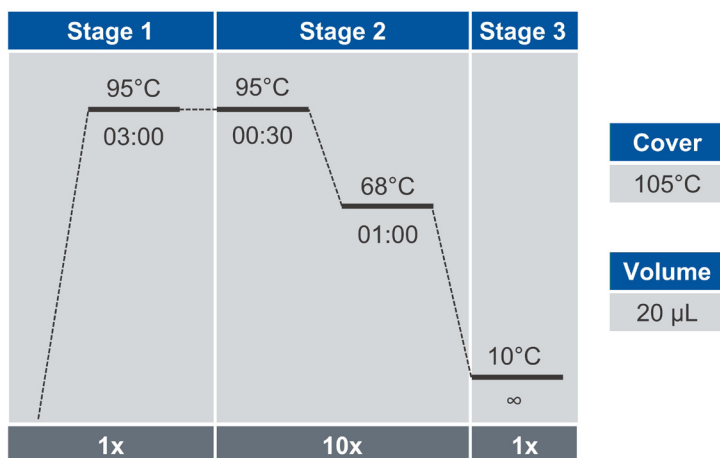

- Remove the PCR1 Pooling Plate containing the remaining PCR products from the Microlab STAR and seal it with a new adhesive film. Store it at -20 °C for up to 2 weeks in case of potential reruns.
- Discard the Index Plate 1.
- When the PCR protocol is finished (~25 minutes), continue to 25. Pool PCR2 products, or store the PCR2 Plate at +4 °C until use (the same day).

**SAFE STOPPING POINT:** The PCR2 Plate can be stored at -20 °C for up to 2 weeks.

PCR2 Plate layout

The numbers indicate the sample numbers.

The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

## 25.Pool PCR2 products

During this step, all PCR2 products belonging to the same panel are pooled into one column of the PCR2 Pooling Plate using the Microlab STAR. The Olink libraries are then manually transferred to one microcentrifuge tube per panel. Each tube contains amplicons from 96 samples, including controls.

### Prepare bench

- PCR2 Plate, prepared in previous step
- 1x 96-well PCR plate (skirted)
- Microcentrifuge tubes (1.5 mL, 1x tube per panel)
- 50 µL Conductive Filter Tips (1x rack per pooling plate)
- Manual pipette (10–100 µL)
- Filter pipette tips
- Adhesive films
- Temperature-resistant labels or marker pen

### Before you start

- Thaw PCR2 Plate at room temperature if frozen.
- Mark the new 96-well PCR plate: "PCR2 Pooling Plate".
- Mark four new microcentrifuge tubes: "PCR2 [1–4, depending on the number of panels]".

### Instructions

1. Open Hamilton Run Control and select the applicable protocol PCR2\_Final\_Pooling and click *Start*.
2. Select the number of Destination Pooling Plates and the number of Panels being pooled in each, then click *OK*.
3. Make sure that the PCR2 Plate is thawed and properly sealed, then vortex and spin it down at 400–1000 x g for 1 minute at room temperature to ensure that all wells are mixed.
4. Inspect the wells of the PCR2 Plate to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells.
5. Pull out all carriers and prepare the Microlab STAR deck according to the software instructions.
6. Once loaded, click *OK* to automatically load the carriers and begin the protocol.  
*Result:*  
*Microlab STAR pools 3 µL from each row of a given Panel into a single well of the PCR2 Pooling Plate. The result is one column of pooled PCR2 products per panel in the PCR2 Pooling Plate.*
7. When finished, remove the PCR2 Pooling Plate from the worktable. Seal the plate with a new adhesive film, vortex the plate and spin down at 400–1000 x g for 1 minute.
8. Inspect the PCR2 Pooling Plate to ensure that every applicable well contains the same amount of liquid (36 µL in columns 1, 3, 5 and 7).



9. Clear the Microlab STAR and shut it down.

CR2 Pooling Plate layout.

The numbers and colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1		2		3		4					
B	1		2		3		4					
C	1		2		3		4					
D	1		2		3		4					
E	1		2		3		4					
F	1		2		3		4					
G	1		2		3		4					
H	1		2		3		4					

10. Carefully remove the adhesive film from the PCR2 Pooling Plate.

11. Using a single-channel pipette transfer the pooled PCR2 products from the PCR2 Pooling Plate to the PCR2 Tubes as described in table below. If running a single panel, only transfer from column 1 to PCR2 tube 1 will be applicable. Use **forward pipetting** and change pipette tip after each well.

Volume (µL)	From column	To tube
30	1	PCR2 1
30	3	PCR2 2
30	5	PCR2 3
30	7	PCR2 4

12. Vortex the PCR2 Tubes and spin down briefly.

13. Remove the PCR2 Plate containing the remaining PCR2 products from the instrument, seal it with a new adhesive film and store it at -20 °C for up to 2 weeks in case of potential reruns.

14. Discard the PCR2 Pooling Plate.

15. Continue to the Library purification step in the workflow manual, or store the PCR2 Tubes at +4 °C until use (the same day).

> **SAFE STOPPING POINT:** The PCR2 Tubes can be stored at -20 °C for up to 2 weeks.

## 26. Library purification

During this step, the Olink Libraries are purified using magnetic beads and the eluates are transferred into one new microcentrifuge tube per panel.

### Prepare bench

- PCR2 Tubes 1–4, prepared in previous step
- Agentcourt AMPure XP bottle
- 96% Ethanol (EtOH)
- MilliQ water
- DynaMag™-2 Magnet
- Timer
- 8 Microcentrifuge tubes (1.5 mL)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Pipette 5 mL
- Filter pipette tips

### Before you start

- Let the refrigerated Agentcourt AMPure XP bottle reach room temperature.
- Mark four new microcentrifuge tubes: “BP [1–4]” (for “Bead Purification”).
- Mark four new microcentrifuge tubes: “Lib [1–4]”.
- Mark the new 15 mL Falcon tube: “70% EtOH”.
- Set a timer to 5 minutes.

### Instructions

1. Freshly prepare a sufficient amount of 70% EtOH for the number of Libraries to purify according to the table below. Manually transfer first the MilliQ water and then the 96% EtOH into the Falcon tube.

Reagent	Volume (mL) for							
	1 library	2 Libraries	3 Libraries	4 Libraries	5 Libraries	6 Libraries	7 Libraries	8 Libraries
MilliQ water	0.5	0.8	1.1	1.4	1.6	1.9	2.2	2.5
96% EtOH	1.5	2.2	2.9	3.6	4.4	5.1	5.8	6.5
Total (70% EtOH)	2	3	4	5	6	7	8	9

2. Shake and vortex the Agentcourt AMPure XP bottle vigorously to resuspend the magnetic beads.
3. Transfer 80 µL from the Agentcourt AMPure XP bottle to each BP Tube.
4. Transfer 50 µL from each PCR2 Tube to the corresponding BP Tube according to:


Volume (µL)	From tube	To tube
50	PCR2 1	BP 1
50	PCR2 2	BP 2
50	PCR2 3	BP 3
50	PCR2 4	BP 4



**NOTE:** Store the PCR2 Tubes at -20 °C in case the purification needs to be repeated.

5. Pipette-mix 10 times to thoroughly mix the Libraries with the beads. Change pipette tip between every tube.

6. Start the timer after the last tube has been mixed and incubate the BP Tubes 1–4 for 5 minutes at room temperature.
7. After the incubation, place the BP Tubes 1–4 on the DynaMag-2 Magnetic stand and leave them for 2 minutes to separate the beads from the solution.

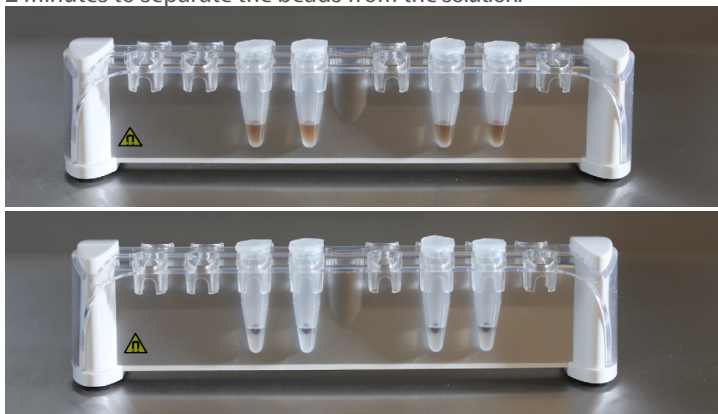

8. With the tubes still on the magnetic stand, carefully open the lids and discard 125  $\mu$ L supernatant using a single-channel pipette. Do not disturb the beads.
9. With the tubes still on the magnetic stand, wash the beads:
  - a. Add 500  $\mu$ L of 70% EtOH to every BP Tube. Pipette onto the opposite wall from the beads.



**NOTE:** Make sure not to disturb the beads.

- b. Leave the tubes to incubate for 30 seconds.
- c. Using a single-channel pipette, aspirate the EtOH, without disturbing the beads. Discard the EtOH.
- d. Repeat steps a) – c) once.



**IMPORTANT:** Make sure that no EtOH remains in the BP Tubes after this step. Use a smaller pipette to remove any residual EtOH.

10. Leave the tubes with the lids open on the magnetic stand for 2 minutes for the beads to air dry.
11. Close the tubes and remove them from the magnetic stand.
12. Add 50  $\mu$ L of MilliQ water to the BP Tubes 1–4 and pipette-mix 10 times towards the beads to elute the purified Libraries from the beads.
13. Incubate the tubes for 2 minutes at room temperature.
14. Place BP Tubes 1–4 on the magnetic stand and leave them for 1 minute to separate the beads from the eluted Library solution.
15. With BP Tubes 1–4 still on the magnetic stand, transfer 45  $\mu$ L of eluate from the BP Tubes to the corresponding Lib Tubes according to:

Volume ( $\mu$ L)	From tube	To tube
45	BP 1	Lib 1
45	BP 2	Lib 2
45	BP 3	Lib 3
45	BP 4	Lib 4



**IMPORTANT:** Make sure not to disturb or aspirate the beads.

16. Discard BP Tubes 1–4.
17. Continue to [27. Quality control](#).




**SAFE STOPPING POINT:** The Lib Tubes can be stored at -20 °C for up to 4 weeks.

# 27. Quality control


During this step, the four purified Olink Libraries are quality controlled on the Bioanalyzer using the High Sensitivity DNA kit or on the TapeStation using the High Sensitivity D5000 kit, according to the Manufacturer's instructions.

The electropherograms in the figures below display typical results for an Olink Library. The purified Olink Library appears as a single or double peak around 150 bp. Peaks of larger sizes represents bubble products and do not have any impact on sequencing results, see <https://emea.support.illumina.com/bulletins/2019/10/bubble-products-in-sequencing-libraries--causes--identification-.html> for more information.

Bioanalyzer's electropherogram.

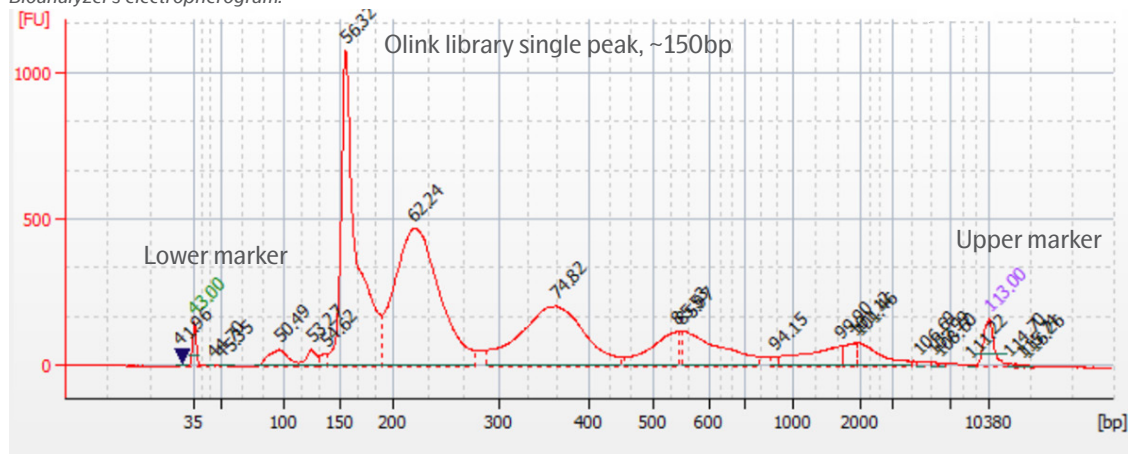

TapeStation's electropherogram.

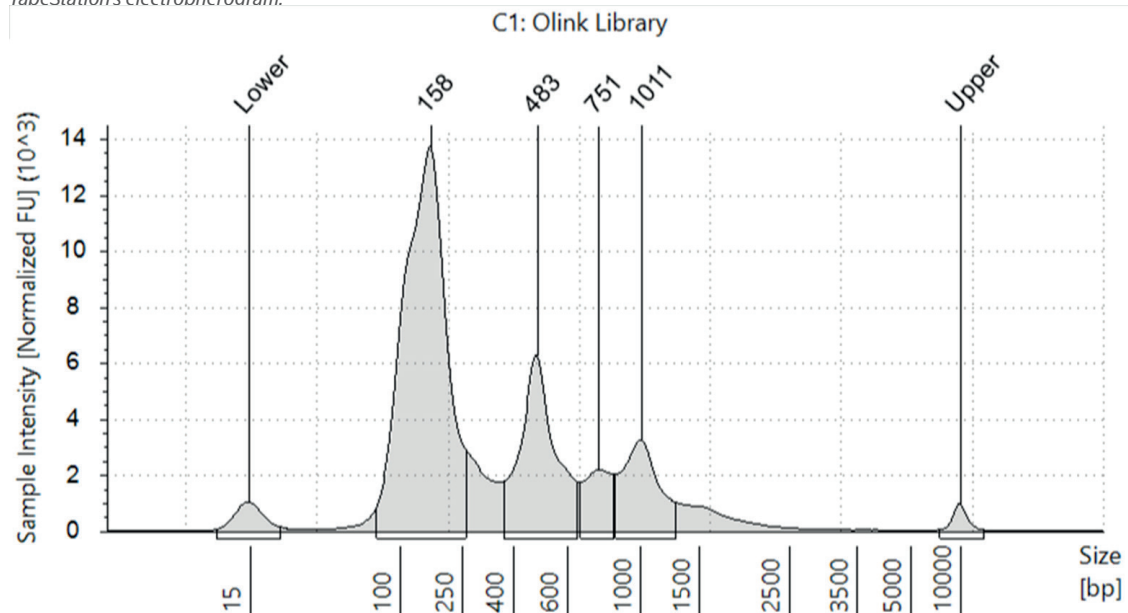

For expected results of a successful ladder run, refer to the Manufacturer’s Manual. If any of the deviations in the table below should occur in the electropherogram, do not continue to sequencing. Instead, perform the suggested corrective action.

Peak deviation	Possible cause	Action
No Library peak present at 150bp.	1) No PCR1 amplification has taken place, and therefore there are no PCR2 products and no Library 2) The bead purification failed	Rerun the quality control with unpurified Library. If a peak is present at 150bp: purify a new aliquot of the unpurified Library and rerun the quality control. If successful, proceed to sequencing.  If there is no 150bp peak present in the unpurified Library, no PCR product has been generated. Repeat the Library preparation, quality control and sequencing.
No Library peak present at 150bp, but a smaller peak at 120bp	The index primers were not included in the PCR2 reaction (the 120bp peak corresponds to the PCR1 product). 1) The Index plate was empty. 2) There was no transfer of index primers from the Index Plate to the PCR2 Plate due to <i>epMotion</i> ® failure.	Contact Support. Make sure to centrifuge and visually inspect the Index Plate before starting the PCR2 setup. Make sure that the <i>epMotion</i> ® is calibrated, functional and that the correct protocol is used.

## 28. Next generation sequencing

Next generation sequencing is performed using either of the following Illumina instruments:

- NextSeq™ 550
- NextSeq™ 2000
- NovaSeq™ 6000
- NovaSeq™ X Plus

As the workflow differs between instruments, refer to the applicable Olink® Explore Sequencing User Manual for instructions on how to sequence Olink Libraries.

# Part 4: Laboratory instructions for 96 samples using SPT Labtech Mosquito® and Hamilton Microlab® STAR

This section provides instructions on how to perform each step of the Olink® Explore 3072 laboratory workflow, using Microlab® STAR from Hamilton Company. The eight panels must be prepared on two separate occasions: four panels during Setup 1 and four panels during Setup 2. The instructions below describe how to perform the workflow for one Setup (four panels) at a time.

The panels CARDIO, INF, NEURO, and ONC are prepared during Setup 1. The panels CARDIO II, INF II, NEURO II, and ONC II are prepared during Setup 2.

Note that each of the two Setups requires preparation of a new Sample Source Plate. The Sample Plate from Setup 1 can however be reused for Setup 2.

If the panels are prepared on more than two occasions, additional Olink® Explore Sample Prep Reagents will be required.

## 29. Preparations

### 29.1 Plan the study

A successful study requires careful planning. Perform the following before starting the experiment:

- Decide the number of samples and controls required to get the data that you want from the study.
- Optional Sample Control: It is recommended to include a pooled plasma sample in duplicate on each plate. These samples are used to assess potential variation between runs and plates, for example to calculate inter-assay and intra-assay CV, as well as for troubleshooting. When including the Sample Controls, 88 user samples can be processed simultaneously.
- When running more than one Sample Plate, make sure that the samples are appropriately randomized across all plates and that necessary steps for normalizing and combining data are taken. If you need assistance, consult a statistician or contact Olink Support before running the study.
- Consult the Olink white paper “Strategies for design of protein biomarker studies” ([www.olink.com/whitepapers](http://www.olink.com/whitepapers)) and the sample randomization guidelines ([www.olink.com/faq/sample-randomization](http://www.olink.com/faq/sample-randomization)).



**NOTE:** Sample randomization helps to ensure that technical variation does not overlap with biological variation.

## 29.2 Important information

### Panel nomenclature

As the panels differ between Setup 1 and Setup 2, the panel names are not mentioned in this manual. Instead, the panels are referred to as Panel 1–4, as described below:

Panel number	Panel name for Setup 1	Panel name for Setup 2
1	CARDIO	CARDIO II
2	INF	INF II
3	NEURO	NEURO II
4	ONC	ONC II

Throughout the instructions, plates and tubes are marked with names and numbers, for example “Incubation Plate 1”. When using the marked plates and tubes, make sure that the number on the plate or tube corresponds to the number of the applicable panel, i.e when running Panel 1, use XX Plate 1, and when running Panel 4, use XX Plate 4.

### Reagent lots

Before starting each step of the workflow, make sure that the lot number of each reagent matches the lot numbers indicated in the Lot Configuration document provided with the kit.

### Vortexing

Correct vortexing is essential to generate reproducible results. Review instructions in the Olink Explore Overview User Manual prior to starting the laboratory workflow.

Plate type	Speed (rpm)	Time (s)
96-wells	2500	30
384-wells	3000	30

### 384-well PCR plates

Make sure to use the twin.tec 384-well skirted PCR plate from Eppendorf (art nr. 0030128508), as stated in the Olink Explore Overview User Manual. All instrument protocols have been calibrated for this specific plate. Other models should not be used.

## 29.3 Prepare the samples

During this step, samples are manually transferred to the Sample Plate. It is recommended to use the Sample Plate within the same day of preparation to minimize the number of freeze-thaw cycles. The Sample Plate can however be stored at -80 °C and reused for preparation of Setup 2.



**NOTE:** The Olink Explore protocol is optimized and validated for plasma and serum samples. Contact Olink Support for more information regarding alternative sample types.

### Prepare bench

- Samples (provided by the user)
- 1x 96-well PCR plate, preferably with full skirt
- Manual pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive Film
- Temperature-resistant labels or marker pen

### Before you start

- Select the samples to be included in the study.



**IMPORTANT:** The samples must be undiluted, as dilution of samples may result in lower detectability.

- Thaw the samples at room temperature if frozen.
- Mark the 96-well Sample Plate with a simple alphanumeric code that you can later identify (“A, B, C”, “1, 2, 3”, or “A1, A2, A3”) using temperature-resistant labels or marker pen. Use unique sample identification names or numbers.

### Instructions

1. Transfer the samples into the Sample Plate, according to the plate layout. Make sure that samples are added to every applicable well.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1	9	17	25	33	41	49	57	65	73	81	
B	2	10	18	26	34	42	50	58	66	74	82	
C	3	11	19	27	35	43	51	59	67	75	83	
D	4	12	20	28	36	44	52	60	68	76	84	
E	5	13	21	29	37	45	53	61	69	77	85	
F	6	14	22	30	38	46	54	62	70	78	86	
G	7	15	23	31	39	47	55	63	71	79	87	
H	8	16	24	32	40	48	56	64	72	80	88	

2. Seal the Sample Plate using an adhesive film or individual seals.
3. Store the Sample Plate at +4 °C if used the same day, otherwise at -80 °C.



**IMPORTANT:** Avoid subjecting the samples to multiple freeze-thaw cycles.



## 30. Prepare Sample Source Plate

During this step, samples are manually transferred from the prepared Sample Plate into the Sample Source Plate, and controls are added to the Sample Source Plate. The Sample Source Plate must be used within the same day of preparation.

**⚠ IMPORTANT:** Note that each of the two Setups require the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

**⚠ IMPORTANT:** Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.

### Prepare bench

- Sample Plate, prepared in previous step
- Olink® Explore Negative Control
- Olink® Explore Plate Control
- Sample Control (*optional, provided by the user*)
- 1x 384-well PCR plate (skirted)
- Manual pipette (0.5–10 µL)
- Manual multichannel pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Ensure that the Sample Plate has been prepared according to section [29.3 Prepare the samples](#).
- If frozen, thaw the Sample Plate at room temperature.
- Thaw the Negative Control, Plate Control and recommended Sample Control at room temperature.
- Mark the 384-well PCR plate: "Sample Source Plate".

## Instructions

- Using the MixMate or manual vortexing, vortex the 96-well Sample Plate and spin at 400–1000 x g for 1 minute at room temperature.
- Using a multichannel pipette, transfer 10 µL of each sample into the 384-well Sample Source Plate according to the plate layout shown in the figure below. Use **forward pipetting**, change pipette tips between every column, and make sure that no air bubbles are trapped at the bottom of the wells.

**⚠ IMPORTANT:** The plate layout of the Sample Source Plate has changed and is only compatible with version 4 of the Olink Explore instrument protocols. Make sure that you have version 4 of all instrument protocols installed before proceeding. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.

- Vortex the Negative Control, Plate Control and Sample Control and spin briefly.
- Using a single-channel pipette, transfer 10 µL of Negative Control (NC), Plate Control (PC) and Sample Control (SC) to each of the applicable wells in column 23 of the 384-well Sample Source Plate according to the plate layout shown in the figure below. Change pipette tip between every control sample.
- Seal the Sample Source Plate with a new adhesive film.

**⚠ IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

- Spin the Sample Source Plate at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells. Store the plate at +4 °C until use (the same day).
- Seal the Sample Plate with a new adhesive film. Store at -80 °C.

Sample Source Plate layout.

The numbers indicate the sample numbers. SC = Sample Control, NC = Negative Control, PC = Plate Control.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1		9		17		25		33		41		49		57		65		73		81		SC	
B																								
C	2		10		18		26		34		42		50		58		66		74		82		SC	
D																								
E	3		11		19		27		35		43		51		59		67		75		83		NC	
F																								
G	4		12		20		28		36		44		52		60		68		76		84		NC	
H																								
I	5		13		21		29		37		45		53		61		69		77		85		NC	
J																								
K	6		14		22		30		38		46		54		62		70		78		86		PC	
L																								
M	7		15		23		31		39		47		55		63		71		79		87		PC	
N																								
O	8		16		24		32		40		48		56		64		72		80		88		PC	
P																								

# 31. Sample Dilution

During this step, Sample Diluent is dispensed into the Sample Dilution Plate using the Dragonfly and the samples are diluted using the Mosquito. The prepared Sample Dilution Plate must be used within three hours from preparation.

## 31.1 Prepare Sample Dilution Plate

During this step, Sample Diluent is dispensed into Sample Dilution Plate using the Dragonfly.

### Prepare bench

- Olink® Target 96/Explore Sample Diluent
- 1x 384-well PCR plate (skirted)
- 1x Disposable reservoir (10 mL)
- 1x Disposable ultra-low retention syringe with plunger
- Manual pipette (100–1000 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Thaw the Sample Diluent at room temperature
- Mark the new 384-well PCR plate: “Sample Dilution Plate”.




**NOTE:** For convenience, the Sample Diluent can be thawed at +4 °C overnight.

## Instructions

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink Sample Dilution Plate v4.
  - Attach one syringe in position B2.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.


2. Slide the reservoir tray to the filling position (A) and place a new reservoir in position B2 (B).

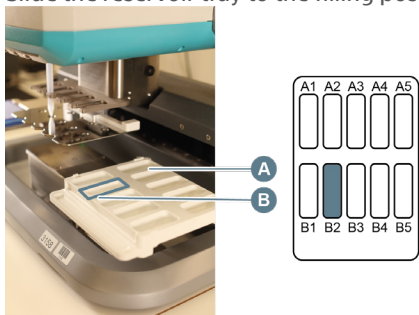

3. Vortex the Sample Diluent briefly, add 6 mL of Sample Diluent into the reservoir and carefully slide the reservoir tray back to the aspirate position.
4. Place the Sample Dilution Plate in the plate position to the left, with well A1 in the top left corner.
5. Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol.

### Result:

*Dragonfly dispenses 9 µL Sample Diluent into each well of quadrant 1–3 and 29 µL in quadrant 4 of the Sample Dilution Plate. Filled wells turn purple in the plate map. The run stops automatically when the Dragonfly has dispensed Sample Diluent into all applicable wells.*

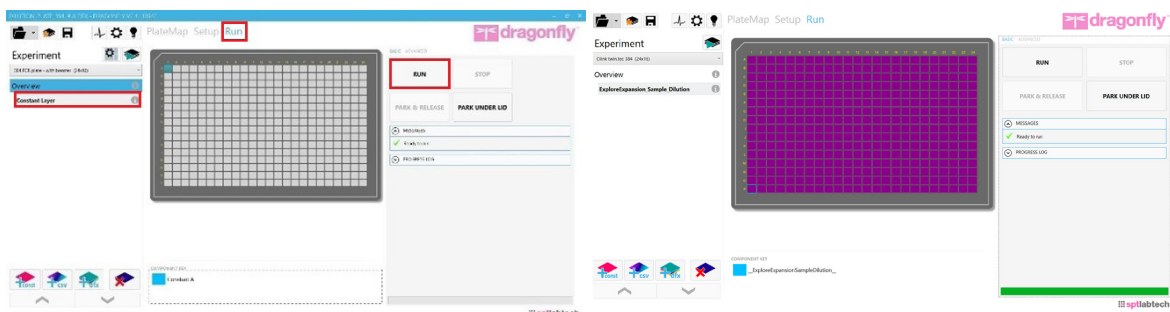

6. When the Dragonfly has returned the Sample Dilution Plate to the plate position and released the plate clamp, remove the Sample Dilution Plate from the instrument and seal it with an adhesive film.
7. Spin the Sample Dilution Plate at 400–1000 x g for 1 minute.
8. Visually inspect the Sample Dilution Plate to ensure that all wells in quadrant 1–3 contain 9 µL of liquid, and that wells in quadrant 4 contain 29 µL. Make sure that there are no bubbles trapped at the bottom of the wells.
9. When finished, clear the instrument and shut it down according to instructions in the Olink® Explore Overview User Manual.
10. Continue to [31.2 Perform Sample Dilution](#), or store the Sample Dilution Plate at +4 °C until use (the same day).

## 31.2 Perform Sample Dilution

During this step, the samples are diluted in four sequential steps using the Mosquito: from 1:1 (undiluted) to 1:10, 1:100, 1:1000, and approximately 1:100 000.

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Adhesive films

### Before you start

- Prepare the Mosquito according to instructions in the Olink® Explore Overview User Manual.

### IMPORTANT:

- Make sure that a spool of Mosquito pipette tips has been loaded into the Mosquito according to the manufacturer's instructions.
- Make sure that the knobs at the back of the two Mosquito humidifiers are set to maximum level.

## Instructions

**⚠ IMPORTANT:** Make sure to vortex the Sample Dilution Plate(s) thoroughly both between dilutions and after the last dilution. If using MixMate, make sure to vortex the Sample Dilution Plate thoroughly with correct MixMate settings, as incorrect settings may lead to low-quality data. Refer to table in [29.2 Important information](#).

1. Let the Sample Source Plate reach room temperature, vortex it briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
2. Carefully remove the adhesive films from the Sample Source Plate and the Sample Dilution Plate.
3. Place the Sample Source Plate in a magnetic clamp booster according to instructions in the Olink® Explore Overview User Manual.
4. Place the Sample Source Plate on the Mosquito deck, refer to the software for the correct position. Insert the corner of the magnetic clamp booster under the small metal holder of the deck as described in the Olink® Explore Overview User Manual (this applies to all plate positions).
5. Place the Sample Dilution Plate in a magnetic clamp booster and place it on the Mosquito deck. Refer to the software for the correct position.

**⚠ IMPORTANT:** Risk of instrument damage! If the magnetic clamp booster is not correctly placed it may collide with the internal parts of the instrument during the run.


6. Click **Run** to start the protocol Olink Sample Dilution 3072.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.

### Result:

Mosquito performs a 1:10 dilution by transferring 1 µL of sample from the Sample Source Plate into quadrant 1 in the Sample Dilution Plate. The run can be monitored in the protocol tab.

7. When the Mosquito protocol is paused and a pop-up window appears on the screen, remove the Sample Source Plate and the Sample Dilution Plate from the deck and from the magnetic clamp boosters.

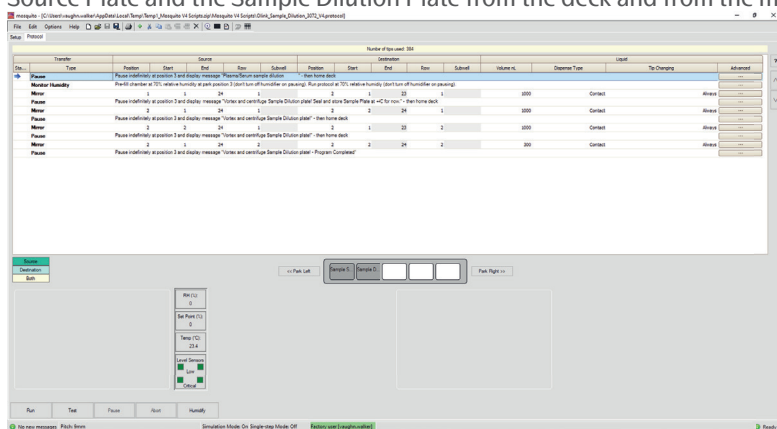

8. Seal both plates with new adhesive films and store the Sample Source Plate at +4 °C for later use
9. Using the MixMate or manual vortexing, vortex the Sample Dilution Plate thoroughly to ensure that all wells are mixed.
10. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
11. Carefully remove the adhesive film from the Sample Dilution Plate.
12. Place the Sample Dilution Plate back in the magnetic clamp booster and return it to the correct position on the Mosquito deck. All other positions shall remain empty.

13. Click *Resume* to continue the protocol.

*Result:*

*Mosquito performs a 1:100 sample dilution by transferring 1 µL of diluted samples (1:10) into quadrant 2 of the Sample Dilution Plate.*

14. When the protocol is paused and a pop-up window appears on the screen, remove the Sample Dilution Plate from the deck and the magnetic clamp booster. Seal with a new adhesive film. Repeat steps 9–14 to perform the third dilution (1:1000).

*Result:*

*Mosquito performs a 1:1000 sample dilution by transferring 1 µL of diluted samples (1:100) into quadrant 3 of the Sample Dilution Plate.*

15. Repeat steps 9–14 again to perform the last dilution (1:100 000).

*Result:*

*Mosquito performs a 1:100 000 sample dilution by transferring 0.3 µL of diluted samples (1:1000) into quadrant 4 of the Sample Dilution Plate.*

16. Vortex the Sample Dilution Plate thoroughly using the MixMate or manual vortexing, and ensure that all wells are mixed.

17. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.

18. When finished, click *Resume* to end the protocol. Keep the Mosquito on for later use.

19. Continue to [32. Incubation](#) or place the Sample Dilution Plate at +4 °C for up to 1 hours.

*Sample Dilution Plate layout.*

*The numbers indicate the sample numbers. SC = Sample Control, NC = Negative Control, PC = Plate Control.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

## 32. Incubation

During this step, four Incubation Mixes are prepared manually for each panel, transferred to Reagent Source Plates, and mixed with the samples. Incubation is then performed overnight.

Since one Reagent Source Plate is used for two panels, perform the instruction twice. As the Incubation Mixes must be used within 30 minutes from preparation, prepare one Reagent Source Plate and two Incubation Plates at a time. Therefore, perform the instructions in the following order:

- Run 1: Prepare Reagent Source Plate 1, then prepare Incubation Plates 1-2 and start incubation.
- Run 2: Prepare Reagent Source Plate 2, then prepare Incubation Plates 3-4 and start incubation.

### 32.1 Prepare Reagent Source Plate

During this step, four Incubation Mixes per panel are prepared manually and transferred to Reagent Source Plates. Each mix contains a specific set of Forward and Reverse probes.

**⚠ IMPORTANT:** *Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.*

#### Prepare bench

- Olink® Explore Incubation Solution
- Olink® Explore Forward Probes A-D (Frw probes)
- Olink® Explore Reverse Probes A-D (Rev probes)
- 2x 8-well strips
- 2x 384-well PCR plates (skirted)
- Manual pipettes (0.5–10, 10–100 µL)
- Manual multichannel pipette (8-channel, 0.5–10 µL)
- Filter pipette tips
- Adhesive films

#### Before you start

- Allow the Incubation Solution, Forward Probes and Reverse Probes to reach room temperature.
- Mark two new 384-well PCR plates:
  - For Run 1: “Reagent Source Plate 1”.
  - For Run 2: “Reagent Source Plate 2”.
- Mark the wells of two 8-well strips according to:


Run	Well							
	1	2	3	4	5	6	7	8
1	1A	1B	1C	1D	2A	2B	2C	2D
2	3A	3B	3C	3D	4A	4B	4C	4D



### Instructions

1. Vortex the Incubation Solution, Forward Probes and Reverse Probes and spin down.
2. Prepare Incubation Mixes in PCR Strip 1: Using forward pipetting, first transfer the Incubation Solution to all tubes of the strip, then all Frw Probes to the applicable tubes of the strip, and last all Rev Probes to the applicable tubes of the strip, according to table below:

 **NOTE:** Pipette the Incubation Solution carefully to avoid foaming.

 **IMPORTANT:** The Incubation Solution will be used to prepare Incubation Mixes for the other panels. Do not discard.

Incubation Mix preparation for Run 1

Addition order	Reagent	Well							
		1A	1B	1C	1D	2A	2B	2C	2D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Frw Probes A	Panel 1 Frw Probes B	Panel 1 Frw Probes C	Panel 1 Frw Probes D	Panel 2 Frw Probes A	Panel 2 Frw Probes B	Panel 2 Frw Probes C	Panel 2 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Rev Probes A	Panel 1 Rev Probes B	Panel 1 Rev Probes C	Panel 1 Rev Probes D	Panel 2 Rev Probes A	Panel 2 Rev Probes B	Panel 2 Rev Probes C	Panel 2 Rev Probes D

Incubation Mix preparation for Run 2


Addition order	Reagent	Well							
		3A	3B	3C	3D	4A	4B	4C	4D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Frw Probes A	Panel 3 Frw Probes B	Panel 3 Frw Probes C	Panel 3 Frw Probes D	Panel 4 Frw Probes A	Panel 4 Frw Probes B	Panel 4 Frw Probes C	Panel 4 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Rev Probes A	Panel 3 Rev Probes B	Panel 3 Rev Probes C	Panel 3 Rev Probes D	Panel 4 Rev Probes A	Panel 4 Rev Probes B	Panel 4 Rev Probes C	Panel 4 Rev Probes D

3. Seal the PCR Strip 1 with caps. Vortex and spin down briefly. Store at room temperature until use.

 **IMPORTANT:** Make sure that all applicable reagents are added to each Incubation Mix. The final volume shall be 100 µL

 **TIME SENSITIVE STEP:** The incubation setup must be started within 30 minutes from preparation of the Incubation Mix.

4. Rotate the Sample Reagent Plate (384-well) 90 degrees clockwise to facilitate pipetting.

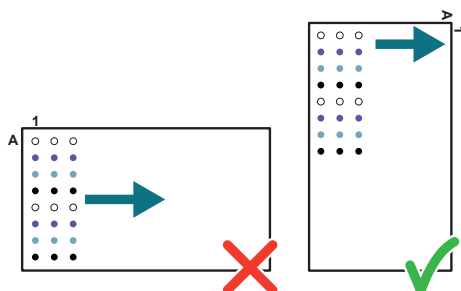

- Using a multichannel pipette, transfer 10 µL of each Incubation Mix from the PCR Strip 1 to the Reagent Source Plate 1. The numbers indicate the panel numbers and the letters indicate the different blocks within the panels. Use **reverse pipetting**, and do not change pipette tips between wells. Make sure to pipette to the bottom of the wells.

Reagent Source Plate layout for Run 1.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	1A		1B		1C		1D		2A		2B		2C		2D										
B																									
C	1A		1B		1C		1D		2A		2B		2C		2D										
D																									
E	1A		1B		1C		1D		2A		2B		2C		2D										
F																									
G	1A		1B		1C		1D		2A		2B		2C		2D										
H																									
I	1A		1B		1C		1D		2A		2B		2C		2D										
J																									
K	1A		1B		1C		1D		2A		2B		2C		2D										
L																									
M	1A		1B		1C		1D		2A		2B		2C		2D										
N																									
O	1A		1B		1C		1D		2A		2B		2C		2D										
P																									

Reagent Source Plate layout for Run 2.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	3A		3B		3C		3D		4A		4B		4C		4D										
B																									
C	3A		3B		3C		3D		4A		4B		4C		4D										
D																									
E	3A		3B		3C		3D		4A		4B		4C		4D										
F																									
G	3A		3B		3C		3D		4A		4B		4C		4D										
H																									
I	3A		3B		3C		3D		4A		4B		4C		4D										
J																									
K	3A		3B		3C		3D		4A		4B		4C		4D										
L																									
M	3A		3B		3C		3D		4A		4B		4C		4D										
N																									
O	3A		3B		3C		3D		4A		4B		4C		4D										
P																									

- Seal the Reagent Source Plate 1 with a new adhesive film and spin at 400-1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
- Immediately continue to [32.2 Prepare Incubation Plates and perform incubation.](#)

## 32.2 Prepare Incubation Plates and perform incubation

During this step, the prepared Incubation Mixes are mixed with the samples in one Incubation Plate per panel using the Mosquito instrument prior to incubation.

As the Mosquito deck can only hold a limited number of plates, perform the instruction twice, once for Run 1 and once for Run 2 (one Mosquito run per Reagent Source Plate).

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Reagent Source Plates, prepared in previous step
- 4x 384-well PCR plates (skirted)
- Adhesive films


### Before you start

- Allow the refrigerated Sample Source Plate and Sample Dilution Plate to reach room temperature.
- Mark four new 384-well PCR plates:
  - For Run 1: “Incubation Plate [1–2]”.
  - For Run 2: “Incubation Plate [3–4]”.


**Instructions**

1. In the open Mosquito software, Select *File/Open* and choose the applicable protocol from the Load Protocol Window and select the protocol for the applicable run according to:

Setup	Run	Protocol name
Setup 1	Run 1	Olink Incubation CARDIO INF v4
	Run 2	Olink Incubation NEURO ONC v4
Setup 2	Run 1	Olink Incubation CARDIO II INF II v4
	Run 2	Olink Incubation NEURO II ONC II v4

 **IMPORTANT:** Make sure that the correct protocol and version is used. The plate layouts of the sample source plate and sample dilution plate have changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.

2. Place the two Incubation Plates 1–2 in magnetic clamp boosters and place them on the Mosquito deck, refer to the software for the correct positions. Make sure to insert the corners of the magnetic clamp boosters under the small metal holders of the deck.

 **IMPORTANT:** Risk of instrument damage! If a magnetic clamp booster is not correctly placed it may collide with the internal parts of the instrument during the run.

3. Carefully remove the adhesive film from the Reagent Source Plate 1.

 **NOTE:** Make sure to use the correct Reagent Source Plate.


4. Place the Reagent Source Plate 1 in a magnetic clamp booster and place it on the Mosquito deck, refer to the software for the correct position.

5. Click *Run*.  
*Result:*

*The Mosquito transfers 0.6 µL of each Incubation Mix from the Reagent Source Plate into the Incubation Plates. The run takes approximately 10 minutes to be completed and can be monitored in the protocol tab.*

6. When the Mosquito protocol is paused, and a pop-up window appears on the screen, remove Incubation Plates 1–2 from the Mosquito deck and from the magnetic clamp boosters.
7. Inspect the Incubation Plates 1–2 to ensure that there is liquid at the bottom of all wells, and that there are no bubbles present.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

 **NOTE:** If bubbles are present, seal the Incubation Plate(s) with new adhesive film(s) and spin at 400–1000 x g for 1 minute, then carefully remove the adhesive film(s) and check again. Do not vortex. If bubbles are still present, puncture them using a syringe needle. Change needles between wells to avoid cross-well contamination.

8. Place Incubation Plates 1–2 back in the magnetic clamp boosters and return them to their previous positions on the Mosquito deck.
9. Vortex the Sample Source Plate and Sample Dilution Plate briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells and carefully remove the adhesive films.
10. Place the Sample Source Plate and Sample Dilution Plate in magnetic clamp boosters and place them on the Mosquito deck. Refer to the software for the correct positions.

11. Click *Resume* to continue the protocol.

*Result:*

*The Mosquito transfers 0.2 µL of samples from the Sample Source Plate and Sample Dilution Plate into the Incubation Plates. The run takes approximately 15 min to be completed.*

12. When the protocol is finished, remove Incubation Plates 1–2 from the deck and from the magnetic clamp boosters. Seal with new adhesive films.


 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

13. Spin Incubation Plates 1–2 at 400–1000 x g for 1 minute.

14. Inspect Incubation Plates 1–2 to ensure that all wells contain the same amount of liquid (0.8 µL). Note if there are any wells containing bubbles.


15. Write the time of the incubation starting point on the plates seals and incubate Incubation Plates 1–2 for 16 to 24 hours at +4 °C.

 **NOTE:** It is recommended to keep the incubation time within ±1 hour within a project. The incubation time starts when placing the Incubation Plate at +4 °C and ends when starting PCR1 in ProFlex PCR instrument.

16. Remove the Sample Source Plate, Sample Dilution Plate, and Reagent Source Plate 1 from the deck.

Treat the plates according to:

Incubation Run	Sample Source Plate	Sample Dilution Plate	Reagent Source Plate
Run 1	Seal with adhesive film and store at +4 °C until start of Run 2.	Seal with adhesive film and store at +4 °C until start of Run 2.	Discard
Run 2	Discard	Discard	Discard

 **IMPORTANT:** Each of the two Setups requires the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

17. Repeat [32.1 Prepare Reagent Source Plate](#) and [32.2 Prepare Incubation Plates and perform incubation](#) for Run 2, using PCR Strip 2, Reagent Source Plate 2 and Incubation Plates 3–4.

18. When finished, clear the Mosquito and shut it down according to instructions in the Olink® Explore Overview User Manual.

*Incubation Plate layout.*

*The numbers indicate the sample numbers.*

*The colors indicate the different blocks within the panel: white = block A, purple = block B, blue = block C, black = block D.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 33. Prepare for day 2

## Prepare bench

- MilliQ water
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution

## Instructions

1. Place 30 mL of MilliQ water at +4 °C overnight.
2. Thaw the PCR1 Enhancer at room temperature overnight.
3. Optional: Thaw the PCR1 Solution at +4 °C overnight.

# 34. Extension and pre-amplification (PCR1)

During this step, a PCR1 Mix is prepared manually and dispensed into the four Incubation Plates using the Dragonfly. The plates are renamed “PCR1 Plates” and subjected to a PCR reaction using two ProFlex instruments.

## 34.2.1 Prepare PCR1 Mix

During this step, a PCR1 Mix is prepared manually. The PCR1 Mix must be used within 30 minutes from preparation.

### Prepare bench

- Incubation Plates 1–4, prepared in previous step
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution
- Olink® Explore PCR1 Enzyme (when brought to the lab bench, keep the PCR1 Enzyme in a freezing block (-20 °C))
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x Falcon tube (50 mL)


### Before you start

- Thaw the PCR1 Solution at +4 °C overnight (optional), or at room temperature before starting the PCR1 setup (it may take several hours) and ensure that it is fully thawed and has reached room temperature.
- Ensure that the PCR1 Enhancer is fully thawed and has reached room temperature.
- Let the refrigerated Incubation Plates reach room temperature.
- Mark the new 50 mL Falcon tube: "PCR1 Mix".
- Switch on the two ProFlex™ PCR instruments in the post-PCR room.




## Instructions

1. Vortex the PCR1 Solution and PCR1 Enhancer thoroughly and spin down briefly.

 **IMPORTANT:** *Insufficient thawing and vortexing of the PCR1 Enhancer may lead to particles attaching to the syringe and run failure.*

2. Spin the PCR1 Enzyme briefly. Do not vortex.

 **NOTE:** *Always keep the PCR1 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).*

3. Spin the Incubation Plates 1–4 down for 1 minute at room temperature.
4. Prepare a PCR1 Mix in a Falcon tube in the following order, using volumes according to:

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	27 000
2	PCR1 Enhancer	3 510
3	PCR1 Solution	3 510
4	PCR1 Enzyme	351
Total		34 371

- First add MilliQ water and PCR1 Enhancer and vortex thoroughly.
- Then add the PCR1 Solution and PCR1 Enzyme, and vortex for 3 seconds.

5. Keep at room temperature until use.

 **TIME SENSITIVE STEP:** *Dispensing of the PCR1 Mix must start within 30 minutes from PCR1 Mix preparation.*

## 34.1 Prepare PCR1 Plates and perform PCR1

During this step, the prepared PCR1 Mix is dispensed into the Incubation Plates using the Dragonfly, and the plates are subjected to a PCR reaction in two ProFlex instruments.

The PCR1 Plates must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate. Since each ProFlex can hold two plates, prepare two plates at a time. Perform the instructions in the following order:

- Dispense PCR1 Mix into Incubation Plates 1–2 using the Dragonfly. Start a PCR1 run for these two plates on one of the ProFlex instruments.
- Dispense PCR1 Mix into Incubation Plates 3–4 plates using the Dragonfly. Start a PCR1 run for these plates on the second ProFlex instrument.

### Prepare bench


- Incubation Plates 1–4 at room temperature, prepared in previous step
- PCR1 Mix, prepared in previous step
- Timer
- 3x Disposable reservoirs (10 mL)
- 3x Disposable ultra-low retention syringes with plungers
- Manual pipette (5 or 10 mL)
- Filter pipette tips
- Adhesive films

### Before you start


- Set a timer to 10 minutes.

## Instructions

- Start the PCR protocol Olink PCR1 on the two ProFlex PCR instruments. Pause when the PCR block temperature reaches 50 °C.

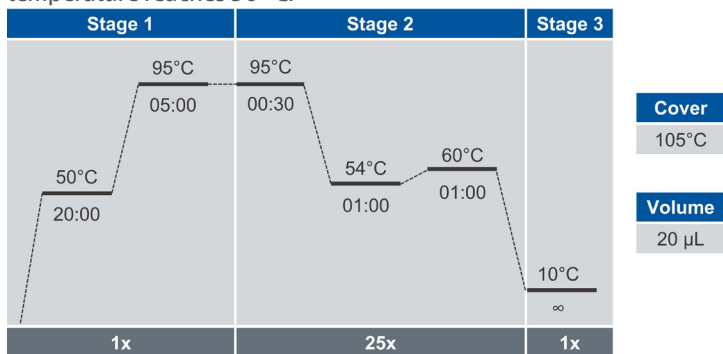


- Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink PCR1 Setup plate v4.
  - Attach three syringes in position B2, B3, and B4. Slide the reservoir tray to the filling position (A) and place three new reservoirs in position B2, B3 and B4 (B).

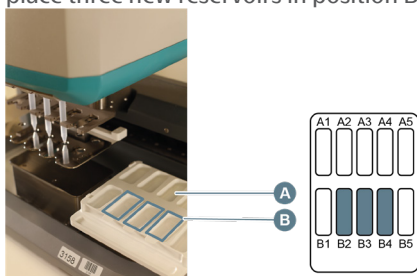


- Transfer 11 mL of PCR1 Mix into each of the three reservoirs.

**⚠ IMPORTANT:** The syringes and PCR1 Mix are used to prepare all four PCR1 Plates. Do not discard until all PCR1 Plates are complete.

- Carefully slide the reservoir tray back to the aspirate position.

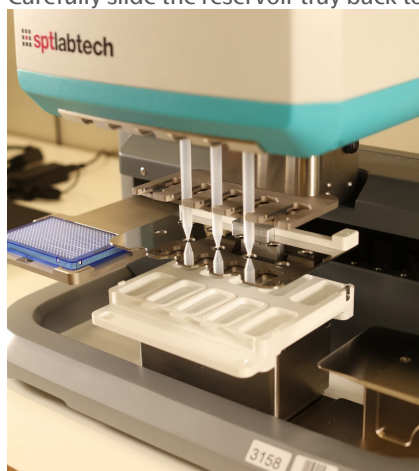

- Rename Incubation Plate 1 “PCR1 Plate 1” and Incubation Plate 2 “PCR1 Plate 2”. Spin down the plates.
- Carefully remove the adhesive film from PCR1 Plate 1 and place it in the Dragonfly plate position (to the left), with well A1 in the top left corner.
- Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol. Start the timer when PCR1 Mix is added to the first well of the plate.  
*Result:*  
*Dragonfly dispenses 19 µL of PCR1 Mix into each well of the PCR1 Plate 1.*

 **TIME SENSITIVE STEP:** The PCR1 Plate must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate.

13. When the Dragonfly has returned the PCR1 Plate 1 to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.
14. Inspect the PCR1 Plate 1 to ensure that all wells contain the same amount of liquid (19.8 µL). Using the MixMate or manual vortexing, vortex the plate thoroughly to ensure that all wells are mixed.
15. Repeat steps 7–10 for PCR1 Plate 2.
16. In the Post-PCR room, centrifuge PCR1 Plates 1–2 at 400–1000 x g for 1 minute.
17. Inspect PCR1 Plates 1–2 to ensure that all wells contain the same amount of liquid (19.8 µL). Note any deviations. When the timer ends (after 10 minutes), place PCR1 Plates 1–2 in one of the two pre-heated ProFlex instruments and click *Resume*.
18. Repeat steps 6–14 for Incubation Plates 3–4, except rename Incubation Plate 3 as "PCR Plate 3", and Incubation Plate 4 as "PCR Plate 4". Place both plates in the second ProFlex.
19. When finished, clear the Dragonfly and shut it down according to instructions in the Olink® Explore Overview User Manual.
20. When the protocol is finished (~1 hour 55 minutes), continue to [35. Pool PCR1 products](#), or store the four PCR1 Plates at +4 °C if used the same day.

 **SAFE STOPPING POINT:** The PCR1 Plates can be stored at -20 °C for up to 2 weeks

PCR1 plate layout.

The numbers indicate the sample numbers.

The colors indicate the different blocks within the panel: White = block A, purple = block B, blue = block C, black = block D.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 35.Pool PCR1 products

During this step, the PCR1 products from the PCR1 Plates are pooled into one PCR1 Pooling Plate using the Microlab STAR instrument.

## **Prepare bench**

- PCR1 Plates, prepared in previous step
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x 384-well PCR plate (skirted)
- 1x water reservoir (300 mL)
- 50 µL Conductive Filter Tips (1x rack per panel, 1x rack for water)
- Adhesive films
- Temperature-resistant labels or marker pen

## **Before you start**

- Thaw PCR1 Plates at room temperature if frozen.
- Mark the new 384-well PCR plate: "PCR1 Pooling Plate".
- Switch on the Microlab STAR system, and open the Hamilton Run Control software.

## Instructions

21. Make sure that PCR1 Plates are thawed and properly sealed, then vortex the plates and spin down at 400–1000 x g for 1 minute at room temperature.
22. Inspect the wells of PCR1 Plates to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells. Spin down the plates again if necessary.
23. In Run Control, select the protocol PCR1 Pooling and click the *Start* button.
24. Select the number of Destination Pooling Plates and Panels being Pooled for each. Click *OK*.
25. Pull out all carriers to the load position and prepare the Microlab STAR deck according to the software instructions.
  - Add MilliQ water to the reservoir.
  - Place PCR1 Plates on the carrier.
  - Carefully remove the adhesive films.
  - Fill Tip carrier in selected positions.
  - Push in Water Reservoir manually.

26. Click *OK* in the software to load the tip and plate carriers automatically and begin the run.

### Result:

The Microlab STAR automatically scans the tips, dispenses 12 µL MilliQ water into each well of the PCR1 Pooling Plate, and pools 3 µL of each PCR1 product from each sample into one well per panel. The run takes approximately 6 minutes to be completed.

27. When the protocol is finished, remove the PCR1 Pooling Plate and seal it with a new adhesive film. Keep the Microlab STAR on for later use.
28. Vortex the PCR1 Pooling Plate and spin down at 400–1000 x g for 1 minute.
29. Inspect the PCR1 Pooling Plate to ensure that all wells contain the same amount of liquid (24 µL).
30. Remove PCR1 Plates containing the remaining PCR products and seal them with new adhesive films. Store them at 20 °C for up to 2 weeks in case of potential reruns.
31. Continue to [36. Amplification and sample indexing \(PCR2\)](#), or store the PCR1 Pooling Plate at +4 °C until ready to use (the same day).

### PCR1 Pooling Plate layout

The numbers indicate the sample numbers.

The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 36. Amplification and sample indexing (PCR2)

During this step, a PCR2 Mix is prepared manually and then mixed with the samples along with index primers (unique for each sample) using the Microlab STAR. The samples are then subjected to a second PCR reaction.

## 36.1 Prepare PCR2 Mix

During this step, a PCR2 Mix is prepared manually. The PCR2 Mix must be used within 15 minutes from preparation.

### Prepare bench

- PCR1 Pooling Plate, prepared in previous step
- Olink® Explore PCR2 Solution
- Olink® Explore PCR2 Enzyme (when brought to the lab bench, keep the PCR2 Enzyme in a freezing block (-20 °C))
- Olink® Explore Index Plate 1
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Filter pipette tips
- Temperature-resistant labels or marker pen

### Before you start

- Thaw the PCR2 Solution and the Index Plate 1 at room temperature.
- If stored at +4 °C, allow the PCR1 Pooling Plate to reach room temperature.
- Mark the new 15 mL tube: "PCR2 Mix".
- Switch on one ProFlex PCR instrument. No preheating is required.

## Instructions

1. Vortex the PCR2 Solution and spin it briefly.
2. Vortex the Index Plate 1 and spin it at 400–1000 x g for 1 minute.
3. Make sure that the PCR1 Pooling Plate is properly sealed, then vortex it and spin at 400–1000 x g for 1 minute.
4. Spin the PCR2 Enzyme briefly. Do not vortex.



**NOTE:** Always keep the PCR2 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).

5. Prepare a PCR2 Mix in a Falcon tube following the order and volumes according to:

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	7 076
2	PCR2 Solution	1 015
3	PCR2 Enzyme	21
	Total	8 112

5. Vortex the PCR2 Mix thoroughly. Aliquot to 96 well PCR plate with at least 72 µL/well. Keep at room temperature until use.



**TIME SENSITIVE STEP:** Start the dispensing of the PCR2 Mix within 15 minutes from preparation.



## 36.2 Prepare PCR2 Plate and perform PCR2

During this step, the prepared PCR2 Mix is mixed with the samples along with index primers using the Microlab STAR. The samples are then subjected to a second PCR reaction.

### Prepare bench

- PCR1 Pooling Plate (at room temperature), prepared in previous step
- PCR2 Mix, prepared in previous step
- Olink® Explore Index Plate 1
- 1x 384-well PCR plate (skirted)
- 1x 96-well PCR plate with PCR2 Master Mix (skirted), prepared in previous step
- 50 µL Conductive Filter Tips (6x rack per PCR2 plate)
- Adhesive films
- Temperature-resistant labels or marker pen

### Before you start

- Mark the new 384-well PCR plate: "PCR2 Plate".


### Instructions

1. Open Hamilton Run Control and select the protocol PCR2\_Setup and click *Start*.
2. Select the number of PCR2 plates being prepped and the number of Panels in each plate. Click *OK*.
3. Centrifuge Index Plate 1 at 400–1000 x g for 1 minute and inspect the plate to ensure that all wells contain the same amount of liquid (20 µL). If a well is empty or contains a lower volume, contact Olink Support.
4. Carefully remove the adhesive films from the Index Plate 1 and the PCR1 Pooling Plate. Make sure that no air bubbles are trapped at the bottom of the wells of the PCR1 Pooling Plate.
5. Pull out all carriers and prepare the Microlab STAR deck according to the software instructions.
6. Click *OK* once the deck is loaded, then the system will automatically load the carriers and begin the protocol.

#### *Result:*

*Microlab STAR transfers 16 µL of PCR2 Mix, 2 µL of Index Primers (from the Index Plate 1) and 2 µL of PCR1 products (from the PCR1 Pooling Plate) into the applicable wells of the PCR2 Plate. The run takes approximately 8 minutes to be completed.*


7. When the protocol is finished (indicated by a message in the software), remove the PCR2 Plate and seal it with a new adhesive film. Keep the Microlab STAR on for later use.

 **IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

 **TIME SENSITIVE STEP:** Start the PCR2 protocol within 5 minutes from end of Microlab STAR protocol.

8. Vortex and spin down at 400–1000 x g for 1 minute at room temperature.
9. Inspect the PCR2 Plate to ensure that all wells contain the same amount of liquid (20 µL).
10. Place the PCR2 Plate in the ProFlex and add a balance plate to the other side of the ProFlex.

11. Click Open and select the protocol 01link Index PCR2. Click Start.

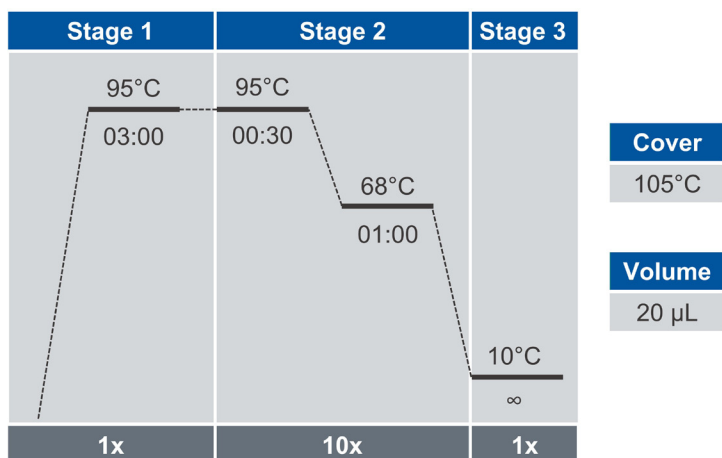

12. Remove the PCR1 Pooling Plate containing the remaining PCR products from the Microlab STAR and seal it with a new adhesive film. Store it at -20 °C for up to 2 weeks in case of potential reruns.

13. Discard the Index Plate 1.

14. When the protocol is finished (~25 minutes), continue to [37. Pool PCR2 products](#), or store the PCR2 Plate at +4 °C until use (the same day).

**> SAFE STOPPING POINT:** The PCR2 Plate can be stored at -20 °C for up to 2 weeks.

*PCR2 Plate layout*

The numbers indicate the sample numbers.

The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

## 37.Pool PCR2 products

During this step, all PCR2 products belonging to the same panel are pooled into one column of the PCR2 Pooling Plate using the Microlab STAR. The Olink libraries are then manually transferred to one microcentrifuge tube per panel. Each tube contains amplicons from 96 samples, including controls.

### Prepare bench

- PCR2 Plate, prepared in previous step
- 1x 96-well PCR plate (skirted)
- Microcentrifuge tubes (1.5 mL, 1x tube per panel)
- 50 µL Conductive Filter Tips (1x rack per pooling plate)
- Manual pipette (10–100 µL)
- Filter pipette tips
- Adhesive films
- Temperature-resistant labels or marker pen

### Before you start

- Thaw PCR2 Plate at room temperature if frozen.
- Mark the new 96-well PCR plate: "PCR2 Pooling Plate".
- Mark four new microcentrifuge tubes: "PCR2 [1–4, depending on the number of panels]".

## Instructions

1. Open Hamilton Run Control and select the applicable protocol PCR2\_Final\_Pooling and click *Start*.
2. Select the number of Destination Pooling Plates and the number of Panels being pooled in each, then click *OK*.
3. Make sure that the PCR2 Plate is thawed and properly sealed, then vortex and spin it down at 400–1000 x g for 1 minute at room temperature to ensure that all wells are mixed.
4. Inspect the wells of the PCR2 Plate to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells.
5. Pull out all carriers and prepare the Microlab STAR deck according to the software instructions.
6. Once loaded, click *OK* to automatically load the carriers and begin the protocol.

### Result:

*Microlab STAR pools 3 µL from each row of a given Panel into a single well of the PCR2 Pooling Plate. The result is one column of pooled PCR2 products per panel in the PCR2 Pooling Plate.*

7. When finished, remove the PCR2 Pooling Plate from the worktable. Seal the plate with a new adhesive film, vortex the plate and spin down at 400–1000 x g for 1 minute.
8. Inspect the PCR2 Pooling Plate to ensure that every applicable well contains the same amount of liquid (36 µL in columns 1, 3, 5 and 7).
9. Clear the Microlab STAR and shut it down.

### PCR2 Pooling Plate layout.

The numbers and colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1		2		3		4					
B	1		2		3		4					
C	1		2		3		4					
D	1		2		3		4					
E	1		2		3		4					
F	1		2		3		4					
G	1		2		3		4					
H	1		2		3		4					

10. Carefully remove the adhesive film from the PCR2 Pooling Plate.
11. Using a single-channel pipette transfer the pooled PCR2 products from the PCR2 Pooling Plate to the PCR2 Tubes as described below. Use forward pipetting and change pipette tip after each well. If running a single panel, only transfer from column 1 to PCR2 tube 1 will be applicable.

Volume (µL)	From column	To tube
30	1	PCR2 1
30	3	PCR2 2
30	5	PCR2 3
30	7	PCR2 4

12. Vortex the PCR2 Tubes and spin down briefly.
13. Remove the PCR2 Plate containing the remaining PCR2 products from the instrument, seal it with a new adhesive film and store it at -20 °C for up to 2 weeks in case of potential reruns.
14. Discard the PCR2 Pooling Plate.
15. Continue to [38. Library purification](#) in the workflow manual, or store the PCR2 Tubes at +4 °C until use (the same day).

**SAFE STOPPING POINT:** The PCR2 Tubes can be stored at -20 °C for up to 2 weeks.

## 38. Library purification

During this step, the Olink Libraries are purified using magnetic beads and the eluates are transferred into one new microcentrifuge tube per panel.

### Prepare bench

- PCR2 Tubes 1–4, prepared in previous step
- Agentcourt AMPure XP bottle
- 96% Ethanol (EtOH)
- MilliQ water
- DynaMag™-2 Magnet
- Timer
- 8 Microcentrifuge tubes (1.5 mL)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Pipette 5 mL
- Filter pipette tips

### Before you start

- Let the refrigerated Agentcourt AMPure XP bottle reach room temperature.
- Mark four new microcentrifuge tubes: “BP [1–4]” (for “Bead Purification”).
- Mark four new microcentrifuge tubes: “Lib [1–4]”.
- Mark the new 15 mL Falcon tube: “70% EtOH”.
- Set a timer to 5 minutes.

### Instructions

1. Freshly prepare a sufficient amount of 70% EtOH for the number of Libraries to purify according to the table below. Manually transfer first the MilliQ water and then the 96% EtOH into the Falcon tube.

Reagent	Volume (mL) for							
	1 library	2 Libraries	3 Libraries	4 Libraries	5 Libraries	6 Libraries	7 Libraries	8 Libraries
MilliQ water	0.5	0.8	1.1	1.4	1.6	1.9	2.2	2.5
96% EtOH	1.5	2.2	2.9	3.6	4.4	5.1	5.8	6.5
Total (70% EtOH)	2	3	4	5	6	7	8	9

2. Shake and vortex the Agentcourt AMPure XP bottle vigorously to resuspend the magnetic beads.
3. Transfer 80 µL from the Agentcourt AMPure XP bottle to each BP Tube.
4. Transfer 50 µL from each PCR2 Tube to the corresponding BP Tube according to:


Volume (µL)	From tube	To tube
50	PCR2 1	BP 1
50	PCR2 2	BP 2
50	PCR2 3	BP 3
50	PCR2 4	BP 4




**NOTE:** Store the PCR2 Tubes at -20 °C in case the purification needs to be repeated.

5. Pipette-mix 10 times to thoroughly mix the Libraries with the beads. Change pipette tip between every tube.


6. Start the timer after the last tube has been mixed and incubate the BP Tubes 1–4 for 5 minutes at room temperature.
7. After the incubation, place the BP Tubes 1–4 on the DynaMag™-2 Magnetic stand and leave them for 2 minutes to separate the beads from the solution.

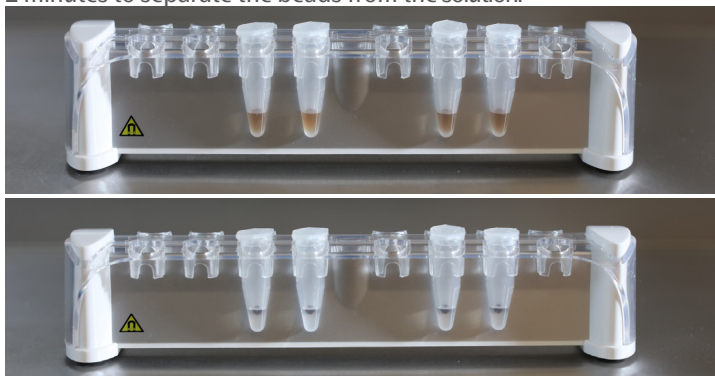

8. With the tubes still on the magnetic stand, carefully open the lids and discard 125  $\mu$ L supernatant using a single-channel pipette. Do not disturb the beads.
9. With the tubes still on the magnetic stand, wash the beads:
  - a. Add 500  $\mu$ L of 70% EtOH to every BP Tube. Pipette onto the opposite wall from the beads.

 **NOTE:** Make sure not to disturb the beads.

- b. Leave the tubes to incubate for 30 seconds.
- c. Using a single-channel pipette, aspirate the EtOH, without disturbing the beads. Discard the EtOH.
- d. Repeat steps a) – c) once.

 **IMPORTANT:** Make sure that no EtOH remains in the BP Tubes after this step. Use a smaller pipette to remove any residual EtOH.

10. Leave the tubes with the lids open on the magnetic stand for 2 minutes for the beads to air dry.
11. Close the tubes and remove them from the magnetic stand.
12. Add 50  $\mu$ L of MilliQ water to the BP Tubes 1–4 and pipette-mix 10 times towards the beads to elute the purified Libraries from the beads.
13. Incubate the tubes for 2 minutes at room temperature.
14. Place BP Tubes 1–4 on the magnetic stand and leave them for 1 minute to separate the beads from the eluted Library solution.
15. With BP Tubes 1–4 still on the magnetic stand, transfer 45  $\mu$ L of eluate from the BP Tubes to the corresponding Lib Tubes according to:

Volume ( $\mu$ L)	From tube	To tube
45	BP 1	Lib 1
45	BP 2	Lib 2
45	BP 3	Lib 3
45	BP 4	Lib 4

 **IMPORTANT:** Make sure not to disturb or aspirate the beads.

16. Discard BP Tubes 1–4.
17. Continue to 39. [Quality control](#).


 **SAFE STOPPING POINT:** The Lib Tubes can be stored at  $-20$  °C for up to 4 weeks.

# 39. Quality control


During this step, the four purified Olink Libraries are quality controlled on the Bioanalyzer using the High Sensitivity DNA kit or on the TapeStation using the High Sensitivity D5000 kit, according to the Manufacturer's instructions.

The electropherograms in the figures displays typical results for an Olink Library. The purified Olink Library appears as a single or double peak around 150 bp. Peaks of larger sizes represents bubble products and do not have any impact on sequencing results, see <https://emea.support.illumina.com/bulletins/2019/10/bubble-products-in-sequencing-libraries--causes--identification-.html> for more information.

Bioanalyzer's electropherogram.

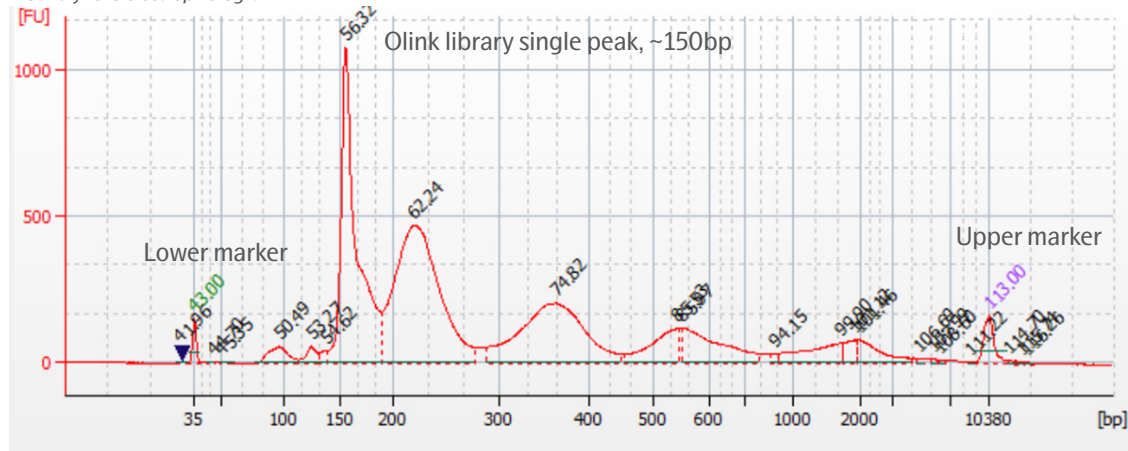

TapeStation's electropherogram.

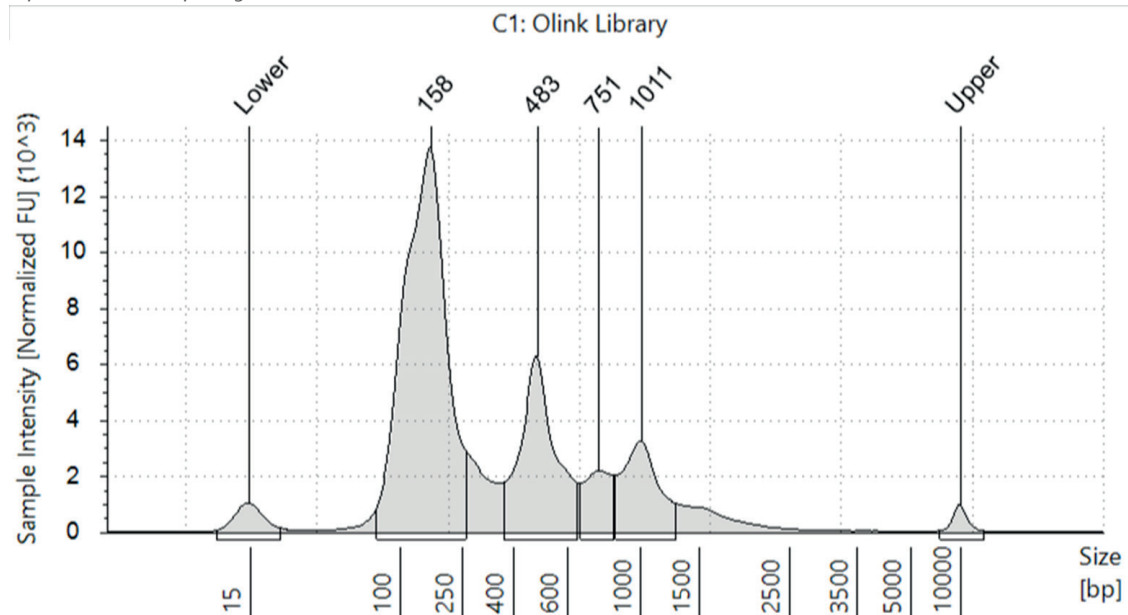

For expected results of a successful ladder run, refer to the manufacturer’s manual. If any of the deviations in the table below. should occur in the electropherogram, do not continue to sequencing. Instead, perform the suggested corrective action.

Peak deviation	Possible cause	Action
No Library peak present at 150bp.	1) No PCR1 amplification has taken place, and therefore there are no PCR2 products and no Library 2) The bead purification failed	Rerun the quality control with unpurified Library. If a peak is present at 150bp: purify a new aliquot of the unpurified Library and rerun the quality control. If successful, proceed to sequencing.  If there is no 150bp peak present in the unpurified Library, no PCR product has been generated. Repeat the Library preparation, quality control and sequencing.
No Library peak present at 150bp, but a smaller peak at 120bp	The index primers were not included in the PCR2 reaction (the 120bp peak corresponds to the PCR1 product). 1) The Index plate was empty. 2) There was no transfer of index primers from the Index Plate to the PCR2 Plate due to <i>epMotion</i> ® failure.	Contact Support. Make sure to centrifuge and visually inspect the Index Plate before starting the PCR2 setup. Make sure that the <i>epMotion</i> ® is calibrated, functional and that the correct protocol is used.

## 40. Next generation sequencing

Next generation sequencing is performed using either of the following Illumina instruments:

- NextSeq™ 550
- NextSeq™ 2000
- NovaSeq™ 6000
- NovaSeq™ X Plus

As the workflow differs between instruments, refer to the applicable Olink® Explore Sequencing User Manual for instructions on how to sequence Olink Libraries.



# Part 5: Laboratory instructions for 96 samples using SPT Labtech Mosquito® and Eppendorf epMotion®

This section provides instructions on how to perform each step of the Olink® Explore 3072 laboratory workflow, using the epMotion from Eppendorf Company. The eight panels must be prepared on two separate occasions: four panels during Setup 1 and four panels during Setup 2. The instructions below describe how to perform the workflow for one Setup (four panels) at a time.

The panels CARDIO, INF, NEURO, and ONC are prepared during Setup 1. The panels CARDIO II, INF II, NEURO II, and ONC II are prepared during Setup 2.

Note that each of the two Setups requires preparation of a new Sample Source Plate. The Sample Plate from Setup 1 can however be reused for Setup 2.

If the panels are prepared on more than two occasions, additional Olink® Explore Sample Prep Reagents will be required.

## 41. Preparations

### 41.1 Plan the study

A successful study requires careful planning. Perform the following before starting the experiment:

- Decide the number of samples and controls required to get the data that you want from the study.
- Optional Sample Control: It is recommended to include a pooled plasma sample in duplicate on each plate. These samples are used to assess potential variation between runs and plates, for example to calculate inter-assay and intra-assay CV, as well as for troubleshooting. When including the Sample Controls, 88 user samples can be processed simultaneously.
- When running more than one Sample Plate, make sure that the samples are appropriately randomized across all plates and that necessary steps for normalizing and combining data are taken. If you need assistance, consult a statistician or contact Olink Support before running the study.
- Consult the Olink white paper “Strategies for design of protein biomarker studies” ([www.olink.com/whitepapers](http://www.olink.com/whitepapers)) and the sample randomization guidelines ([www.olink.com/faq/sample-randomization](http://www.olink.com/faq/sample-randomization)).



**NOTE:** Sample randomization helps to ensure that technical variation does not overlap with biological variation.

## 41.2 Important information

### Panel nomenclature

As the panels differ between Setup 1 and Setup 2, the panel names are not mentioned in this manual. Instead, the panels are referred to as Panel 1–4, as follows:

Panel number	Panel name for Setup 1	Panel name for Setup 2
1	CARDIO	CARDIO II
2	INF	INF II
3	NEURO	NEURO II
4	ONC	ONC II

Throughout the instructions, plates and tubes are marked with names and numbers, for example “Incubation Plate 1”. When using the marked plates and tubes, make sure that the number on the plate or tube corresponds to the number of the applicable panel, i.e when running Panel 1, use XX Plate 1, and when running Panel 4, use XX Plate 4.

### Reagent lots

Before starting each step of the workflow, make sure that the lot number of each reagent matches the lot numbers indicated in the Lot Configuration document provided with the kit.

### Vortexing

Correct vortexing is essential to generate reproducible results. Review instructions in the Olink Explore Overview User Manual prior to starting the laboratory workflow.

Plate type	Speed (rpm)	Time (s)
96-wells	2500	30
384-wells	3000	30

### 384-well PCR plates

Make sure to use the twin.tec 384-well skirted PCR plate from Eppendorf (art nr. 0030128508), as stated in the Olink Explore Overview User Manual. All instrument protocols have been calibrated for this specific plate. Other models should not be used.

## 41.3 Prepare the samples

During this step, samples are manually transferred to the Sample Plate. It is recommended to use the Sample Plate within the same day of preparation to minimize the number of freeze-thaw cycles. The Sample Plate can however be stored at -80 °C and reused for preparation of Setup 2.



**NOTE:** The Olink Explore protocol is optimized and validated for plasma and serum samples. Please contact [support@olink.com](mailto:support@olink.com) for more information regarding alternative sample types.

### Prepare bench

- Samples (provided by the user)
- 1x 96-well PCR plate, preferably with full skirt
- Manual pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive Film
- Temperature-resistant labels or marker pen

### Before you start

- Select the samples to be included in the study.



**IMPORTANT:** The samples must be undiluted, as dilution of samples may result in lower detectability.

- Thaw the samples at room temperature if frozen.
- Mark the 96-well Sample Plate with a simple alphanumeric code that you can later identify (“A, B, C”, “1, 2, 3”, or “A1, A2, A3”) using temperature-resistant labels or marker pen. Use unique sample identification names or numbers.

### Instructions

1. Transfer the samples into the Sample Plate. Make sure that samples are added to every applicable well.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1	9	17	25	33	41	49	57	65	73	81	
B	2	10	18	26	34	42	50	58	66	74	82	
C	3	11	19	27	35	43	51	59	67	75	83	
D	4	12	20	28	36	44	52	60	68	76	84	
E	5	13	21	29	37	45	53	61	69	77	85	
F	6	14	22	30	38	46	54	62	70	78	86	
G	7	15	23	31	39	47	55	63	71	79	87	
H	8	16	24	32	40	48	56	64	72	80	88	

2. Seal the Sample Plate using an adhesive film or individual seals.
3. Store the Sample Plate at +4 °C if used the same day, otherwise at -80 °C.



**IMPORTANT:** Avoid subjecting the samples to multiple freeze-thaw cycles.

## 42. Prepare Sample Source Plate

During this step, samples are manually transferred from the prepared Sample Plate into the Sample Source Plate, and controls are added to the Sample Source Plate. The Sample Source Plate must be used within the same day of preparation.

**⚠ IMPORTANT:** Note that each of the two Setups require the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

**⚠ IMPORTANT:** Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.

### Prepare bench

- Sample Plate, prepared in previous step
- Olink® Explore Negative Control
- Olink® Explore Plate Control
- Sample Control (*optional, provided by the user*)
- 1x 384-well PCR plate (skirted)
- Manual pipette (0.5–10 µL)
- Manual multichannel pipette (0.5–10 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Ensure that the Sample Plate has been prepared according to section [41.3 Prepare the samples](#).
- If frozen, thaw the Sample Plate at room temperature.
- Thaw the Negative Control, Plate Control and recommended Sample Control at room temperature.
- Mark the 384-well PCR plate: "Sample Source Plate".

## Instructions

- Using the MixMate or manual vortexing, vortex the 96-well Sample Plate and spin at 400–1000 x g for 1 minute at room temperature.
- Using a multichannel pipette, transfer 10 µL of each sample into the 384-well Sample Source Plate according to the plate layout shown in the figure below. Use **forward pipetting**, change pipette tips between every column, and make sure that no air bubbles are trapped at the bottom of the wells.

**⚠ IMPORTANT:** *The plate layout of the Sample Source Plate has changed and is only compatible with version 4 of the Olink Explore instrument protocols. Make sure that you have version 4 of all instrument protocols installed before proceeding. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.*

- Vortex the Negative Control, Plate Control and Sample Control and spin briefly.
- Using a single-channel pipette, transfer 10 µL of Negative Control (NC), Plate Control (PC) and Sample Control (SC) to each of the applicable wells in column 23 of the 384-well Sample Source Plate according to the plate layout shown in the figure below. Change pipette tip between every control sample.
- Seal the Sample Source Plate with a new adhesive film.

**⚠ IMPORTANT:** *All wells must be properly sealed to avoid evaporation of the samples.*

- Spin the Sample Source Plate at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells. Store the plate at +4 °C until use (the same day).
- Seal the Sample Plate with a new adhesive film. Store at -80 °C.

Sample Source Plate layout.

The numbers indicate the sample numbers. SC = Sample Control, NC = Negative Control, PC = Plate Control.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1		9		17		25		33		41		49		57		65		73		81		SC	
B																								
C	2		10		18		26		34		42		50		58		66		74		82		SC	
D																								
E	3		11		19		27		35		43		51		59		67		75		83		NC	
F																								
G	4		12		20		28		36		44		52		60		68		76		84		NC	
H																								
I	5		13		21		29		37		45		53		61		69		77		85		NC	
J																								
K	6		14		22		30		38		46		54		62		70		78		86		PC	
L																								
M	7		15		23		31		39		47		55		63		71		79		87		PC	
N																								
O	8		16		24		32		40		48		56		64		72		80		88		PC	
P																								

# 43. Sample Dilution

During this step, Sample Diluent is dispensed into the Sample Dilution Plate using the Dragonfly and the samples are diluted using the Mosquito. The prepared Sample Dilution Plate must be used within three hours from preparation.

## 43.1 Prepare Sample Dilution Plate

During this step, Sample Diluent is dispensed into Sample Dilution Plate using the Dragonfly.

### Prepare bench

- Olink® Target 96/Explore Sample Diluent
- 1x 384-well PCR plate (skirted)
- 1x Disposable reservoir (10 mL)
- 1x Disposable ultra-low retention syringe with plunger
- Manual pipette (100–1000 µL)
- Filter pipette tips
- Adhesive films

### Before you start

- Thaw the Sample Diluent at room temperature
- Mark the new 384-well PCR plate: “Sample Dilution Plate”.




**NOTE:** For convenience, the Sample Diluent can be thawed at +4 °C overnight.

## Instructions

1. Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink Sample Dilution Plate v4.
  - Attach one syringe in position B2.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.


2. Slide the reservoir tray to the filling position (A) and place a new reservoir in position B2 (B).

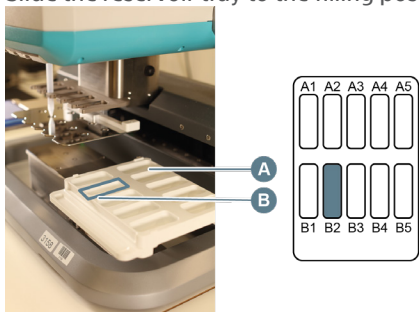

3. Vortex the Sample Diluent briefly, add 6 mL of Sample Diluent into the reservoir and carefully slide the reservoir tray back to the aspirate position.
4. Place the Sample Dilution Plate in the plate position to the left, with well A1 in the top left corner.
5. Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol.

### Result:

*Dragonfly dispenses 9 µL Sample Diluent into each well of quadrant 1–3 and 29 µL in quadrant 4 of the Sample Dilution Plate. Filled wells turn purple in the plate map. The run stops automatically when the Dragonfly has dispensed Sample Diluent into all applicable wells.*

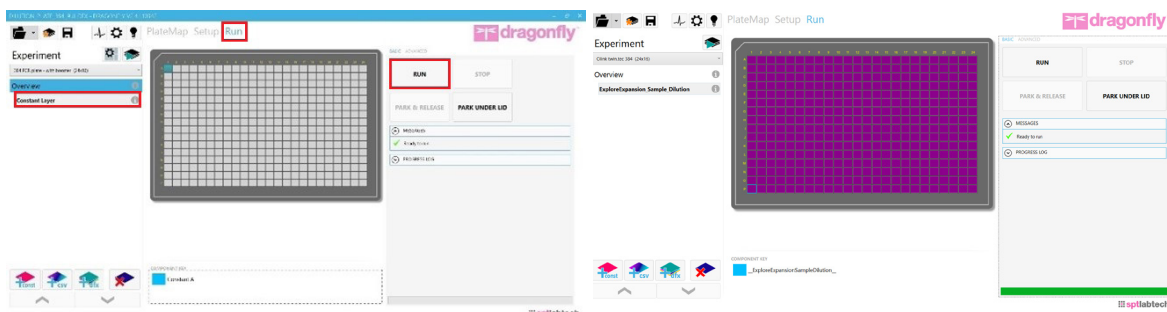

6. When the Dragonfly has returned the Sample Dilution Plate to the plate position and released the plate clamp, remove the Sample Dilution Plate from the instrument and seal it with an adhesive film.
7. Spin the Sample Dilution Plate at 400–1000 x g for 1 minute.
8. Visually inspect the Sample Dilution Plate to ensure that all wells in quadrant 1–3 contain 9 µL of liquid, and that wells in quadrant 4 contain 29 µL. Make sure that there are no bubbles trapped at the bottom of the wells.
9. When finished, clear the instrument and shut it down according to instructions in the Olink® Explore Overview User Manual.
10. Continue to [43.2 Perform Sample Dilution](#), or store the Sample Dilution Plate at +4 °C until use (the same day).

## 43.2 Perform Sample Dilution

During this step, the samples are diluted in four sequential steps using the Mosquito: from 1:1 (undiluted) to 1:10, 1:100, 1:1000, and approximately 1:100 000.

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Adhesive films

### Before you start

- Prepare the Mosquito® according to instructions in the Olink® Explore Overview User Manual.

### IMPORTANT:

- Make sure that a spool of Mosquito pipette tips has been loaded into the Mosquito according to the manufacturer's instructions.
- Make sure that the knobs at the back of the two Mosquito humidifiers are set to maximum level.



## Instructions

**⚠ IMPORTANT:** Make sure to vortex the Sample Dilution Plate(s) thoroughly both between dilutions and after the last dilution. If using MixMate, make sure to vortex the Sample Dilution Plate thoroughly with correct MixMate settings, as incorrect settings may lead to low-quality data. Refer to table in [41.2 Important information](#).

1. Let the Sample Source Plate reach room temperature, vortex it briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
2. Carefully remove the adhesive films from the Sample Source Plate and the Sample Dilution Plate.
3. Place the Sample Source Plate in a magnetic clamp booster according to instructions in the Olink Explore Overview User Manual.
4. Place the Sample Source Plate on the Mosquito deck, refer to the software for the correct position. Insert the corner of the magnetic clamp booster under the small metal holder of the deck as described in the Olink® Explore Overview User Manual (this applies to all plate positions).
5. Place the Sample Dilution Plate in a magnetic clamp booster and place it on the Mosquito® deck, refer to the software for the correct position.

**⚠ IMPORTANT:** Risk of instrument damage! If the magnetic clamp booster is not correctly placed it may collide with the internal parts of the instrument during the run.


6. Click **Run** to start the protocol Olink Sample Dilution 3072.

**⚠ IMPORTANT:** Make sure that the correct protocol version is used. The plate layout has changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.

### Result:

Mosquito performs a 1:10 dilution by transferring 1 µL of sample from the Sample Source Plate into quadrant 1 in the Sample Dilution Plate. The run can be monitored in the protocol tab.

7. When the Mosquito protocol is paused and a pop-up window appears on the screen, remove the Sample Source Plate and the Sample Dilution Plate from the deck and from the magnetic clamp boosters.

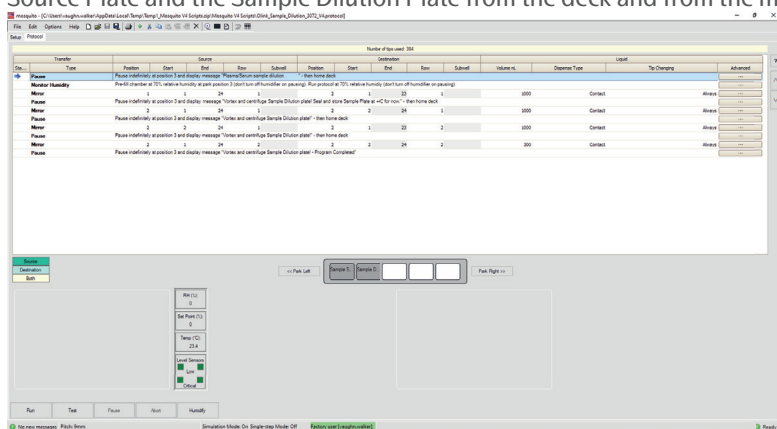

8. Seal both plates with new adhesive films and store the Sample Source Plate at +4 °C for later use
9. Using the MixMate or manual vortexing, vortex the Sample Dilution Plate thoroughly to ensure that all wells are mixed.
10. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
11. Carefully remove the adhesive film from the Sample Dilution Plate.
12. Place the Sample Dilution Plate back in the magnetic clamp booster and return it to the correct position of the Mosquito deck. All other positions shall remain empty.

13. Click *Resume* to continue the protocol.

*Result:*

*Mosquito performs a 1:100 sample dilution by transferring 1 µL of diluted samples (1:10) into quadrant 2 of the Sample Dilution Plate.*

14. When the Mosquito protocol is paused and a pop-up window appears on the screen, remove the Sample Dilution Plate from the Mosquito deck and the magnetic clamp booster. Seal with a new adhesive film.

15. Repeat steps 9–14 to perform the third dilution (1:1000).

*Result:*

*Mosquito performs a 1:1000 sample dilution by transferring 1 µL of diluted samples (1:100) into quadrant 3 of the Sample Dilution Plate.*

16. Repeat steps 9–14 again to perform the last dilution (1:100 000).

*Result:*

*Mosquito performs a 1:100 000 sample dilution by transferring 0.3 µL of diluted samples (1:1000) into quadrant 4 of the Sample Dilution Plate.*

17. Vortex the Sample Dilution Plate thoroughly using the MixMate or manual vortexing, and ensure that all wells are mixed.

18. Spin at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.

19. When finished, click *Resume* to end the protocol. Keep the Mosquito on for later use.

20. Continue to [44. Incubation](#) or place the Sample Dilution Plate at +4 °C for up to 1 hour.

*Sample Dilution Plate layout.*

*The numbers indicate the sample numbers. SC = Sample Control, NC = Negative Control, PC = Plate Control.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 44. Incubation

During this step, four Incubation Mixes are prepared manually for each panel, transferred to Reagent Source Plates, and mixed with the samples. Incubation is then performed overnight.

Since one Reagent Source Plate is used for two panels, perform the instruction twice. As the Incubation Mixes must be used within 30 minutes from preparation, prepare one Reagent Source Plate and two Incubation Plates at a time. Therefore, perform the instructions in the following order:

- Run 1: Prepare Reagent Source Plate 1, then prepare Incubation Plates 1–2 and start incubation.
- Run 2: Prepare Reagent Source Plate 2, then prepare Incubation Plates 3–4 and start incubation.

## 44.2.1 Prepare Reagent Source Plate

During this step, four Incubation Mixes per panel are prepared manually and transferred to Reagent Source Plates. Each mix contains a specific set of Forward and Reverse probes.

**⚠ IMPORTANT:** *Using the correct combination of Plate Control and Probes lots is essential for the downstream data analysis. Before starting the workflow, ensure that the lot number for each Probe kit and for the Plate Control matches the lot numbers stated in the Lot Configuration document provided with the kit.*

### Prepare bench

- Olink® Explore Incubation Solution
- Olink® Explore Forward Probes A-D (Frw probes)
- Olink® Explore Reverse Probes A-D (Rev probes)
- 2x 8-well strips
- 2x 384-well PCR plates (skirted)
- Manual pipettes (0.5–10, 10–100 µL)
- Manual multichannel pipette (8-channel, 0.5-10 µL)
- Filter pipette tips
- Adhesive films

### Before you start


- Allow the Incubation Solution, Forward Probes and Reverse Probes to reach room temperature.
- Mark two new 384-well PCR plates:
  - For Run 1: “Reagent Source Plate 1”.
  - For Run 2: “Reagent Source Plate 2”.
- Mark the wells of two 8-well strips according to:

Run	Well							
	1	2	3	4	5	6	7	8
1	1A	1B	1C	1D	2A	2B	2C	2D
2	3A	3B	3C	3D	4A	4B	4C	4D

### Instructions

1. Vortex the Incubation Solution, Forward Probes and Reverse Probes and spin down.
2. Prepare Incubation Mixes in PCR Strip 1: Using forward pipetting, first transfer the Incubation Solution to all tubes of the strip, then all Frw Probes to the applicable tubes of the strip, and last all Rev Probes to the applicable tubes of the strip in the tables below.

 **NOTE:** Pipette the Incubation Solution carefully to avoid foaming.

 **IMPORTANT:** The Incubation Solution will be used to prepare Incubation Mixes for the other panels. Do not discard.

#### Run 1

Addition order	Reagent	Well							
		1A	1B	1C	1D	2A	2B	2C	2D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Frw Probes A	Panel 1 Frw Probes B	Panel 1 Frw Probes C	Panel 1 Frw Probes D	Panel 2 Frw Probes A	Panel 2 Frw Probes B	Panel 2 Frw Probes C	Panel 2 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 1 Rev Probes A	Panel 1 Rev Probes B	Panel 1 Rev Probes C	Panel 1 Rev Probes D	Panel 2 Rev Probes A	Panel 2 Rev Probes B	Panel 2 Rev Probes C	Panel 2 Rev Probes D

#### Run 2


Addition order	Reagent	Well							
		3A	3B	3C	3D	4A	4B	4C	4D
1	Incubation Solution	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL	80 µL
2	Frw probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Frw Probes A	Panel 3 Frw Probes B	Panel 3 Frw Probes C	Panel 3 Frw Probes D	Panel 4 Frw Probes A	Panel 4 Frw Probes B	Panel 4 Frw Probes C	Panel 4 Frw Probes D
3	Rev probes	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL	10 µL
		Panel 3 Rev Probes A	Panel 3 Rev Probes B	Panel 3 Rev Probes C	Panel 3 Rev Probes D	Panel 4 Rev Probes A	Panel 4 Rev Probes B	Panel 4 Rev Probes C	Panel 4 Rev Probes D

3. Seal the PCR Strip 1 with caps. Vortex and spin down briefly. Store at room temperature until use.

 **IMPORTANT:** Make sure that all applicable reagents are added to each Incubation Mix. The final volume shall be 100 µL

 **TIME SENSITIVE STEP:** The incubation setup must be started within 30 minutes from preparation of the Incubation Mix.

4. Rotate the Sample Reagent Plate (384-well) 90 degrees clockwise to facilitate pipetting.

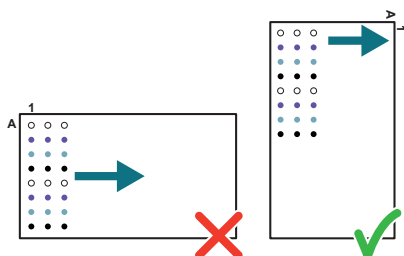

- Using a multichannel pipette, transfer 10 µL of each Incubation Mix from the PCR Strip 1 to the Reagent Source Plate 1, according to the figures below. The numbers indicate the panel numbers and the letters indicate the different blocks within the panels. Use **reverse pipetting**, and do not change pipette tips between wells. Make sure to pipette to the bottom of the wells.

Reagent Source Plate layout for Run 1.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	1A		1B		1C		1D		2A		2B		2C		2D										
B																									
C	1A		1B		1C		1D		2A		2B		2C		2D										
D																									
E	1A		1B		1C		1D		2A		2B		2C		2D										
F																									
G	1A		1B		1C		1D		2A		2B		2C		2D										
H																									
I	1A		1B		1C		1D		2A		2B		2C		2D										
J																									
K	1A		1B		1C		1D		2A		2B		2C		2D										
L																									
M	1A		1B		1C		1D		2A		2B		2C		2D										
N																									
O	1A		1B		1C		1D		2A		2B		2C		2D										
P																									

Reagent Source Plate layout for Run 2.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	
A	3A		3B		3C		3D		4A		4B		4C		4D										
B																									
C	3A		3B		3C		3D		4A		4B		4C		4D										
D																									
E	3A		3B		3C		3D		4A		4B		4C		4D										
F																									
G	3A		3B		3C		3D		4A		4B		4C		4D										
H																									
I	3A		3B		3C		3D		4A		4B		4C		4D										
J																									
K	3A		3B		3C		3D		4A		4B		4C		4D										
L																									
M	3A		3B		3C		3D		4A		4B		4C		4D										
N																									
O	3A		3B		3C		3D		4A		4B		4C		4D										
P																									

- Seal the Reagent Source Plate 1 with a new adhesive film and spin at 400-1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells.
- Immediately continue to [44.1 Prepare Incubation Plates and perform incubation](#).

## 44.1 Prepare Incubation Plates and perform incubation

During this step, the prepared Incubation Mixes are mixed with the samples in one Incubation Plate per panel using the Mosquito instrument prior to incubation.

As the Mosquito deck can only hold a limited number of plates, perform the instruction twice, once for Run 1 and once for Run 2 (one Mosquito run per Reagent Source Plate).

### Prepare bench

- Sample Source Plate, prepared in previous step
- Sample Dilution Plate, prepared in previous step
- Reagent Source Plates, prepared in previous step
- 4x 384-well PCR plates (skirted)
- Adhesive films


### Before you start

- Allow the refrigerated Sample Source Plate and Sample Dilution Plate to reach room temperature.
- Mark four new 384-well PCR plates:
  - For Run 1: “Incubation Plate [1–2]”.
  - For Run 2: “Incubation Plate [3–4]”.


**Instructions**

1. In the open Mosquito software, Select *File/Open* and choose the applicable protocol from the Load Protocol Window and select the protocol for the applicable run according to:

Setup	Run	Protocol name
Setup 1	Run 1	Olink Incubation CARDIO INF v4
	Run 2	Olink Incubation NEURO ONC v4
Setup 2	Run 1	Olink Incubation CARDIO II INF II v4
	Run 2	Olink Incubation NEURO II ONC II v4

 **IMPORTANT:** Make sure that the correct protocol and version is used. The plate layouts of the sample source plate and sample dilution plate have changed and using an older version of the protocol will result in unusable data. Please contact [support@olink.com](mailto:support@olink.com) if you need assistance.

2. Place the two Incubation Plates 1–2 in magnetic clamp boosters and place them on the Mosquito deck, refer to the software for the correct positions. Make sure to insert the corners of the magnetic clamp boosters under the small metal holders of the deck.

 **IMPORTANT:** Risk of instrument damage! If a magnetic clamp booster is not correctly placed it may collide with the internal parts of the instrument during the run.

3. Carefully remove the adhesive film from the Reagent Source Plate 1.

 **NOTE:** Make sure to use the correct Reagent Source Plate.

4. Place the Reagent Source Plate 1 in a magnetic clamp booster and place it on the Mosquito deck. Refer to the software for the correct position.

5. Click *Run*.


*Result:*

*The Mosquito transfers 0.6 µL of each Incubation Mix from the Reagent Source Plate into the Incubation Plates. The run takes approximately 10 minutes and can be monitored in the protocol tab.*

6. When the Mosquito protocol is paused, and a pop-up window appears on the screen, remove Incubation Plates 1–2 from the Mosquito deck and from the magnetic clamp boosters.

7. Inspect the Incubation Plates 1–2 to ensure that there is liquid at the bottom of all wells, and that there are no bubbles present.

 **IMPORTANT:** It is critical to not vortex the Incubation Plates.

 **NOTE:** If bubbles are present, seal the Incubation Plate(s) with new adhesive film(s) and spin at 400–1000 x g for 1 minute, then carefully remove the adhesive film(s) and check again. Do not vortex. If bubbles are still present, puncture them using a syringe needle. Change needles between wells to avoid cross-well contamination.

8. Place Incubation Plates 1–2 back in the magnetic clamp boosters and return them to their previous positions on the Mosquito deck.

9. Vortex the Sample Source Plate and Sample Dilution Plate briefly and spin down at 400–1000 x g for 1 minute. Make sure that there are no bubbles trapped at the bottom of the wells and carefully remove the adhesive films.

10. Place the Sample Source Plate and Sample Dilution Plate in magnetic clamp boosters and place them on the Mosquito deck. Refer to the software for the correct positions.

11. Click *Resume* to continue the protocol.

*Result:*

*The Mosquito transfers 0.2 µL of samples from the Sample Source Plate and Sample Dilution Plate into the Incubation Plates. The run takes approximately 15 min to be completed.*

- When the Mosquito protocol is finished, remove Incubation Plates 1–2 from the deck and from the magnetic clamp boosters. Seal with new adhesive films.

**⚠ IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

**⚠ IMPORTANT:** It is critical to not vortex the Incubation Plates.

- Spin Incubation Plates 1–2 at 400–1000 x g for 1 minute.
- Inspect Incubation Plates 1–2 to ensure that all wells contain the same amount of liquid (0.8 µL). Note if there are any wells containing bubbles.
- Write the time of the incubation starting point on the plates seals and incubate Incubation Plates 1–2 for 16 to 24 hours at +4 °C.

**✎ NOTE:** It is recommended to keep the incubation time within ±1 hour within a project. The incubation time starts when placing the Incubation Plate at +4 °C and ends when starting PCR1 in ProFlex PCR instrument.

- Remove the Sample Source Plate, Sample Dilution Plate, and Reagent Source Plate 1 from the deck. Treat the plates according to:

Incubation Run	Sample Source Plate	Sample Dilution Plate	Reagent Source Plate
Run 1	Seal with adhesive film and store at +4 °C until start of Run 2.	Seal with adhesive film and store at +4 °C until start of Run 2.	Discard
Run 2	Discard	Discard	Discard

**⚠ IMPORTANT:** Each of the two Setups requires the preparation of a new Sample Source Plate. Do not reuse the Sample Source Plate prepared during Setup 1 when preparing Setup 2.

- Repeat [44.2.1 Prepare Reagent Source Plate](#) and [44.1 Prepare Incubation Plates and perform incubation](#) for Run 2, using PCR Strip 2, Reagent Source Plate 2 and Incubation Plates 3–4.
- When finished, clear the Mosquito and shut it down according to instructions in the Olink® Explore Overview User Manual.

*Incubation Plate layout.*

*The numbers indicate the sample numbers.*

*The colors indicate the different blocks within the panel: white = block A, purple = block B, blue = block C, black = block D.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC



# 45. Prepare for day 2

## Prepare bench

- MilliQ water
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution

## Instructions

1. Place 30 mL of MilliQ water at +4 °C overnight.
2. Thaw the PCR1 Enhancer at room temperature overnight.
3. Optional: Thaw the PCR1 Solution at +4 °C overnight.

# 46. Extension and pre-amplification (PCR1)

During this step, a PCR1 Mix is prepared manually and dispensed into the four Incubation Plates using the Dragonfly. The plates are renamed “PCR1 Plates” and subjected to a PCR reaction using two ProFlex instruments.

## 46.1 Prepare PCR1 Mix

During this step, a PCR1 Mix is prepared manually. The PCR1 Mix must be used within 30 minutes from preparation.

### Prepare bench


- Incubation Plates 1–4, prepared in previous step
- Olink® Explore PCR1 Enhancer
- Olink® Explore PCR1 Solution
- Olink® Explore PCR1 Enzyme (when brought to the lab bench, keep the PCR1 Enzyme in a freezing block (-20 °C))
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x Falcon tube (50 mL)

### Before you start


- Thaw the PCR1 Solution at +4 °C overnight (optional), or at room temperature before starting the PCR1 setup (it may take several hours) and ensure that it is fully thawed and has reached room temperature.
- Ensure that the PCR1 Enhancer is fully thawed and has reached room temperature.
- Let the refrigerated Incubation Plates reach room temperature.
- Mark the new 50 mL Falcon tube: "PCR1 Mix".
- Switch on the two ProFlex PCR instruments in the post-PCR room.

## Instructions

1. Vortex the PCR1 Solution and PCR1 Enhancer thoroughly and spin down briefly.

 **IMPORTANT:** *Insufficient thawing and vortexing of the PCR1 Enhancer may lead to particles attaching to the syringe and run failure.*


2. Spin the PCR1 Enzyme briefly. Do not vortex.

 **NOTE:** *Always keep the PCR1 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).*

3. Spin the Incubation Plates 1–4 down for 1 minute at room temperature.
4. Prepare a PCR1 Mix in a Falcon tube in the following order, using the volumes indicated in the table below:
  - First add MilliQ water and PCR1 Enhancer and vortex thoroughly.
  - Then add the PCR1 Solution and PCR1 Enzyme, and vortex for 3 seconds.

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	27 000
2	PCR1 Enhancer	3 510
3	PCR1 Solution	3 510
4	PCR1 Enzyme	351
Total		34 371

5. Keep at room temperature until use.

 **TIME SENSITIVE STEP:** *Dispensing of the PCR1 Mix using the Dragonfly must start within 30 minutes from PCR1 Mix preparation.*

## 46.2 Prepare PCR1 Plates and perform PCR1

During this step, the prepared PCR1 Mix is dispensed into the Incubation Plates using the Dragonfly, and the plates are subjected to a PCR reaction in two ProFlex instruments.

The PCR1 Plates must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate. Since each ProFlex can hold two plates, prepare two plates at a time. Perform the instructions in the following order:

- Dispense PCR1 Mix into Incubation Plates 1–2 using the Dragonfly. Start a PCR1 run for these two plates on one of the ProFlex instruments.
- Dispense PCR1 Mix into Incubation Plates 3–4 plates using the Dragonfly. Start a PCR1 run for these plates on the second ProFlex instrument.

### Prepare bench


- Incubation Plates 1–4 at room temperature, prepared in previous step
- PCR1 Mix, prepared in previous step
- Timer
- 3x Disposable reservoirs (10 mL)
- 3x Disposable ultra-low retention syringes with plungers
- Manual pipette (5 or 10 mL)
- Filter pipette tips
- Adhesive films

### Before you start


- Set a timer to 10 minutes.

## Instructions

- Start the PCR protocol Olink PCR1 on the two ProFlex PCR instruments. Pause when the PCR block temperature reaches 50 °C.

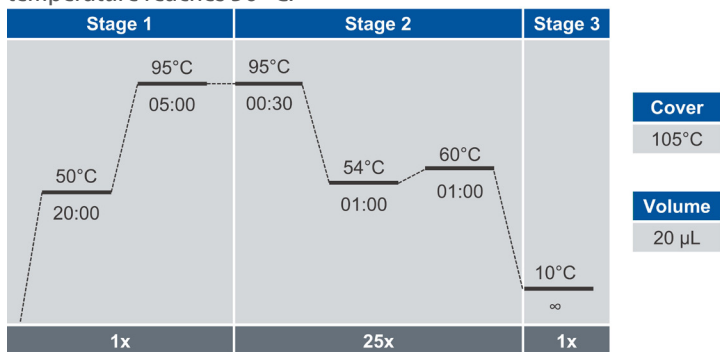


- Prepare the Dragonfly according to instructions in the Olink® Explore Overview User Manual.
  - Use the protocol Olink PCR1 Setup plate v4.
  - Attach three syringes in position B2, B3, and B4.
- Slide the reservoir tray to the filling position (A) and place three new reservoirs in position B2, B3 and B4 (B).

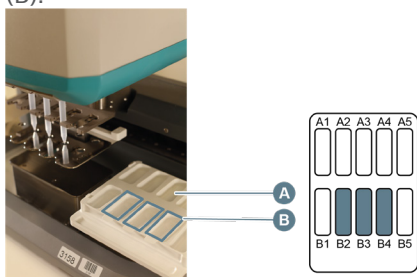

- Transfer 11 mL of PCR1 Mix into each of the three reservoirs.

**⚠ IMPORTANT:** The syringes and PCR1 Mix are used to prepare all four PCR1 Plates. Do not discard until all PCR1 Plates are complete.

- Carefully slide the reservoir tray back to the aspirate position.

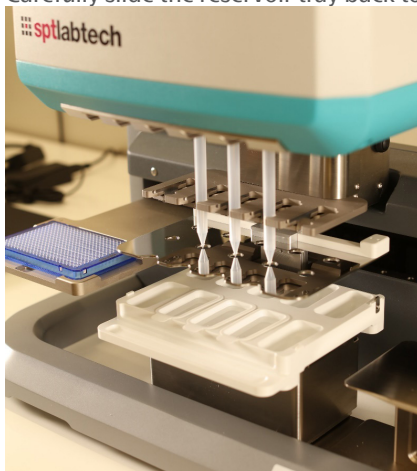


- Rename Incubation Plate 1 “PCR1 Plate 1” and Incubation Plate 2 “PCR1 Plate 2”. Spin down the plates.
- Carefully remove the adhesive film from PCR1 Plate 1 and place it in the Dragonfly plate position (to the left), with well A1 in the top left corner.

- Select the *Run* tab in the *Constant layer* view of the software, then click *RUN* to start the protocol. Start the timer when PCR1 Mix is added to the first well of the plate.

*Result:*

*Dragonfly dispenses 19 µL of PCR1 Mix into each well of the PCR1 Plate 1.*

 **TIME SENSITIVE STEP:** *The PCR1 Plate must be placed in the ProFlex exactly 10 minutes after the PCR1 Mix has been added to the first well of the first plate.*

- When the Dragonfly has returned the PCR1 Plate 1 to the plate position and released the plate clamp, remove the plate from the instrument and immediately seal it with a new adhesive film.
- Inspect the PCR1 Plate 1 to ensure that all wells contain the same amount of liquid (19.8 µL). Using the MixMate or manual vortexing, vortex the plate thoroughly to ensure that all wells are mixed.
- Repeat steps 7–10 for PCR1 Plate 2.
- In the Post-PCR room, centrifuge PCR1 Plates 1–2 at 400–1000 x g for 1 minute.
- Inspect PCR1 Plates 1–2 to ensure that all wells contain the same amount of liquid (19.8 µL). Note any deviations.
- When the timer ends (after 10 minutes), place PCR1 Plates 1–2 in one of the two pre-heated ProFlex instruments and click *Resume* to run the protocol.
- Repeat steps 6–14 for Incubation Plates 3–4, except rename Incubation Plate 3 as "PCR Plate 3", and Incubation Plate 4 as "PCR Plate 4". Place both plates in the second ProFlex.
- When finished, clear the Dragonfly and shut it down according to instructions in the Olink® Explore Overview User Manual.
- When the protocols are finished (~1 hour 55 minutes), continue to [47. Pool PCR1 products](#), or store the four PCR1 Plates at +4 °C if used the same day.

 **SAFE STOPPING POINT:** *The PCR1 Plates can be stored at -20 °C for up to 2 weeks*

*PCR1 plate layout.*

*The numbers indicate the sample numbers.*

*The colors indicate the different blocks within the panel: White = block A, purple = block B, blue = block C, black = block D.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 47.Pool PCR1 products

During this step, the PCR1 products from the PCR1 Plates are pooled into one PCR1 Pooling Plate using the epMotion instrument.

## Prepare bench


- PCR1 Plates 1–4, prepared in previous step
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- 1x 384-well PCR plate (skirted)
- 1x epMotion reservoir (30 mL)
- Dispensing tool TM50-8
- Dispensing tool TM10-8
- epT.I.P.S. Motion pipette tips (10 µL)
- epT.I.P.S. Motion pipette tips (50 µL)
- Waste bag
- Adhesive films

## Before you start

- Thaw PCR1 Plates 1–4 at room temperature if frozen.
- Mark the new 384-well PCR plate: “PCR1 Pooling Plate”.
- Switch on the epMotion system, open the EpBlue software and log in.

## Instructions

1. Make sure that PCR1 Plates 1–4 are thawed and properly sealed, then vortex the plates and spin down at 400–1000 x g for 1 minute at room temperature.
2. Inspect the wells of PCR1 Plates 1–4 to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells. Spin down the plates again if necessary.
3. Open the EpBlue Application Runner. In the application library, select user and the protocol 1 Olink PCR1 Pooling 4 panels.
4. When the ID number of the instrument is shown in the software, click *Next* to continue.
5. Prepare the epMotion worktable according to the software instructions. Add 6 mL MilliQ water to the reservoir.
  - Place PCR1 Plates 1–4 on the thermoadapters according to figure below.
  - Carefully remove the adhesive films.

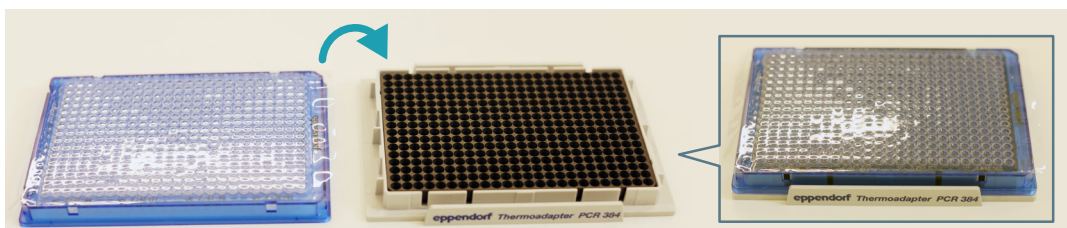

**NOTE:** Make sure to place tip boxes and plates in the correct position and orientation according to the layout presented in the software, and that empty positions in the software are also empty on the worktable. Failure to follow the layout in the software can lead to instrument damage.

- Place a waste bag in the waste container. Pull the edge of the bag tightly downwards to ensure that the path of the dispensing tool and access to the rack are not obstructed.



- Close the front hood.
- Click *Next* in the software, then enter the following settings:
  - Under *Volume settings*: Activate *Input volumes manually*.
  - Under *Worktable settings*: Deactivate *Check tube lid removed*.
- Click *Next* until a *Run* button appears, then click *Run* to start the protocol.

*Result:*

The epMotion automatically scans the worktable, dispenses 12 µL MilliQ water into each well of the PCR1 Pooling Plate, and pools 3 µL of each PCR1 product from each sample into one well per panel. The run takes approximately 50 minutes to be completed.

- When the protocol is finished (indicated by a sound signal and a message in the software), remove the PCR1 Pooling Plate and seal it with a new adhesive film. Keep the epMotion® on for later use.
- Vortex the PCR1 Pooling Plate and spin down at 400–1000 x g for 1 minute.
- Inspect the PCR1 Pooling Plate to ensure that all wells contain the same amount of liquid (24 µL).
- Remove PCR1 Plates 1–4 containing the remaining PCR products and seal them with new adhesive films. Store them at -20 °C for up to 2 weeks in case of potential reruns.
- Continue to [48. Amplification and sample indexing](#), or store the PCR1 Pooling Plate at +4 °C until ready to use (the same day).

*PCR1 Pooling Plate layout.*

*The numbers indicate the sample numbers.*

*The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.*

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC



# 48. Amplification and sample indexing

During this step, a PCR2 Mix is prepared manually and then mixed with the samples along with index primers (unique for each sample) using the epMotion. The samples are then subjected to a second PCR reaction.

## 48.1 Prepare PCR2 Mix

During this step, a PCR2 Mix is prepared manually. The PCR2 Mix must be used within 15 minutes from preparation.

### Prepare bench

- PCR1 Pooling Plate, prepared in previous step
- Olink® Explore PCR2 Solution
- Olink® Explore PCR2 Enzyme (when brought to the lab bench, keep the PCR2 Enzyme in a freezing block (-20 °C))
- Olink® Explore Index Plate 1
- MilliQ water (at +4 °C, preferably kept in the fridge until use)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Filter pipette tips

### Before you start

- Thaw the PCR2 Solution and the Index Plate 1 at room temperature.
- If stored at +4 °C, allow the PCR1 Pooling Plate to reach room temperature.
- Mark the new 15 mL tube: "PCR2 Mix".
- Switch on one ProFlex™ PCR instrument. No preheating is required.

### Instructions

1. Vortex the PCR2 Solution and spin it briefly.
2. Vortex the Index Plate 1 and spin it at 400–1000 x g for 1 minute.
3. Make sure that the PCR1 Pooling Plate is properly sealed, then vortex it and spin at 400–1000 x g for 1 minute.
4. Spin the PCR2 Enzyme briefly. Do not vortex.



**NOTE:** Always keep the PCR2 Enzyme at -20 °C. When brought to the lab bench, keep it in a freezing block (-20 °C).

5. Prepare a PCR2 Mix in a Falcon tube following the order and volumes according to:

Addition order	Reagent	Volume (µL)
1	MilliQ water (+4 °C)	6 065
2	PCR2 solution	870
3	PCR2 Enzyme	18
	Total	6 953

6. Vortex the PCR2 Mix thoroughly. Keep at room temperature until use.



**TIME SENSITIVE STEP:** Start the dispensing of the PCR2 Mix within 15 minutes from preparation.

## 48.2 Prepare PCR2 Plate and perform PCR2

During this step, the prepared PCR2 Mix is mixed with the samples along with index primers using the epMotion®. The samples are then subjected to a second PCR reaction.

### Prepare bench

- PCR1 Pooling Plate (at room temperature), prepared in previous step
- PCR2 Mix, prepared in previous step
- Olink® Explore Index Plate 1
- 1x 384-well PCR plate (skirted)
- epMotion® reservoir (30 mL)
- epT.I.P.S.® Motion pipette tips (10 µL)
- epT.I.P.S.® Motion pipette tips (50 µL)
- Dispensing tool TM50-8
- Dispensing tool TM10-8
- Waste bag
- Adhesive films

### Before you start

- Mark the new 384-well PCR plate: “PCR2 Plate”.

### Instructions

1. Pour the PCR2 Mix into a 30 mL epMotion reservoir. Make sure that no air bubbles are trapped at the bottom of the reservoir.
2. Open the *EpBlue Application Runner*. In the application library, select user and the protocol 2 Olink PCR2 Setup 4 panels.
3. When the ID number of the instrument is shown in the software, click *Next* to continue.
4. Centrifuge Index Plate 1 at 400–1000 x g for 1 minute and inspect the plate to ensure that all wells contain the same amount of liquid (20 µL). If a well is empty or contains a lower volume, contact Olink Support.
5. Carefully remove the adhesive films from the Index Plate 1 and the PCR1 Pooling Plate. Make sure that no air bubbles are trapped at the bottom of the wells of the PCR1 Pooling Plate.
6. Prepare the epMotion worktable according to the software instructions.




**NOTE:** Make sure to place tip boxes and plates in the correct position and orientation according to the layout presented in the software, and that empty positions in the software are also empty on the worktable. Failure to follow the layout in the software can lead to instrument damage.

7. Click *Next* in the software, then enter the following settings:
  - Under *Volume settings*: Activate *Input volumes manually*.
  - Under *Worktable settings*: Deactivate *Check tube lid removed*.
8. Click *Next* until a *Run* button appears, then click *Run* to start the protocol.  
Result:  
*epMotion transfers 16 µL PCR2 Mix, 2 µL Index Primers (from the Index Plate 1) and 2 µL PCR1 products (from the PCR1 Pooling Plate) into the applicable wells of the PCR2 Plate. The run takes approximately 40 minutes.*
9. When the protocol is finished (indicated by a sound signal and a message in the software), remove the PCR2 Plate and seal it with a new adhesive film. Keep the epMotion on for later use.

**⚠ IMPORTANT:** All wells must be properly sealed to avoid evaporation of the samples.

**🕒 TIME SENSITIVE STEP:** Start the PCR2 protocol within 5 minutes from end of epMotion protocol.

10. Vortex and spin down at 400–1000 x g for 1 minute at room temperature.
11. Inspect the PCR2 Plate to ensure that all wells contain the same amount of liquid (20 µL).
12. Place the PCR2 Plate in the ProFlex and add a balance plate to the other side of the ProFlex.
13. Click *Open* and select the protocol *01link Index PCR2*. Click *Start*.

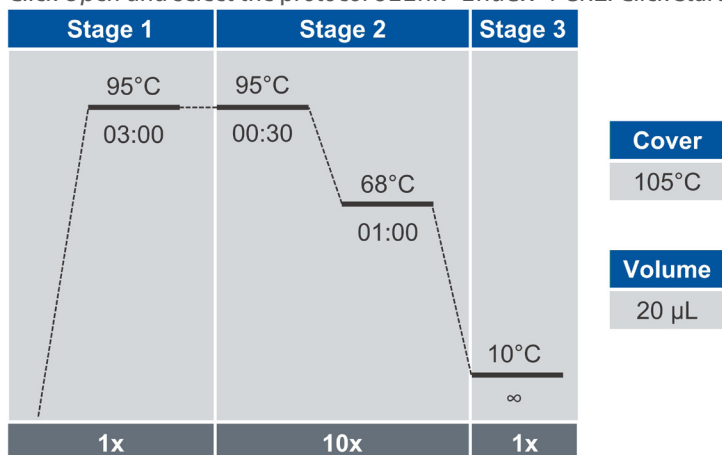

14. Remove the PCR1 Pooling Plate containing the remaining PCR products from the epMotion and seal it with a new adhesive film. Store it at -20 °C for up to 2 weeks in case of potential reruns.
15. Discard the Index Plate 1.
16. When the protocol is finished (~25 minutes), continue to [49. Pool PCR2 products](#), or store the PCR2 Plate at +4 °C until use (the same day).

**> SAFE STOPPING POINT:** The PCR2 Plate can be stored at -20 °C for up to 2 weeks.

**PCR2 Plate layout**

The numbers indicate the sample numbers.

The colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
A	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
B	1	1	9	9	17	17	25	25	33	33	41	41	49	49	57	57	65	65	73	73	81	81	SC	SC
C	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
D	2	2	10	10	18	18	26	26	34	34	42	42	50	50	58	58	66	66	74	74	82	82	SC	SC
E	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
F	3	3	11	11	19	19	27	27	35	35	43	43	51	51	59	59	67	67	75	75	83	83	NC	NC
G	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
H	4	4	12	12	20	20	28	28	36	36	44	44	52	52	60	60	68	68	76	76	84	84	NC	NC
I	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
J	5	5	13	13	21	21	29	29	37	37	45	45	53	53	61	61	69	69	77	77	85	85	NC	NC
K	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
L	6	6	14	14	22	22	30	30	38	38	46	46	54	54	62	62	70	70	78	78	86	86	PC	PC
M	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
N	7	7	15	15	23	23	31	31	39	39	47	47	55	55	63	63	71	71	79	79	87	87	PC	PC
O	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC
P	8	8	16	16	24	24	32	32	40	40	48	48	56	56	64	64	72	72	80	80	88	88	PC	PC

# 49.Pool PCR2 products

During this step, all PCR2 products belonging to the same panel are pooled into one column of the PCR2 Pooling Plate using the epMotion. The Olink libraries are then manually transferred to one microcentrifuge tube per panel. Each tube contains amplicons from 96 samples, including controls.

## Prepare bench


- PCR2 Plate, prepared in previous step
- 1x 96-well PCR plate (skirted)
- 4x microcentrifuge tubes (1.5 mL)
- epT.I.P.S.® Motion pipette tips (10 µL)
- Dispensing tool TM10-8
- Waste bag
- Manual pipette (10-100 µL)
- Filter pipette tips
- Adhesive films

## Before you start

- Thaw PCR2 Plate at room temperature if frozen.
- Mark the new 96-well PCR plate: "PCR2 Pooling Plate".
- Mark four new microcentrifuge tubes: "PCR2 [1–4]".

## Instructions

1. Open the *EpBlue Application Runner*.
2. In the application library, select user and the applicable protocol  
3 Olink PCR2 Pooling 4 panels.
3. When the ID number of the instrument is shown in the software, click *Next* to continue.
4. Make sure that the PCR2 Plate is thawed and properly sealed, then vortex and spin it down at 400–1000 x g for 1 minute at room temperature to ensure that all wells are mixed.
5. Inspect the wells of the PCR2 Plate to make sure that no liquid has evaporated and that all the liquid is at the bottom of the wells.
6. Prepare the epMotion worktable according to the software instructions.

 **IMPORTANT:** Make sure to place tip boxes and plates in the correct position and orientation according to the layout presented in the software, and that empty positions in the software are also empty on the worktable. Failure to follow the layout in the software can lead to instrument damage.

7. Click *Next* in the software, then enter the following settings:
  - Under *Volume settings*: Activate *Input volumes manually*.
  - Under *Worktable settings*: Deactivate *Check tube lid removed*.
8. Click *Next* until a *Run* button appears, then click *Run* to start the protocol.  
*Result:*  
epMotion pools 3 µL from each well in a row of the PCR2 Plate into a single column of the PCR2 Pooling Plate. The result is one PCR2 Pooling Plate column of pooled PCR2 products per panel.
9. When finished, remove the PCR2 Pooling Plate from the worktable. Seal the plate with a new adhesive film, vortex the plate and spin down at 400–1000 x g for 1 minute.
10. Inspect the PCR2 Pooling Plate to ensure that every applicable well contains the same amount of liquid (36 µL in columns 1, 3, 5 and 7).

- Clear the epMotion and shut it down according to instructions in the Olink® Explore Overview User Manual.

*PCR2 Pooling Plate layout.*

The numbers and colors indicate the panel numbers: light blue = Panel 1, green = Panel 2, dark blue = Panel 3, grey = Panel 4.

	1	2	3	4	5	6	7	8	9	10	11	12
A	1		2		3		4					
B	1		2		3		4					
C	1		2		3		4					
D	1		2		3		4					
E	1		2		3		4					
F	1		2		3		4					
G	1		2		3		4					
H	1		2		3		4					

- Carefully remove the adhesive film from the PCR2 Pooling Plate.
- Using a single-channel pipette transfer the pooled PCR2 products from the PCR2 Pooling Plate to the PCR2 Tubes 1–4 as described in the table below. Use forward pipetting, and change pipette tip after each well.

Volume (µL) /well	From column	To tube
30	1	PCR2 1
30	3	PCR2 2
30	5	PCR2 3
30	7	PCR2 4

- Vortex the four PCR2 Tubes 1–4 and spin down briefly.
- Remove the PCR2 Plate containing the remaining PCR2 products from the instrument, seal it with a new adhesive film and store it at -20 °C for up to 2 weeks in case of potential reruns.
- Discard the PCR2 Pooling Plate.
- Continue to [50. Library purification](#), or store the PCR2 Tubes at +4 °C until use (the same day).

➤ **SAFE STOPPING POINT:** The PCR2 Tubes can be stored at -20 °C for up to 2 weeks.

# 50. Library purification

During this step, the Olink Libraries are purified using magnetic beads and the eluates are transferred into one new microcentrifuge tube per panel.

## Prepare bench

- PCR2 Tubes 1–4, prepared in previous step
- Agentcourt AMPure XP bottle
- 96% Ethanol (EtOH)
- MilliQ water
- DynaMag™-2 Magnet
- Timer
- 8 Microcentrifuge tubes (1.5 mL)
- Falcon tube (15 mL)
- Manual pipettes (10–100 µL, 100–1000 µL)
- Pipette 5 mL
- Filter pipette tips

## Before you start

- Let the refrigerated Agentcourt AMPure XP bottle reach room temperature.
- Mark four new microcentrifuge tubes: “BP [1–4]” (for “Bead Purification”).
- Mark four new microcentrifuge tubes: “Lib [1–4]”.
- Mark the new 15 mL Falcon tube: “70% EtOH”.
- Set a timer to 5 minutes.

## Instructions

1. Freshly prepare a sufficient amount of 70% EtOH for the number of Libraries to purify according to the table below. Manually transfer first the MilliQ water and then the 96% EtOH into the Falcon tube.


Reagent	Volume (mL) for							
	1 library	2 Libraries	3 Libraries	4 Libraries	5 Libraries	6 Libraries	7 Libraries	8 Libraries
MilliQ water	0.5	0.8	1.1	1.4	1.6	1.9	2.2	2.5
96% EtOH	1.5	2.2	2.9	3.6	4.4	5.1	5.8	6.5
Total (70% EtOH)	2	3	4	5	6	7	8	9

2. Shake and vortex the Agentcourt AMPure XP bottle vigorously to resuspend the magnetic beads.
3. Transfer 80 µL from the Agentcourt AMPure XP bottle to each BP Tube.
4. Transfer 50 µL from each PCR2 Tube to the corresponding BP Tube according to:


Volume (µL)	From tube	To tube
50	PCR2 1	BP 1
50	PCR2 2	BP 2
50	PCR2 3	BP 3
50	PCR2 4	BP 4

 **NOTE:** Store the PCR2 Tubes at -20 °C in case the purification needs to be repeated.

5. Pipette-mix 10 times to thoroughly mix the Libraries with the beads. Change pipette tip between every tube.
6. Start the timer after the last tube has been mixed and incubate the BP Tubes 1–4 for 5 minutes at room temperature.
7. After the incubation, place the BP Tubes 1–4 on the DynaMag-2 Magnetic stand and leave them for 2 minutes to separate the beads from the solution.

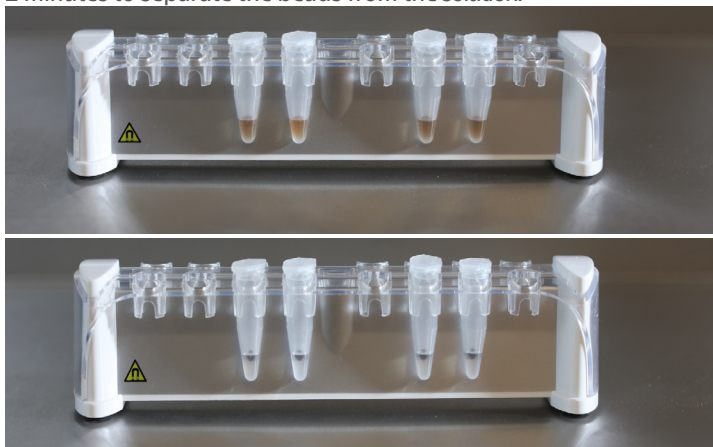

8. With the tubes still on the magnetic stand, carefully open the lids and discard 125 µL supernatant using a single-channel pipette. Do not disturb the beads.
9. With the tubes still on the magnetic stand, wash the beads:
  - a. Add 500 µL of 70% EtOH to every BP Tube. Pipette onto the opposite wall from the beads.

 **NOTE:** Make sure not to disturb the beads.

- b. Leave the tubes to incubate for 30 seconds.
- c. Using a single-channel pipette, aspirate the EtOH, without disturbing the beads. Discard the EtOH.
- d. Repeat steps a) – c) once.

 **IMPORTANT:** Make sure that no EtOH remains in the BP Tubes after this step. Use a smaller pipette to remove any residual EtOH.

10. Leave the tubes with the lids open on the magnetic stand for 2 minutes for the beads to air dry.
11. Close the tubes and remove them from the magnetic stand.
12. Add 50 µL of MilliQ water to the BP Tubes 1–4 and pipette-mix 10 times towards the beads to elute the purified Libraries from the beads.
13. Incubate the tubes for 2 minutes at room temperature.
14. Place BP Tubes 1–4 on the magnetic stand and leave them for 1 minute to separate the beads from the eluted Library solution.
15. With BP Tubes 1–4 still on the magnetic stand, transfer 45 µL of eluate from the BP Tubes to the corresponding Lib Tubes according to:

Volume (µL)	From tube	To tube
45	BP 1	Lib 1
45	BP 2	Lib 2
45	BP 3	Lib 3
45	BP 4	Lib 4

 **IMPORTANT:** Make sure not to disturb or aspirate the beads.

16. Discard BP Tubes 1–4.
17. Continue to [51. Quality control](#).

 **SAFE STOPPING POINT:** The Lib Tubes can be stored at -20 °C for up to 4 weeks.




# 51. Quality control


During this step, the four purified Olink Libraries are quality controlled on the Bioanalyzer using the High Sensitivity DNA kit or on the TapeStation using the High Sensitivity D5000 kit, according to the Manufacturer's instructions.

The electropherograms in the figures below displays typical results for an Olink Library. The purified Olink Library appears as a single or double peak around 150 bp. Peaks of larger sizes represents bubble products and do not have any impact on sequencing results, see <https://emea.support.illumina.com/bulletins/2019/10/bubble-products-in-sequencing-libraries--causes--identification-.html> for more information.

Bioanalyzer's electropherogram.

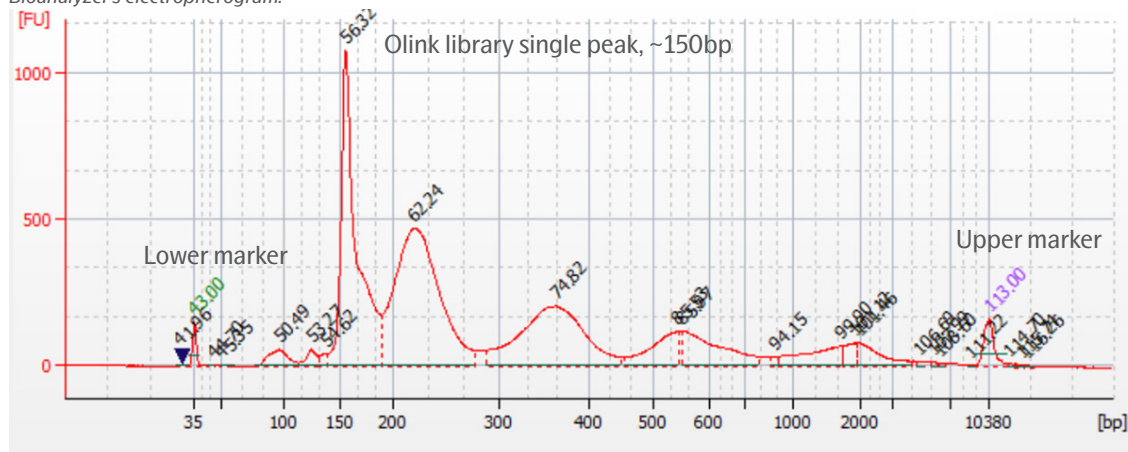

TapeStation's electropherogram.

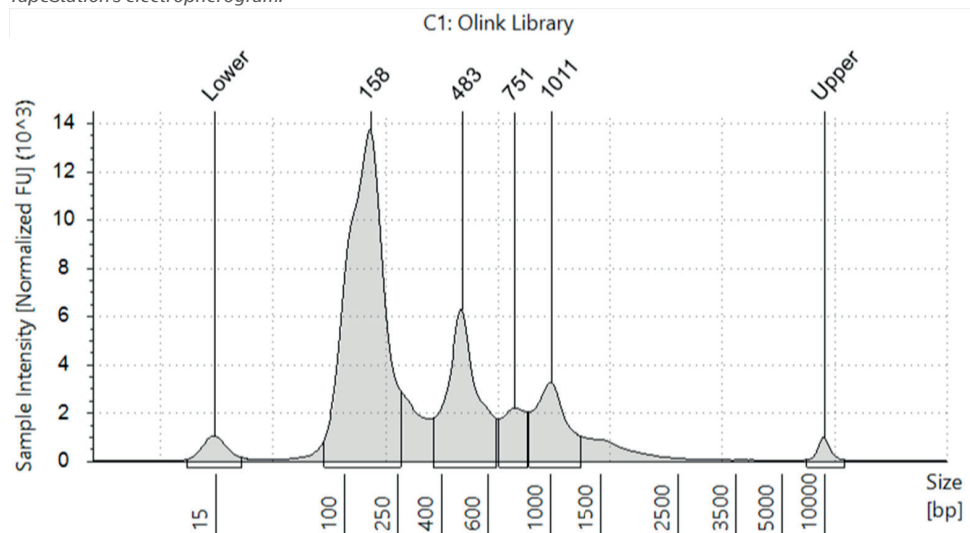

For expected results of a successful ladder run, refer to the Manufacturer’s Manual. If any of the deviations in the table below should occur in the electropherogram, do not continue to sequencing. Instead, perform the suggested corrective action.

Peak deviation	Possible cause	Action
No Library peak present at 150bp.	1) No PCR1 amplification has taken place, and therefore there are no PCR2 products and no Library 2) The bead purification failed	Rerun the quality control with unpurified Library. If a peak is present at 150bp: purify a new aliquot of the unpurified Library and rerun the quality control. If successful, proceed to sequencing.  If there is no 150bp peak present in the unpurified Library, no PCR product has been generated. Repeat the Library preparation, quality control and sequencing.
No Library peak present at 150bp, but a smaller peak at 120bp	The index primers were not included in the PCR2 reaction (the 120bp peak corresponds to the PCR1 product). 1) The Index plate was empty. 2) There was no transfer of index primers from the Index Plate to the PCR2 Plate due to epMotion® failure.	Contact Support. Make sure to centrifuge and visually inspect the Index Plate before starting the PCR2 setup. Make sure that the epMotion® is calibrated, functional and that the correct protocol is used.

## 52. Next generation sequencing

Next generation sequencing is performed using either of the following Illumina instruments:

- NextSeq™ 550
- NextSeq™ 2000
- NovaSeq™ 6000
- NovaSeq™ X Plus

As the workflow differs between instruments, refer to the applicable Olink® Explore Sequencing User Manual for instructions on how to sequence Olink Libraries.

# Part 6: Laboratory instructions for 384 samples

## 53. Short instructions

This chapter provides instructions on how to perform each step of the Olink Explore 3072 workflow for the preparation of 384 samples distributed across four different 96-well Sample Plates. The instructions below describe how to perform the workflow for the preparation of one Sample Plate at a time.

Most steps are performed in a similar way as for the 96-sample workflow described in Part 2–5. Changes specific to the 384-sample workflow are highlighted in this chapter.

### 53.1 Preparations

During this step, the study is planned according to the *Plan the study* section and one 96-well Sample Plate is prepared according to the *Prepare the samples* section in the relevant chapter.

### 53.2 Prepare Sample Source Plate

During this step, samples are manually transferred from the Sample Plate into the Sample Source Plate, and controls are added to the Sample Source Plate according to the section *Prepare Sample Source Plate (day 1)* in the relevant chapter.

### 53.3 Sample Dilution

During this step, Sample Diluent is dispensed into the Sample Dilution Plate using the Dragonfly according to the *Prepare Sample Dilution Plate* in the relevant chapter. The samples are then diluted according to the *Perform Sample Dilution* section.



**NOTE:** *If performing the workflow for multiple Sample Plates, note that it is not possible to prepare multiple Sample Dilutions Plates at the same time.*

### 53.4 Incubation

During this step, four Incubation Mixes are prepared manually for each panel, transferred to Reagent Source Plates, and mixed with the samples according to the *Incubation* section in the relevant chapter. Incubation is then performed overnight.

### 53.5 Preparation of reagents for day 2

During this step, the reagents are prepared for day 2 according to the *Preparation of reagents for day 2* section in the relevant chapter.

## 53.6 Extension and pre-amplification (PCR1)

During this step, a PCR1 Mix is prepared manually according to the section *Prepare PCR1 Mix* in the relevant chapter. The PCR1 Mix is then dispensed into the Incubation Plates using the Dragonfly and the plates are subjected to a PCR reaction according to the section *Prepare PCR1 Plates and perform PCR1* in the relevant chapter.



**NOTE:** *If performing the workflow for multiple Sample Plates, note that one PCR1 Mix is enough for four Incubation Plates.*

## 53.7 Pool PCR1 products

During this step, the PCR1 products from the four PCR1 Plates are pooled into one PCR1 Pooling Plate according to the *Pool PCR1 products* section in the relevant chapter.

## 53.8 Amplification and sample indexing (PCR2)

During this step, the prepared PCR2 Mix is mixed with the samples along with index primers according to the section *Prepare PCR2 Mix* in the relevant chapter. However, one of the four Index Plates (Index Plates 1, 2, 3, or 4) is used. The samples are then subjected to a second PCR reaction using a ProFlex instrument according to the section *Prepare PCR2 Plate and perform PCR2* in the relevant chapter.



**NOTE:** *Using four different Index Plates allows each of the 384 samples to be indexed with a unique index, and to be sequenced together in the same flow cell.*

## 53.9 Pool PCR2 products

During this step, the PCR2 products belonging to the same panel are pooled into one column of the PCR2 Pooling Plate, then manually transferred to one microcentrifuge tube per panel according to the section *Pool PCR2 products* in the relevant chapter. Each of the four tubes contain amplicons from 96 samples, including controls.

## 53.10 Library purification

During this step, the four Olink Libraries are purified using magnetic beads and the eluates are transferred into one new microcentrifuge tube per panel according to the *Library purification* section in the relevant chapter.

## 53.11 Quality control

During this step, the purified Olink Libraries are quality controlled as described in the *Quality control* section in the relevant chapter.

## 53.12 Pool Libraries with different indices

Performing the workflow for all four Sample Plates results in a total of 32 purified and quality controlled Olink Libraries: four different 96-sample Libraries per panel. During this step, the four different 96-samples Libraries from the same panel are pooled together, resulting in four pooled Libraries containing one panel and 384 samples each.

### Prepare bench


- 32x Lib Tubes, prepared previously
- 8x Microcentrifuge tubes (1.5 mL)
- Manual pipette (0.5–10 µL)
- Filter pipette tips

### Before you start

- Mark four new microcentrifuge tubes: "PL [1–8]" (for "Pooled Library")

### Instructions

1. Transfer 5 µl from the four Lib Tubes containing the same panel Library to the corresponding PL Tube.
2. Vortex PL Tubes 1-8 and spin down briefly.

 **IMPORTANT:** Make sure to pool Libraries generated using the four different Index Plates. Pooling Libraries that have the same indices will result in unusable data.

 **SAFE STOPPING POINT:** The PL Tubes can be stored at -20 °C for up to 4 weeks

## 53.13 Next generation sequencing

Next generation sequencing is performed using the Illumina® NovaSeq™ 6000 instrument. Refer to the Olink® Explore Sequencing using NovaSeq 6000™ User Manual for instructions on how to sequence 384-sample Olink Libraries.

# 54.Revision history

Version	Date	Description
4.0	2024-04-16	<p>3 updated.</p> <p>Vortex table added to all "Important information" sections.</p> <p>IMPORTANT regarding vortex with MixMate added to all "Perform sample dilution" sections.</p> <p><i>Part 2</i>: Laboratory instructions for 96 samples using Formulatrix F.A.S.T.™ as Post-PCR added.</p> <p>Illumina® NovaSeq X Plus as sequencing instrument added.</p> <p>Editorial changes.</p>
3.1	2023-06-26	Added instructions for F.A.S.T.™.
3.0	2023-05-12	<p>New trademarks and disclaimer.</p> <p><i>Part 5</i> added.</p>
2.0	2023-02-16	<p>Laboratory instructions for 96 samples: columns, quadrants and protocol versions edited.</p> <p>Laboratory instructions for 96 samples - Prepare Sample Source Plate: Plate layout corrected.</p> <p>Laboratory instructions for 96 samples - Sample dilution: Plate layout corrected and Important added.</p> <p>Laboratory instructions for 96 samples - Prepare Incubation Plates and perform incubation: Important edited.</p> <p>Laboratory instructions for 96 samples - Quality control: edited.</p> <p>Laboratory instructions for 96 samples - Pool PCR products: PCR2 Pooling Plate layout added.</p>
1.5	2022-12-21	<p>3 added.</p> <p>References to Hamilton STAR® added.</p>
1.4	2022-11-01	<p>Laboratory instructions for 96 samples: Paragraph added.</p> <p>Laboratory instructions for 96 samples - Prepare Incubation Plates and perform incubation: tables updated</p> <p>Important added.</p>
1.3	2022-09-28	<p>Laboratory instructions for 96 samples - First two paragraphs edited.</p> <p>Laboratory instructions for 96 samples - Prepare Sample Source Plate: Important edited and Important added.</p> <p>Laboratory instructions for 96 samples - Prepare Reagent Source Plate: Important added and changed name of Sample Source Plate to Sample Reagent Plate.</p> <p>Editorial changes.</p>
1.2	2022-05-13	<p>Laboratory instructions for 96 samples - Perform Sample Dilution: Step 17 and 18 added.</p> <p>Laboratory instructions for 96 samples - Prepare Reagent Source Plate: Note edited and step 17 corrected.</p> <p>Laboratory instructions for 96 samples - Prepare PCR1 Mix: Note edited.</p> <p>Laboratory instructions for 96 samples - Amplification and sample indexing (PCR2):</p> <p>Clarified the time limit for using the PCR2 Mix.</p> <p>Time Sensitive Step changed.</p> <p>Time Sensitive Step added.</p> <p>Laboratory instructions for 96 samples - Prepare PCR2 Plate and perform PCR2: Step 16 edited.</p> <p>Laboratory instructions for 96 samples - Quality control: Hyperlink corrected.</p> <p>Laboratory instructions for 96 samples - plate layouts corrected.</p>

Version	Date	Description
1.1	2021-12-13	<ul style="list-style-type: none"> <li>Laboratory instructions for 96 samples - Prepare Sample Source Plate: information and tables added.</li> <li>Laboratory instructions for 96 samples - preparation for day 2: changed volume of MilliQ water to 30 mL.</li> <li>Laboratory instructions for 96 samples - Extension and pre-amplification (PCR1): "Vortex the PCR1 Mix thoroughly" removed.</li> </ul>
1.0	2021-12-01	New

**www.olink.com**

© 2024 Olink Proteomics AB.

Olink products and services are For Research Use Only and not for Use in Diagnostic Procedures.

All information in this document is subject to change without notice. This document is not intended to convey any warranties, representations and/or recommendations of any kind, unless such warranties, representations and/or recommendations are explicitly stated.

Olink assumes no liability arising from a prospective reader's actions based on this document.

OLINK, NPX, PEA, PROXIMITY EXTENSION, INSIGHT and the Olink logotype are trademarks registered, or pending registration, by Olink Proteomics AB. All third-party trademarks are the property of their respective owners.

Olink products and assay methods are covered by several patents and patent applications <https://www.olink.com/patents/>

1191, v4.0, 2024-04-16